IBM Storage Scale Container Native Storage Access 5.1.9





Tables of Contents

Overview	
What's new?	0
Supported features	1
Limitations	1
Planning	1
Proroquisitos	
Hardware requirements_	
Software requirements	
Deployment considerations	
Network and firewall requirements	 8
Container Network Interface (CNI) configuration	10
IBM Storage Scale container native and SELinux	11
Roles and personas	12
Container images	13
Air-gapped installs	14
Storage cluster	17
On-premise	17
Cloud	
Red Hat OpenShift Container Platform	
IBM Cloud Container Registry (ICR) pull secrets	20
Red Hat OpenShift configuration on-premise	20
Worker node configuration Infrastructure node configuration	21 22
Master node configuration (compact cluster)	22
Red Hat OpenShift service on AWS	23
Support matrix for IBM Storage Scale container native and ROSA	24
OpenShift configuration on AWS	25
Validating Red Hat OpenShift configuration	26
Installing the IBM Storage Scale container native operator and cluster	27
Labels and annotations	27
Install	28
Image pull secrets	29
Kubernetes resources	29
College	30
CallhomeRemoteCluster	35
Creating secrets for storage cluster GUI users	36
Configuring Certificate Authority (CA) certificates	38
	39
Filesystems	39
Encryption	41
Validating installation	43
Verifying the IBM Storage Scale container native cluster	43
Status and events	
Heing IDM Stayeds Scale CUI	
IBM Storage Scale container native GUI	45 46
	4C
Upgrading	46
Supported upgrade paths	46
Upgrading IBM Storage Scale container native	47
Post upgrade tasks	48
Configuring IBM Storage Scale Container Storage Interface (CSI) driver	49
Configuring storage class to use CSI driver	50
Managed CSI fields	50
Setting primary file set	51
Maintanana	
Shutting down a cluster	
IBM Storage Scale container native cluster and node maintenance	51
Red Hat OpenShift maintenance	
Starting the cluster after shutdown	52 53

Adding a new node to an existing cluster	53
IBM Storage Scale Storage cluster	54
Updating remote mount access key on IBM Storage Scale storage cluster	54
Updating authentication to the storage cluster	54
Cleanup	55
Removing applications	55
Cleanup Kubernetes resources	55
Filesystems	56
Remote clusters	56
Cluster	
Cleanup IBM Storage Scale CSI	57
Cleanup IBM Storage Scale container native	57
Cleanup Red Hat OpenShift nodes	57
Cleanup storage cluster	58
Cleanup on AWS ROSA	58
Monitoring	59
System monitor and Kubernetes readiness probe	59
Viewing and analyzing the performance data with the IBM Storage Scale bridge for Grafana	59
Support	60
Common issues_	
Known issues	62
Gathering data about your cluster	66
must-gather	67
Generating GPFS trace reports	67
Kernel crash dumps	
Troubleshooting	
Debugging the IBM Storage Scale operator	68
Debugging IBM Storage Scale deployment	69
Troubleshooting custom resources	70
Troubleshooting remote cluster	70
Debugging IBM Storage Scale Container Storage Interface (CSI) deployment	
Debugging PVC creation issue: PVC binding in pending state	72
Debugging OCP upgrade	
Identifying applications preventing cluster maintenance	
Recovery of IBM Storage Scale container native cluster after OpenShift node failure	
References	75
IBM Storage Scale	
Red Hat OpenShift or Kubernetes	


Overview

IBM Storage Scale container native is a containerized version of IBM Storage Scale.

IBM Storage Scale is a clustered file system that provides concurrent access to a single file system or set of file systems from multiple nodes. The nodes can be SAN attached, network attached, a mixture of SAN attached, and network attached, or in a shared-nothing cluster configuration. This enables high performance access to this common set of data to support a scale-out solution or to provide a high availability platform. For more information about IBM Storage Scale features, see Product overview in IBM Storage Scale documentation.

IBM Storage Scale container native allows the deployment of the cluster file system in a Red Hat OpenShift cluster. Using a remote mount attached file system, the container native deployment provides a persistent data store to be accessed by the applications through the IBM Storage Scale CSI driver by using Persistent Volumes (PVs). For more information, see IBM Storage Scale CSI documentation.



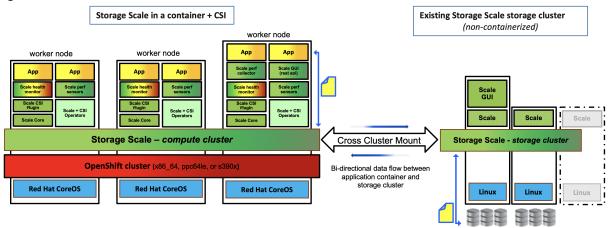

For more information about direct storage attachment, see <u>Deployment Considerations</u>

What's new?
Supported features

5

• Limitations

What's new?

The following enhancements are made in this release:

- Starting with the v5.1.9 documentation, all instructions listed refers to the v5.1.9.x branch in the GitHub repository: https://github.com/IBM/ibm-spectrum-scale-container-native. This means that using the steps in the documentation will always install the latest released version of v5.1.9. To install a specific version, replace the v5.1.9.x in the command GitHub URLs with the exact version number.
- Container Storage Interface (CSI) 2.10.4. For more information, see Summary of changes in IBM Storage Scale CSI documentation.
- Support for IBM Storage Scale Data Access Services (DAS) remains only with IBM Storage Scale container native v5.1.9.1. It is not supported on 5.1.9.4 and higher. If interested in running DAS with the latest IBM Storage Scale container native, or if you need instructions on how to install a supported version, send an email to: scale@us.ibm.com.
- Support for Red Hat OpenShift 4.12, 4.13 and 4.14 with IBM Storage Scale container native v5.1.9.x.
- Starting with IBM Storage Scale container native v5.1.9.3:
 - CPU and memory resource limits for core pods have different default values. For more information, see <u>Pod memory requests and limits</u>.
 - o CPU and memory resource limits for core pods can be modified. For more information, see <u>Cluster custom resource description</u>.

If the storage cluster is running a GUI high availability configuration, for example, having 2 or more GUI nodes that are installed, ensure that the storage cluster is running IBM Storage Scale v5.1.6.1 or higher before use with IBM Storage Scale container native and IBM Storage Scale CSI.

Supported features

IBM Storage Scale container native with Red Hat OpenShift Container Platform supports the following features:

- IBM Storage Scale node labels to establish node affinity.
- Automated client-only cluster creation
- Automated remote file system mount for IBM Storage Scale Storage cluster
- Integrated IBM Storage Scale Container Storage Interface (CSI) driver for application persistent storage
- Automated deployment of IBM Storage Scale Container Storage Interface (CSI) driver
- IBM Storage Scale container native client cluster node expansion on Red Hat OpenShift Container Platform
- · Cluster monitoring by using Red Hat OpenShift Container Platform liveness and readiness probe
- Call home
- Performance data collection
- Storage cluster encryption
- · Rolling upgrade
- · Automated IBM Storage Scale performance monitoring bridge for Grafana
- File audit logging (FAL)
- Compression
- · Quotas on the storage cluster
- · ACLs on the storage cluster
- · ILM support on the storage cluster
- · File clones on the storage cluster
- · Snapshots on the storage cluster
- TCP/IP network connectivity among cluster nodes
- Direct storage attachment on s390x, x86_64, and ppc64le (Power) servers
- Automatic quorum selection is Kubernetes topology aware.

IBM Storage Scale Data Access Services (DAS) supports the following features:

- S3 object access for Artificial Intelligence and analytics workloads
- Up to 10 TB single object size
- Up to 100 locally managed S3 accounts
- Up to 500 S3 buckets
- Up to 1,000,000 objects per S3 bucket
- Each IBM Storage Scale DAS cluster can be attached to one IBM Storage Scale storage cluster and to one IBM Storage Scale file system only.
- Each IBM Storage Scale storage cluster can be attached to one IBM Storage Scale DAS cluster only.

For more information, see IBM Storage Scale Data Access Services.

Limitations

- IBM Storage Scale container native currently supports only remote mount of the file system. It does not support local disks and NSD nodes.
- Deployment of IBM Storage Scale pods on master nodes is not supported with the exception of "compact" OpenShift clusters.
- Deployment of IBM Storage Scale pods on RHEL worker nodes is not supported.
- Deployment of IBM Storage Scale pods on nodes with ARM CPUs is not supported.
- Single node OpenShift clusters are not supported.

Scalability contraints

Table 1. Maximum Capacity Specification

•	• •
Description	Max supported
Number of worker nodes	128
Number of remote clusters	4
Number of remote file systems	16

Planning

The planning for IBM Storage Scale container native includes the following topics:

- Prerequisites
- Hardware requirements
- Software requirements
- <u>Deployment considerations</u>
- Network and firewall requirements
- Container Network Interface (CNI) configuration
- IBM Storage Scale container native and SELinux
- Roles and personas
- Container images
- Air-gapped installs

Prerequisites

The planning process to install the IBM Storage Scale on Red Hat OpenShift consists of many steps.

These steps are expand on previous steps and it is critical to follow the sequence defined in the following sections. Before you begin installation, there are several things that needs to be considered. The list of questions provided helps you to be prepared for the procedure.

- What version of Red Hat OpenShift Container Platform do you need?
- What are the hardware requirements?
- · Have the necessary ports been opened?
- Is the Red Hat OpenShift Container Platform cluster in a restricted network environment?
- What is the minimum level of IBM Storage Scale that is needed on the storage cluster?

Preparations for deploying the IBM Storage Scale container native cluster

The following section summarizes the prerequisites required before deploying the IBM Storage Scale container native cluster. All steps will be explained in more detail in the following chapters.

- Validate that the OpenShift cluster, or the node from where you are managing the OpenShift cluster, has access to the manifest files in IBM Storage Scale container native repository of GitHub. For more information, see IBM Storage Scale container native repository on GitHub.
 - GitHub YAML manifests are inline with the Installation steps and are either accessed directly or pulled through curl through an existing internet connection. If an air gapped environment is running, the manifest files must be made locally available for use.
- Validate and apply the configuration to the Red Hat OpenShift installation settings.
- Obtain IBM Cloud Container Registry entitlement key in order to access the container images of IBM Storage Scale container native.
- If you are in a restricted network environment, then mirror the container images of IBM Storage Scale container native into a site-managed private image registry.
- Create an OpenShift global pull secret for the image registry that the cluster uses (either IBM Cloud Container Registry or private image registry).

Deploying the IBM Storage Scale container native cluster

To deploy a cluster, complete the following steps:

- 1. Create the IBM Storage Scale container native and IBM Storage Scale CSI operators by deploying the operator installer file: install.yaml.
- 2. Download the sample cluster.yaml CR, make necessary change, and apply to the cluster.
 - Specify the IBM Storage Scale Edition in the license field.
 - Configure appropriate node selectors for the IBM Storage Scale container native deployment.
 - Configure host aliases or ensure that the proper DNS is configured for your environment to allow for communication to storage cluster.
 - · Configure Ephemeral Port Range, if necessary.
 - Enable the optional Grafana Bridge.
- 3. Download the sample callhome.yaml CR, make necessary changes, and apply to the cluster.
- 4. Download the sample <u>remotecluster.yaml</u> CR, make necessary changes, and apply to the cluster.
- 5. Download the sample <u>filesystem.remote.yaml</u> CR, make necessary changes, and apply to the cluster.
- 6. If accessing encrypted data on the storage cluster, download the sample encryptionconfig.remote.yaml CR, make necessary changes, and apply to the cluster.

- 7. Complete the storage cluster configuration.
 - a. Create a GUI user on the storage cluster with the ContainerOperator role.
 - b. Create a GUI user on the storage cluster with the CsiAdmin role.
 - c. Configure CSI prerequisites on storage cluster.
- 8. Create a secret using the storage cluster GUI user credentials for **ContainerOperator** GUI user in the **ibm-spectrum-scale** namespace.
- 9. Create a secret using the storage cluster GUI user credentials for CsiAdmin GUI user in the ibm-spectrum-scale-csi namespace.
- 10. Create a storage class to create volumes to use with your container native cluster.

Hardware requirements

The following sections describe hardware requirements to consider to deploy an IBM Storage Scale container native.

Network

- All nodes in the compute cluster must be able to communicate with all nodes in the storage cluster.
- A minimum of 10 Gb network is needed but 40 100 Gb is recommended.
- RDMA for InfiniBand or RoCE for Ethernet is not supported.

Worker node requirements

IBM Storage Scale takes at least 2 GiB per node. Therefore, 8 GiB or more total memory is recommended for worker nodes.

IBM Storage Scale container native supports x86_64, ppc64le, and s390x CPU architectures. All nodes in the Red Hat OpenShift cluster must have the same architecture. The ARM architecture is not supported.

Starting with IBM Storage Scale container native 5.1.9.1, the UBI 9 base image is used and it is based on RHEL 9. And as RHEL 9 no longer supports Power8, IBM Storage Scale container native also no longer supports Power8. For more information, see Minimum IBM Power requirements for OCP installation.

IBM Storage Scale container native deploys several pods in the cluster. The following table shows the resource consumption of those pods.

Pod	Where deployed	CPU request	Memory request	Storage	Notes
core (created with the k8s Node shortname)	Nodes that are labeled with nodeSelector in cluster CR	if >=1000mCPU, requests 25% of capacity. Override to "2" cpu in the sample CR client role	if >=2 GiB, requests 25% of capacity. Override to "4Gi" in sample CR in client role	config in /var (~25 GiB)	This is the pod that provides the file system service for the node. Is required to be deployed on all nodes where PVs are accessed from application pods. The CPU and memory requests can be customized in the cluster CR.
operator	Single Node	500mCPU	200 MiB		The controller runtime that manages all custom resources
gui	Two Nodes	630mCPU	1.25 GiB	Local PV for DB	The graphical user interface and ReST API
pmcollector	Two Nodes	120 mCPU	3-7GiB depending on cluster size	Local PV for DB	The performance collector database
grafana-bridge	Single Node	100mCPU	1 GiB		The bridge for accessing pmcollector from Grafana

Table 1. Hardware Requirements

The shown values are requests. For more information, see <u>Kubernetes resource management</u>. The limits are higher. This means that for CPU the pods might have bursts with more CPU usage at times where the CPU has free cycles. For memory, the pods can't exceed their request significantly. By default the core fs pods take 25% of the worker node capacity. This might be oversized in many applications. For more information about configuring the requests for both CPU and memory, see <u>Cluster Custom Resource</u>.

- * Allocating more resources to IBM Storage Scale results in better storage performance.
- * Allocating less allows more applications to be scheduled on a node.

For CPU, allocation can be reduced if the core fs pods consistently stay under the request. This can be monitored on the Red Hat OpenShift console. When going too low the filesystem daemon might starve on CPU cycles that destabilizes the whole cluster and can result in outages. For memory there is no real monitoring, allocating more will result in more data being cached which can boost performance. But this will be only seen indirectly by observing application performance.

The CPU request can be reduced under the 1000mCPU minimum. Your system might run fine with, for example, a 100mCPU. But, if a service ticket is opened for an issue that might be in any way that is related to this setting you will be asked to go up to 1000mCPU. The ticket is accepted only if the problem keeps showing up. Examples for related issues are, node expels, lag on PV creation in CSI, slow policy runs, bad performance, long servers, and so on. The Red Hat OpenShift console reports all worker nodes as overcommitted. The reason is that the CPU and memory limits of the pods add up to more than then total capacity of the node. This is normal and no reason for concern. Pods are scheduled based on their requests and the scheduler ensures that nodes will not be overcommitted in this regard. Higher limits allow pods to use resources that are free at the moment, but only the requested resources are guaranteed to them by Kubernetes. For more information about pod scheduling, see Kubernetes resource management

Pod memory request and limits

The following table shows the memory requests and limits configuration for each pod created.

Table 2. Pod memory requests and limits

Namespace	Pod name	Container	Memory request	limit	CPU request \	limit
ibm-spectrum-scale	Grafana Bridge	grafanabridg e	1000Mi \	4000Mi	100 m \	500 m
ibm-spectrum-scale	GUI	liberty	750Mi \	1000Mi	500 m \	2
ibm-spectrum-scale	GUI	postgres	250Mi \	500Mi	100 m \	1
ibm-spectrum-scale	GUI	sysmon	200Mi \	500Mi	20 m \	100 m
ibm-spectrum-scale	GUI	logs	20Mi \	60Mi	10 m \	100 m
ibm-spectrum-scale	PM Collector	pmcollector	5000Mi \	10000Mi	100 m \	500 m
ibm-spectrum-scale	PM Collector	sysmon	200Mi \	500Mi	20 m \	100 m
ibm-spectrum-scale	Core	gpfs	4Gi \	8Gi ¹	2\	42
ibm-spectrum-scale	Core	logs	20Mi \	60Mi	10 m \	100 m
ibm-spectrum-scale- operator	controller- manager	manager	200Mi \	400Mi	500 m \	1500 m
ibm-spectrum-scale-dns	CoreDNS	coredns	70Mi \	140Mi	50 m \	100 m

For more information, see <u>Requests and limits</u> in the Kubernetes documentation.

Software requirements

Use the following table to determine the software requirement levels for each release.

Table 1. Software Requirements

IBM Storage Scale Container Native	IBM Storage Scale CSI	Architecture	IBM Storage Scale Remote Storage cluster level	File system version cannot be newer than	OpenShift Container Platform level	Red Hat CoreOS	UBI level
5.1.5.0	2.7.0	x86_64, ppc64le, s390x	5.1.3.0+	29.00	4.9, 4.10, 4.11	4.9, 4.10, 4.11	8.6
5.1.6.0	2.8.0	x86_64, ppc64le, s390x	5.1.3.0+	30.00	4.9, 4.10, 4.11	4.9, 4.10, 4.11	8.7
5.1.7.0	2.9.0	x86_64, ppc64le, s390x	5.1.3.0+	31.00	4.10, 4.11, 4.12	4.10, 4.11, 4.12	8.7
5.1.9.1	2.10.0	x86_64, ppc64le, s390x	5.1.3.0+	33.00	4.12, 4.13, 4.14	4.12, 4.13, 4.14	9.2
5.1.9.3	2.10.1	x86_64, ppc64le, s390x	5.1.3.0+	33.00	4.12, 4.13, 4.14	4.12, 4.13, 4.14	9.3
5.1.9.4	2.10.2	x86_64, ppc64le, s390x	5.1.3.0+	33.00	4.12, 4.13, 4.14	4.12, 4.13, 4.14	9.3
5.1.9.5	2.10.3	x86_64, ppc64le, s390x	5.1.3.0+	33.00	4.12, 4.13, 4.14	4.12, 4.13, 4.14	9.4

^{1.} The memory limit is set to double of request memory by default but it can be set to another custom value into the Cluster CR definition but the new custom value must be at least twice as the memory requested value.

^{2.} The CPU limit is set to double of the CPUs of request by default. This can also be modified into the Cluster CR definition, but the new custom value must be at least twice as the CPU requested value.

IBM Storage Scale Container Native	IBM Storage Scale CSI	Architecture	IBM Storage Scale Remote Storage cluster level	File system version cannot be newer than	OpenShift Container Platform level	Red Hat CoreOS	UBI level
5.1.9.6	2.10.4	x86_64, ppc64le, s390x	5.1.3.0+	33.00	4.12, 4.13, 4.14	4.12, 4.13, 4.14	9.4
5.2.0.0	2.11.0	x86_64, ppc64le, s390x	5.1.3.0+	34.00	4.13, 4.14, 4.15	4.13, 4.14, 4.15	9.3
5.2.0.1	2.11.1	x86_64, ppc64le, s390x	5.1.3.0+	34.00	4.13, 4.14, 4.15	4.13, 4.14, 4.15	9.3
5.2.1.0	2.12.0	x86_64, ppc64le, s390x	5.1.9.0+	35.00	4.14, 4.15, 4.16	4.14, 4.15, 4.16	9.4

The storage cluster is supported to be down-level from the IBM Storage Scale container native cluster, but it is ideal that the versions match. CSI functions is highly dependent upon the IBM Storage Scale release, file system level, and version, which is installed on the storage cluster. If the storage cluster is running an earlier version, some functions might not be available. For more information about the minimum levels required for specific CSI functions, see *Table 1 in Hardware and Software Requirements* in IBM Storage Scale CSI documentation. For more information about compatibility and software matrix, see <u>Section 17.3</u> in the IBM Storage Scale FAQ documentation.

IBM Storage Scale Container Storage Interface (CSI)

IBM Storage Scale Container Storage Interface (CSI) will be installed along with IBM Storage Scale container native.

Storage cluster

- The storage cluster must be at IBM Storage Scale 5.1.3.0 or later.
- To take advantage of all functions provided by IBM Storage Scale Container Storage Interface Driver (CSI), the storage cluster is
 recommended to be at the latest versions configured with the latest file system level format. If using earlier versions, functional
 restrictions may apply. For more information, see <u>Hardware and software requirements</u> in IBM Storage Scale CSI documentation.

For more information, see <u>Upgrading multi-cluster environments</u> in IBM Storage Scale documentation.

Determine whether the storage cluster is running a GUI high availability configuration, for example, having 2 or more GUI nodes installed.

On the storage cluster, issue the following command. If two or more GUI nodes are displayed, then the storage cluster is running a GUI high availability configuration.

/usr/lpp/mmfs/gui/cli/lsnode

If the storage cluster is running a GUI high availability configuration, ensure that the storage cluster is running IBM Storage Scale 5.1.6.1 or higher before use with IBM Storage Scale container native and IBM Storage Scale CSI.

For more information, see Ensuring high availability of the GUI service in IBM Storage Scale documentation.

• Enable the --auto-inode-limit parameter on the remotely mounted file system.

For more information about auto-inode-limit parameter, see mmchfs command in IBM Storage Scale documentation.

The --auto-inode-limit option is available only with file system format level 28.00 or later.

Encrypted file systems are supported. Configure the EncryptionConfig custom resource with the necessary key client and key server
information. For more information, see EncryptionConfig.

External container images

There are some external container images that are required to run IBM Storage Scale container native. If running in an air gap environment, these images are required for successful deployment. For more information, see <u>Container images</u>.

Auxiliary helper applications

- curl is used to retrieve some files required for the IBM Storage Scale container native installation.
- jq 1.5+ is used to help parse and format JSON output.

Deployment considerations

Before deployment, make sure that you are aware of the Red Hat OpenShift version, cluster network, persistent storage, and the IBM Storage Scale storage cluster considerations.

Red Hat OpenShift cluster considerations

The following list includes the Red Hat OpenShift cluster considerations:

- A minimum configuration of three master nodes and three worker nodes, with a maximum of 128 worker nodes is required.
- Deploying IBM Storage Scale pods on master nodes is not supported. An exception is in a "compact" cluster configuration. For more information, see Master node configuration (compact cluster).
- · Single node Red Hat OpenShift clusters are not supported. Instead, access data on an IBM Storage Scale storage cluster through NFS.
- Red Hat Enterprise Linux™ CoreOS (RHCOS) restricts new file system mounts to the /mnt subtree. IBM Storage Scale mounts any file
 system under /mnt on the Red Hat OpenShift cluster regardless of the default mount point that is defined on the storage cluster.

Red Hat OpenShift cluster network considerations

The IBM Storage Scale container native comes with a collection of different pods. A subset of these pods can be considered regular pods that behave like typical application pods. Those pods are the operator, the GUI pods, and the performance data collector pods. The exception is what is referred to as the "core pods" as they provide the actual file system services. The core pods are not deployed by the Kubernetes scheduler through a regular DaemonSet. Instead, the IBM Storage Scale container native operator handles the management of those pods.

- The file system daemon inside the core pods requires a static IP address for communication between daemons on different nodes.
- All core pods must be able to communicate with each other through the chosen network.

There are two network configurations that can be employed: host network or container network interface (CNI) network. Only one network configuration can be chosen.

Host network

By default, the IBM Storage Scale pods use the host network. This is the simplest configuration but has some disadvantages:

- Using the host network breaks the network isolation that usually comes with containers. For example, any network port opened by IBM Storage Scale may conflict with a network port opened by another component on the host.
- Security features, like network policies, are not available for the host network.
- If the node has multiple network adapters, there is no way to select a different adapter. The host network always uses the network adapter that the worker node IP is assigned to.

Container Network Interface (CNI) network

As an alternative to host network, IBM Storage Scale can use a CNI network. There is more configuration effort to set up the CNI:

- In this configuration, core pods have an IP address on the usual Red Hat OpenShift SDN and another one on the CNI network.
 - Red Hat OpenShift SDN is used for communication with other pods.
 - o CNI network is used for communication between file system daemons, both inter-cluster and with the storage cluster.
- If the node is equipped with high-speed network, the CNI interface should use the high-speed network.
 - This is the daemon network where the file system I/O runs on. High bandwidth and low latency are highly beneficial for performance.
- The CNI network will be used exclusively by IBM Storage Scale and eliminates the potential for port conflicts with other components.
- Security features like network policies work on MACVLAN CNIs.
- The DNS must be configured properly to allow the worker nodes the ability to resolve the storage cluster nodes.
 - For more information, see <u>Host aliases</u>.

Advanced features of SR-IOV type CNIs, such as RDMA and GPUdirect, are not yet supported.

For more information about configuring CNI with IBM Storage Scale container native, see Container network interface (CNI) configuration.

Red Hat OpenShift cluster persistent storage considerations

The following list includes the Red Hat OpenShift cluster persistent storage considerations:

- The IBM Storage Scale pods use host path mounts to store IBM Storage Scale cluster metadata and various logs.
- The IBM Storage Scale container native operator creates two local PersistentVolumes (PVs) on two eligible worker nodes. At least 25 GB
 of free space must be available in the file system that contains the /var directory on all eligible worker nodes to avoid potential failures
 during the deployment. These PVs are created with the ReadWriteOnce (RWO) access mode.
- Both the host path mounts and local PVs are not automatically cleaned up when you delete the associated IBM Storage Scale container native cluster. You must manually clean these up. For more information about cleaning up the persistent storage, see <u>Cleaning up the worker nodes</u> and <u>Cleaning up IBM Storage Scale container native</u>
- IBM Storage Scale container native does not support the use of dynamically created or pre-created PVs.

Considerations for enterprise grade image registry


The following list includes the considerations for enterprise grade image registry:

- In a restricted network environment where the Red Hat OpenShift Container Platform cluster cannot pull IBM Storage Scale images from the IBM Container Repository, images must be mirrored to a production grade enterprise image registry that the Red Hat OpenShift Container Platform cluster can access.
- In a restricted network environment, there must be a node that can communicate externally and also with the target Red Hat OpenShift Container Platform cluster.
- Any registry that is used for hosting the container images of IBM Storage Scale container native must not be accessible to external users.
 Also, it must be restricted to the service account used for IBM Storage Scale container native management. All users and machines that are accessing these container images must be authorized per the IBM Storage Scale license agreement.

Considerations for direct storage attachment


The following list includes the considerations for direct storage attachment:

- Support for direct storage attachment on x86_64, ppc64le (Power), and s390x (IBM Z) servers. In direct storage attachment configuration, the worker nodes use the SAN fabric instead of the IBM Storage Scale NSD protocol for I/O traffic.
- If using x86_64 or ppc64le (Power) servers, it might be necessary to load multi-path drivers through Red Hat CoreOS before storage can be seen.

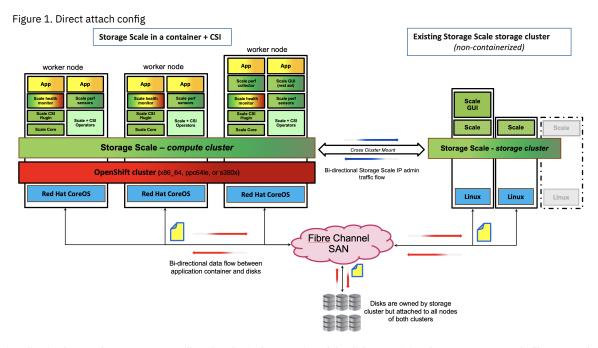

- The virtualization layers of an IBM Z server allow the physical connection of the disks containing the IBM Storage Scale file system data to both the storage cluster and the IBM Storage Scale container native cluster.
- For more information about setting up a direct storage attachment, see <u>Attaching direct storage on IBM Z</u> in IBM Storage Scale documentation.

Figure 2. Direct attach SystemZ

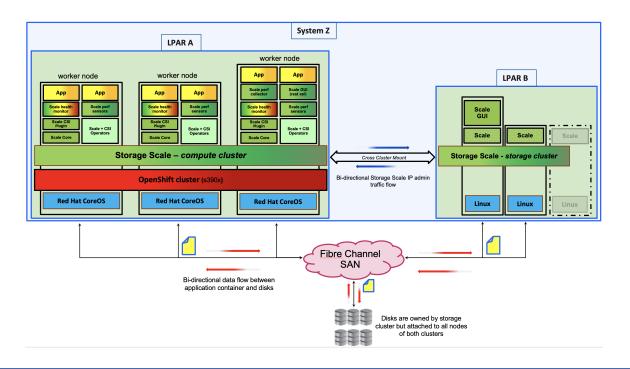

Network and firewall requirements

Introduction

It is best practice to restrict network traffic using firewalls. In particular with Red Hat OpenShift Container Platform, pods can talk to servers on the internet by default. This abets attacks where malicious code is sideloaded from the internet. Therefore, it is recommended to restrict any internet access from within the Red Hat OpenShift Container Platform cluster to required sites. See Red Hat OpenShift Container Platform documentation for details.

The following list covers solely the requirements of IBM Storage Scale container native and IBM Storage Scale CSI.

IBM Storage Scale uses several communication channels that need to be opened in the corresponding firewalls otherwise some or all functions might be broken. The channels can be categorized into three major groups:

- 1. Communication between pods inside a Red Hat OpenShift Container Platform cluster.
 - Communication inside Red Hat OpenShift Container Platform cluster is subject to firewall rules on worker node's kernels and/or network policies that are defined in Red Hat OpenShift Container Platform.
- 2. Communication between Red Hat OpenShift Container Platform cluster and storage cluster.
 - Communication with the storage cluster is in addition subject to the firewall that sits on the load-balancer in front of Red Hat OpenShift Container Platform.
- 3. Communication between Red Hat OpenShift Container Platform cluster and servers on the internet.
 - Communication with the internet is subject to the boundary firewall of the data center and the boundary firewall of the intranet.

Internal IBM Storage Scale container native core pod communication

IBM Storage Scale container native core pods use two network interfaces, an "admin" and a "daemon" interface. The "admin" interface is used for monitoring and management, while the "daemon" interface is used for file system I/O. In a default configuration, the pod is created with hostNetwork: true and both networks utilize the Kubernetes node internal network on the host and is exposed to the pod.

When using the default host networking, the networking requirements that are outlined must be satisfied and opened across the Kubernetes node internal network.

It is recommended to use Container Network Interface (CNI) driver for the daemon network instead of host networking. This allows for better security and isolation. If using CNI, only **Core Pod Daemon Network Requirements** need to be satisfied and the Admin network will use the default Red Hat OpenShift Pod SDN Network. For more information, see <u>Container network interface (CNI) configuration</u>.

Core pod admin network requirements

The following network requirements must be met when hostNetwork: true on the pod specification. This is the default deployment method when CNI is not used. These are only needed to be open between nodes within the local IBM Storage Scale container native cluster.

Table 1. Admin network requirements

Port number	Protocol	Use	Initiated direction
12345	TCP	Administrative SSH	All nodes to all nodes within the local cluster

Core pod daemon network requirements

Those are identical to the requirements for communication with a storage cluster. For more information, see <u>Daemon network requirements</u>.

Communication with storage cluster

Daemon network requirements

The following list of ports and protocols are used to communicate between all nodes within the IBM Storage Scale container native cluster and between nodes in any configured remote storage clusters. Each node acts as a server that may initiate connections to any other node. Ensure the list of ports and protocols are open for both inbound and outbound packet flows.

Table 2. Daemon network requirements

Port number	Protocol	Use	Initiated direction
1191	TCP	GPFS	All node to all node
	ICMP	GPFS	All node to all node
Configurable ephemeral port range	TCP	GPFS Policy Engine and compatibility with clusters less than 5.1.3	All node to all node

Ephemeral port ranges

Ephemeral ports are used by the GPFS Policy Engine, which is used by the CSI snapshot and compression features. When tscCmdAllowRemoteConnections=yes is configured in the Cluster CR, ephemeral port ranges are also used for communication and compatibility with remote clusters running IBM Storage Scale version 5.1.3 or less.

If ephemeral ports are configured on the remote storage cluster, ensure that they are also configured in the Cluster CR for the IBM Storage Scale container native deployment.

For more information on how to set ephemeral port ranges, see **Ephemeral port range**.

REST API access

The IBM Storage Scale container native core pods require name resolution to all storage cluster nodes, specifically the node's daemon node name. If these names cannot be configured in the environment's domain name service (DNS), then host aliases may be added in the Cluster CR . spec.daemon.hostAliases. This configuration adds these host aliases to the internal DNS managed by IBM Storage Scale container native and applies only to name resolution performed by the IBM Storage Scale container native core pods.

Table 3. REST API network requirements

Port number	Protocol	Use	Initiated direction
443	TCP	Storage cluster REST API	Pod network to storage cluster GUI nodes

Pod network encapsulates the requirement that IBM Storage Scale container native operator and IBM Storage Scale CSI operator and driver require the ability to reach the storage cluster GUI nodes REST API. These respective pods use the default pod network and may schedule to any node selected.

Name resolution between IBM Storage Scale container native and storage cluster

The IBM Storage Scale container native core pods require name resolution to all storage cluster nodes, specifically the node's daemon node name. If these names cannot be configured in the environment's domain name service (DNS), then host aliases may be added in the Cluster CR .spec.daemon.hostAliases. This configuration adds these host aliases to the internal DNS managed by IBM Storage Scale container native and applies only to name resolution performed by the IBM Storage Scale container native core pods.

Communication with the internet

Container registries

The images of IBM Storage Scale container native containers are located in the IBM Cloud Registry cp.icr.io.

Egress to these site is required unless the cluster is operator in airgap mode. For more information, see Disconnected installs.

Callhome

If Callhome functionality is enabled, ingress and egress need to be open to esupport.ibm.com (129.42.0.0/18). For more information, see <u>Firewall recommendations for call home</u>.

Encryption

If encryption is configured on the file system egress to the key servers is required. For more information, see Firewall recommendations for IBM Security Key Lifecycle Manager.

Table 4. Encryption network requirements

Port number	Protocol	Use	Service
9083	TCP	Initial setup	WebSphere Application Server
9443	TCP	Initial setup	Security Key Lifecycle Manager REST API
5696	TCP	Key retrieval	Security Key Lifecycle Manager KMIP API

Container network interface (CNI) configuration

IBM Storage Scale container native core pods uses two network interfaces, an "admin" and a "daemon" interface. The "admin" interface is used for monitoring and management, while the "daemon" interface is used for filesystem I/O. In a default configuration, both networks utilize the Kubernetes node internal network exposed on the host, and the pods are exposed to all host networking.

Configuring CNI provides advantages over the default configuration. The "admin" and "daemon" network interfaces become private to the IBM Storage Scale container native core pod. The "admin" interface moves to use the Kubernetes pod network, which includes security and isolation provided by Kubernetes and NetworkPolicies. The "daemon" interface, if configured by CNI, can be setup to be isolated, private, and high-speed.

When configuring custom network interfaces, CNI is the only supported method for IBM Storage Scale container native network interface. It offers enhanced security and isolation benefits beyond what configuring network interfaces directly on the host provides.

How to configure CNI

1. Configure OpenShift for CNI:

To configure OpenShift for CNI, follow the steps documented by Red Hat for adding CNI networks.

- If the node has only a single physical network attachment, then the network adapter needs to be shared between networks. There are several CNI flavors that allow this: Bridge, IPVLAN and MACVLAN.
 - The MACVLAN CNI supports also network policies and should be the default choice.
- If the node has multiple physical network attachments and you want to dedicate one of the physical networks to IBM Storage Scale, select host-adapter CNI. It will map a physical network adapter into a pod, making it inaccessible to the host and other pods.
- SR-IOV surpasses the capabilities of host-adapter. For more information, see About Single Root I/O Virtualization (SR-IOV) hardware networks in Red Hat OpenShift documentation. Advanced features like RDMA, GPUdirect and bonding of network ports are accessible via **sr-iov** hardware network.

Features: RDMA, GPUdirect, and bonding of network ports are not currently supported by IBM Storage Scale. Also sr-IOV allows to partition the hardware adapter and hand those partitions to different pods. Configuration is more complex compared to other CNIs and choice of supported network adapters is limited. As of today, IBM Storage Scale has not been tested with SR-IOV.

- The IP address mapping is required to be static. This can be achieved by setting up static IPs or by configuring DHCP static mapping. For remote mount of a filesystem from a IBM Storage Scale storage cluster, this network must be routed to the storage cluster's daemon network.
- 2. Configure each of the OpenShift nodes that comprise the IBM Storage Scale container native cluster:

a) Create runtime configuration node annotation that has the CNI definition. The specific node annotations for IBM Storage Scale is scale.spectrum.ibm.com/daemon-network. The format of the CNI annotation value is formed in the same format of a single network as defined in the format specified by k8s.v1.cni.cncf.io/networks.

Example:

```
annotations:
scale.spectrum.ibm.com/daemon-network: |-
        "name": "daemon-network",
        "mac": "22:22:0a:11:37:b2",
        "ips": [
            "10.17.99.63"
```

b) ips field must be set as this is the static IP desired for this CNI network. c) mac field may be set if you use dhcp ipam (backed by a statically mapped dhcp). ips still must be set in addition to mac.

This might seem redundant, but IBM Storage Scale container native uses ips to set up its own name resolution. This process is asynchronous and independent of the pod actually being created. If ips was not set, then dhcp address would not be discovered until after pod creation.

IBM Storage Scale container native and SELinux

IBM Storage Scale container native offers a default for Container Storage Interface (CSI) volume attachment behavior for Security-Enhanced Linux (SELinux) labels. This default is introduced beginning with IBM Storage Scale container native 5.1.7.0 release.

What is SELinux?

SELinux, or Security-Enhanced Linux, defines access controls for the applications, processes, and files on a system. It uses security policies, which are a set of rules that tell SELinux what can or cannot be accessed, to enforce the access allowed by a policy.

For more information about SELinux, see What is SELinux? in Red Hat Documentation.

How is SELinux controlled in Kubernetes?

Container processes are started with the SELinux context in the .spec.securityContext.seLinuxOptions field, while CSI-based volumes have all their files labeled to match on pod attachment during container creation.

SELinux Multi-Category Security (MCS) is used in Red Hat OpenShift. By default, containers have their SELinux level set to values annotated on the namespace. The category defaults annotated on the namespace are assigned automatically by OpenShift to limit overlap.

Red Hat OpenShift is based on Kubernetes.

Problems with SELinux relabel on volume attach

When attaching CSI-based volumes to pods in Kubernetes the container-runtime SELinux relabels all files in the volume. This is problematic for shared filesystems that support SELinux, such as the IBM Storage Scale filesystem.

Relabeling on volume attachment moves the security control to the consumer of file volumes instead of the owner of the files. In classic shared filesystem environments, such as IBM Storage Scale, access is controlled by node administrators and file owners. In Kubernetes, volume access is isolated to a namespaced volume claim and controlled using Kubernetes role-based access control (RBAC). While in classic shared filesystem environments, such as IBM Storage Scale, access is controlled by node administrators and file owners. This Kubernetes behavior makes it very difficult to maintain access controls for volumes and files that are shared outside of Kubernetes. This is because Kubernetes ignores and overwrites any SELinux security isolation set by external administrators.

In addition, relabeling all files in a volume is a non-trivial operation, which may generate a large I/O load on the backend storage system. This introduces a performance and denial of service concern. Volumes with too many files, or shared volumes that are attached concurrently, may easily swamp the storage subsystem and cause cascading pod creation timeouts.

Upstream Kubernetes limitation for SELinux relabel

The SELinux relabel issue is not unique to IBM Storage Scale. Upstream Kubernetes does not give CSI volume driver implementations control of SELinux relabel on volume attachment.

Legacy in-tree volume drivers, such as the in-tree NFS volume driver, have the ability to control SELinux relabeling. However, legacy in-tree volume drivers are deprecated.

In Red Hat OpenShift, the container-runtime that performs the SELinux relabel will skip the relabeling if the container SELinux context is set to spc_t, which is the super privileged container. It is an uncontained type and may access any file on the system allowed by standard file permissions.

Default volume attachment behavior by IBM Storage Scale container native

To prevent Kubernetes from relabeling SELinux file labels, IBM Storage Scale container native by default will mount the filesystem with a container permissive context. This disallows the <code>security.selinux</code> label from being set, and all files inside the filesystem will be considered to have the context defined on the filesystem mount. By default that context would allow all containers running as <code>container_t</code> SELinux type to access files on the filesystem allowed by standard file permissions. By default, the mount context is set to <code>system_u:object_r:container_file_t:s0</code>.

Comparing SELinux relabel on attach and SELinux mount context

Security considerations

Setting a container permissive SELinux mount context or doing an SELinux relabel on volume attachment have similar access control within Kubernetes. Any container that can claim a volume may access its files.

However, if a process could escape a container or the host was able to be compromised, then any container_t constrained context would have access to the filesystem from a SELinux access perspective. Standard linux file permissions would still prevent access. This means containers that run within the "restricted" SecurityContextConstraint defined by OpenShift would not be able to access files in a volume that it did not explicitly share.

If a volume is shared with Kubernetes from an external application, then SELinux relabeling breaks SELinux security isolation managed externally. SELinux relabel on attach allows a volume consumer to ignore and overwrite SELinux labels, potentially exposing the files to other external systems. Setting the SELinux mount context will only allow the external SELinux labels to be ignored within the confines of the Kubernetes cluster.

Performance considerations

Since SELinux mount context disallows SELinux relabeling, volume attachments to pods do not generate extra I/O load and will attach faster than if SELinux relabeling is done.

If SELinux relabeling occurs, it must complete within a minute or the container creation will timeout and fail. Multiple relabel operations occurring concurrently are more likely to trigger timeout and failure. This cascading failure may only be exposed due to wider outages (node, cluster, lab), or maintenance.

External access considerations

External access refers to any components outside of the IBM Storage Scale container native cluster. This includes the storage cluster that is remotely mounted to the IBM Storage Scale container native cluster.

SELinux mount context means all new files are created without SELinux labels, and are considered unlabeled_t. This would include files created by application containers using IBM Storage Scale container native volumes. Generally, access to unlabeled_t files is only allowed by uncontained or more privileged process contexts. To access the unlabeled files, the external applications outside of Kubernetes must be given access to unlabeled_t via SELinux user policies, the files must be labeled manually, or the mount used by the application has a valid SELinux context configured.

The behavior without mount context, which does an SELinux relabel of all files, is similar in that the SELinux context of the container should be configured to match what is desired externally, or the external application should be granted access to files created by the container SELinux context.

How to change mount context

The mount context may be set on the Filesystem kind. This applies to all applications using volumes within the filesystem. For more details, run oc explain fs.spec.seLinuxOptions command.

When changing the SELinux context, applications with ReadWriteMany volumes running on nodes with mixed SELinux contexts may experience "Permission Denied" errors. Applications running on nodes with differing SELinux contexts may not have access to each other's files during the duration of the SELinux context update.

Changing the fs.spec.seLinuxOptions field of a Filesystem kind will cause pods to restart, and the restart of the pod will cause a reboot of the node itself. Ensure that the proper maintenance window and precautions, similar to upgrade, have been taken prior to changing this field.

spec: seLinuxOptions: user: <user> role: <object> type: <type> level: <level>

Legacy relabel on attach behavior

Earlier behavior of relabel on attach is considered legacy and the support is limited for it. If this behavior is required, contact IBM support.

Related links

- Red Hat solution pods fail to start due to volumes with high volume counts in Red Hat Openshift
- Kubernetes Enhancements 1710 Speed up SELinux volume relabeling using mounts
 - https://github.com/kubernetes/enhancements/issues/1710
- Red Hat OpenShift Understanding host and VM security
- Red Hat OpenShift and SELinux

Roles and personas

Different roles, cluster roles, and levels of access are needed to deploy a fully functioning IBM Storage Scale container native cluster.

Personas

Red Hat OpenShift cluster administrator

A user with cluster administrator privileges needs to deploy the IBM Storage Scale container native cluster. Cluster admin privileges are needed in order to create higher privilege artifacts such as:

- Namespaces
- Custom Resource Definitions
- · Cluster Roles and Cluster Role Bindings
- Security Context Constraints

By having the OpenShift cluster administrator execute the cluster deployment, the operator pod can be configured in a more restricted manner with minimal privilege.

IBM Storage Scale Storage cluster administrator

A user with privilege and access to configure the existing IBM Storage Scale storage cluster for remote access is also required for a successful deployment of an IBM Storage Scale container native cluster. Since the container native cluster utilizes remote mounts, the storage cluster admin must be able to execute commands against the storage cluster. For more information, see IBM Storage Scale storage cluster.

Lab administrator

A user with access to customer infrastructure and network is required to ensure a successful IBM Storage Scale container native cluster deployment. All OpenShift nodes that comprise the IBM Storage Scale container native cluster must be able to communicate with the remote IBM Storage Scale storage cluster. This may require a Lab Administrator to tune the customer network firewall to allow such communications. For more information, see Firewall recommendations.

Operator permissions

The IBM Storage Scale container native operator is a cluster-scoped operator. The operator watches all namespaces on the OpenShift cluster it is deployed into. Since the operator is cluster scoped, it requires access to cluster level resources to successfully deploy. Access to cluster level resources is handled through a cluster role that is deployed via RBAC YAML files. The cluster role is bound to the custom ibm-spectrum-scale-operator ServiceAccount, which the operator uses to create the IBM Storage Scale container native cluster.

To view the permissions of the operator, use the following query on a system that has a deployed container native operator.

oc describe clusterrole ibm-spectrum-scale-operator

This command will list out every resource the operator has access to and what it can do with them.


Roles

Once a IBM Storage Scale container native cluster is operational, users can authenticate to the IBM Storage Scale container native GUI via existing OCP roles. For more information, see OpenShift users.

Container images

The container images are required for the successful deployment of IBM Storage Scale container native. All images required for the deployment of IBM Storage Scale container native cluster are sourced from the IBM Container Repository.

Figure 1. Dependent images available in ICR

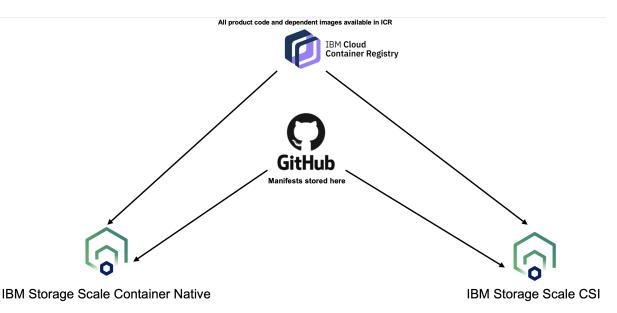

It is recommended to use the latest fixpack release available.

See Container image list for IBM Storage Scale container native on GitHub for the container image digests.

Air-gapped installs

In production, it is common to have a cluster that does not have internet access. If your Red Hat OpenShift Container Platform cluster is airgapped (otherwise known as offline or disconnected), you can install IBM Storage Scale container native by mirroring images. These tasks must be ran by a Red Hat OpenShift administrator.

A bastion host is a device that has access to both the public internet and the network-restricted environment where a local registry and Red Hat OpenShift Container Platform clusters reside. Using the bastion host, you can mirror your images directly to the local registry.

You need to do the Air gap setup if the worker nodes are not able to access the repository due to network and firewall restrictions.

Prerequisites

- A production-grade Docker V2 registry that is available and accessible from the OpenShift Container Platform cluster nodes such as Quay Enterprise, JFrog Artifactory, or Docker Registry. The Red Hat OpenShift Internal Registry is not supported.
- A bastion node that:
 - Access to the public internet.
 - Access to the network-restricted environment where the local registry exists.
 - Access to the entitled registry: icr.io:443, cp.icr.io:443.
 - o skopeo command is installed.
- Access to the Red Hat OpenShift Container Platform cluster as a user with the cluster-admin role.

Do not use Red Hat OpenShift internal image registry as your local registry. The Red Hat OpenShift registry does not support multi-architecture images or path separators in the image name.

Create an ImageContentSourcePolicy resource

Create a ImageContentSourcePolicy resource on your Red Hat OpenShift cluster to enable the redirection of requests to pull images from a repository on a mirrored image registry. Complete the following steps from the bastion host:

1. Create the sample registrymirror.yaml. Edit and replace example.io/<path_to_images> to match the path structure of your internal image registry.

```
cat << EOF > registrymirror.yaml
apiVersion: operator.openshift.io/vlalphal
kind: ImageContentSourcePolicy
metadata:
   name: icr-mirror
spec:
   repositoryDigestMirrors:
   - mirrors:
   - example.io/<path_to_images>
```

```
source: cp.icr.io/cp/spectrum/scale
- mirrors:
    - example.io/<path_to_images>
    source: icr.io/cpopen
EOF
```

Do not prefix mirrors with http://orhttps:// and make sure that there is no trailing / character.

2. Apply the sample to create an ImageContentSourcePolicy named icr-mirror:

```
oc apply -f registrymirror.yaml
```

3. Verify that the ImageContentSourcePolicy resource is created:

```
oc get imageContentSourcePolicy
```

4. This update is rolled out to all nodes. Verify your cluster node status and wait for all nodes to be updated before proceeding:

```
oc get MachineConfigPool
```

For more information, see Mirroring the OpenShift Container Platform image repository in Red Hat OpenShift documentation.

Mirror the images

Mirror the images by copying images from the source registry to the internal image registry.

Complete the following steps from the bastion node:

1. Log in to the IBM Entitled Container Registry with the **skopeo** command:

```
skopeo login cp.icr.io
```

2. Log in to the internal image registry with the skopeo command:

```
skopeo login example.io
```

3. Use skopeo to copy the images from the IBM Entitled Container Registry to your internal image registry.

The image listing for each release is available on GitHub. See <u>Container image list for IBM Storage Scale container native</u> in the GitHub repository.

Copy the air-gapped images from GitHub to a file called images.txt. You can use the following helper script to get started in creating the skopeo copy commands to run:

```
# Set the INTERNAL registry name
export INTERNAL=example.io
for image in `cat images.txt | grep -v \#`; do
    if [[ $image == *"cpopen"* ]]; then
        echo "skopeo copy --all docker://${image} docker://$INTERNAL/${image#*icr.io/}"
    else
        echo "skopeo copy --all docker://${image} docker://$INTERNAL/${image#*cp.icr.io/}"
    fi
done
```

The helper script is provided as an example. Use at your own risk.

A generic skopeo copy command is:

```
skopeo copy --all docker://<source image registry>/<image> docker://<internal image registry>/<image>
```

For more information, see **Skopeo Copy to the Rescue**.

4. Log out of the IBM Entitled Container Registry by entering the skopeo command.

```
skopeo logout cp.icr.io
```

5. Log out of your internal image registry by entering the **skopeo** command.

```
skopeo logout example.io
```

Red Hat OpenShift Container Registry pull secret

For images to be properly pulled at the pod level, the Red Hat OpenShift global pull secrets must be modified to contain credentials to access your internal Container Registry.

Complete the following steps:

1. Create a base64 encoded string of the credentials used to access your internal Container Registry.

The following example uses example.io/subdir as the internal Container Registry.

• Use the credentials to access your example.io/subdir internal Container Registry.

```
echo -n "<username>:<password>" | base64 -w0
```

2. Create an authority.json to include the base64 encoded string of your credentials. Use your username and password to access the internal Container Registry example.io/subdir.

```
"auth": "<base64 encoded string from previous step>",
"username":"<example.io username>",
"password":"<example.io generated entitlement key>"
}
```

3. Enter the following command to include the authority.json as a new authority in your .dockerconfigjson and store it as temp_config.json:

If the internal Container Registry is example.io/subdir, use example.io as the input key for the contents of authority.json.

```
# Set the INTERNAL registry name
export INTERNAL=example.io

oc get secret/pull-secret -n openshift-config -ojson | \
jq -r '.data[".dockerconfigjson"]' | \
base64 -d - | \
jq --arg key $INTERNAL '.[] | .[$key] += input' - authority.json > temp_config.json
```

This command is supported by jq version 1.5 or higher.

• Enter the following command to verify that your authority credentials were created in the resulting file:

```
cat temp config.json
```

The content of temp_config.json displays all your existing credentials for global pull secrets with example.io appended at the end:

```
# cat temp_config.json
{
    ...
    ...
    "example.io": {
        "auth": "<base64 encoded string created in previous step>",
        "username": "<example.io username>",
        "password": "<example.io password>"
    }
}
```

4. Apply the pull secret configuration to the Red Hat OpenShift cluster.

```
oc set data secret/pull-secret -n openshift-config --from-file=.dockerconfigjson=temp_config.json
```

5. Verify that your pull-secret is updated with your new authority, enter the following command and confirm that your authority is present:

```
oc get secret/pull-secret -n openshift-config -ojson | \
jq -r '.data[".dockerconfigjson"]' | \
base64 -d -
```

6. This update is rolled out to all nodes. Verify your cluster node status and wait for all nodes to be updated before proceeding:

```
oc get MachineConfigPool
```

7. Remove the temporary files that were created.

```
rm authority.json temp_config.json
```

Testing the pull of images from the mirrored registry

Complete the following steps from the bastion node:

1. Pick a worker node from oc get nodes and start a debug pod:

```
oc debug node/<worker node>
```

2. When you see a prompt, use host binaries by entering the chroot /host command.

```
# oc debug node/worker0.example.com
Starting pod/worker0examplecom-debug ...
To use host binaries, run `chroot /host`
```

```
Pod IP: 12.34.56.78

If you don't see a command prompt, try pressing enter.
# chroot /host
```

3. Use the **podman login** command to authenticate your mirrored image registry.

```
podman login example.io
```

4. Attempt to pull one of the images from the source image registry by using podman. The Red Hat OpenShift cluster must be able to redirect the request from the external image registry to the internal image registry and successfully pull the image.

```
podman pull cp.icr.io/cp/spectrum/scale/ibm-spectrum-scale-gui@sha256:dc691517c5eec21761ce31327f06f7631f77b59926bc2464673403053b610a7d
```

A valid image from the image.txt can be used here to verify that things are working.

5. Verify that the image is pulled.

```
# podman images | grep cp.icr.io/cp/spectrum/scale/ibm-spectrum-scale-gui
cp.icr.io/cp/spectrum/scale/ibm-spectrum-scale-gui <none> 9c215ae62f37 22 hours ago 851 MB
```

Storage cluster

IBM Storage Scale container native supports remote mounting filesystems running in the following scenarios.

- On-premise
- Cloud

On-premise

Some additional tasks need to be performed on the IBM Storage Scale storage cluster running on-premise.

IBM Storage Scale storage cluster

The operators of IBM Storage Scale container native and IBM Storage Scale CSI interact with the storage cluster through ReST API (which is part of the GUI stack). To enable this, user IDs need to be created on the storage cluster GUI. There are tailored roles that grant those user IDs only the operations needed to provide their functionality. In addition, some settings on the cluster and the filesystem are required for interoperability with CSI.

If the storage cluster is running a GUI high availability configuration, for example, having 2 or more GUI nodes installed, ensure the storage cluster is running IBM Storage Scale 5.1.6.1 or higher prior to use with IBM Storage Scale container native and IBM Storage Scale CSI.

Creating container operator and CSI users

1. To create container native operator GUI user, enter the following command:

```
/usr/lpp/mmfs/gui/cli/mkuser cnsa_storage_gui_user -p cnsa_storage_gui_password -g ContainerOperator
```

By default, user passwords expire after 90 days. If the security policy of your organization permits it, use the -e 1 option on the mkuser command to create a user with a password that does not expire.

2. To create the CSI GUI user, enter the following commands:

```
/usr/lpp/mmfs/gui/cli/mkuser csi storage gui user -p csi storage gui password -g CsiAdmin
```

By default, user passwords expire after 90 days. If the security policy of your organization permits it, use the -e 1 option on the mkuser command to create a user with a password that does not expire.

The -e 1 parameter is only available for IBM Storage Scale storage cluster 5.1.1.0 or later.

To update the passwords, see <u>Updating authentication to the storage cluster</u>

Storage cluster configuration for Container Storage Interface (CSI)

Complete the following steps on the storage cluster to ensure the IBM Storage Scale CSI driver can operate successfully:

1. Ensure that the perfileset quota on the file systems used by IBM Storage Scale Container Storage Interface driver is set to No.

The IBM Storage Scale Container Storage Interface driver will create a large number of filesets (one per PV). Tracking user and group quotas on a per-fileset basis will significantly increase the overhead of quota management. As a result, the file system performance may suffer.

```
mmlsfs fs1 --perfileset-quota
```

2. Enter the following command to enable the Quota in the file systems:

The IBM Storage Scale Container Storage Interface driver translates capacity of persistent volumes to fileset quotas. For this to work, quotas are required to be enabled in the file system.

```
mmchfs fs1 -Q yes
```

Enter the following comnd to verify quota is enabled:

```
mmlsfs fs1 -Q
```

3. Enable the quota for root user by entering the following command:

On Kubernetes, the containers may run as root, so ensure that quotas are enforced for the root user as well.

```
mmchconfig enforceFilesetQuotaOnRoot=yes -i
```

4. Ensure that the controlSetxattrImmutableSELinux parameter is set to "yes" by entering the following command:

Kubernetes does not honor immutability of files/directories when setting SELinux labels. This creates issues, for example, with the immutable .snapshot directory.

```
mmchconfig controlSetxattrImmutableSELinux=yes -i
```

5. Enable filesetdf of the file system by entering the following command:

IBM Storage Scale Container Storage Interface driver will only be able to report free space on persistant volumes if filesetdf is set correctly.

```
mmchfs fs1 --filesetdf
```

6. IBM Storage Scale Container Storage Interface driver has no information about the number of inodes a persistent volume will consume.

Therefore, corresponding independent filesets are created with default values for maxIndoes. To enable automatic expansion of the inode space so persistent volumes do not run out of inodes, enter the following command:

```
mmchfs fs1 --auto-inode-limit
```

The --auto-inode-limit option is available only with filesystem format level 28.00 or later. Enable auto-inode-limit as soon as the filesystem format level is updated to 28.00 or later. On older filesystem levels the administrator of the storage cluster needs to manually increase the inode limit when warnings for low inodes are raised by the health monitoring.

For more information about auto-inode-limit parameter, see mmchfs command in IBM Storage Scale documentation.

Configure cluster profile with tscCmdAllowRemoteConnections

Starting with version IBM Storage Scale and IBM Storage Scale container native 5.1.3, the tscCmdAllowRemoteConnections configuration is recommended to be set to no. If the storage cluster and all client clusters (including IBM Storage Scale container native) are at versions >= 5.1.3, it is recommended to set this value to no. However, if any version is < 5.1.3, tscCmdAllowRemoteConnections must be set to yes on the storage cluster and client clusters to successfully communicate between the clusters.

Use the following table as a reference.

Table 1. tscCmdAllowRemoteConnections configuration

Storage cluster version	IBM Storage Scale container native version	${\tt tscCmdAllowRemoteConnections}$
< 5.1.3	< 5.1.3.0	yes
>= 5.1.3	< 5.1.3.0	yes
>= 5.1.3	>= 5.1.3.0	no

- To change this value on the storage cluster, run: mmchconfig tscCmdAllowRemoteConnections='yes|no'.
- To change this value on the IBM Storage Scale container native cluster, set tscCmdAllowRemoteConnections: yes|no in the clusterProfile section of the cluster spec:

```
kind: Cluster
metadata:
name: ibm-spectrum-scale
spec:
...
daemon:
```

```
...
clusterProfile:
tscCmdAllowRemoteConnections: "yes"
```

For more information to configure the clusterProfile section of the cluster spec, see Cluster profile.

For more information about all IBM Storage Scale services, see <u>Securing the IBM Storage Scale system using firewall</u> in IBM Storage Scale documentation.

Cloud

AWS storage cluster

IBM Storage Scale container native with Red Hat OpenShift Service on AWS (ROSA) provides a highly scalable and performant solution for containerized applications. You can use the IBM Storage Scale Storage cluster on public clouds (such as AWS) to store its persistent data. IBM Storage Scale storage clusters on public clouds can be deployed and managed with the cloudkit CLI. For more information, see Cloudkit in IBM Storage Scale documentation.

cloudkit is included in the IBM Storage Scale Self-Extracting (SE) package and enables users to deploy IBM Storage Scale clusters across multiple cloud providers (currently limited to AWS), providing deployment topology flexibility. cloudkit helps:

- Reduce the complexity and time that is needed to set up the storage cluster.
- · Offers the ability to configure various cluster parameters, such as disk type, instance type, and network configurations.
- Offers the ability to integrate with other IBM Storage Scale features, such as data replication, data tiering, and data encryption.

Considerations

Consider the list:

- Understand the requirements in terms of performance, scalability, data availability, and data protection.
- Consider the structure of your storage, including the number of storage nodes, the file system size, and the number of replicas you want to maintain.
- ROSA and cloudkit both use Multi-Availability Zone (AZ) to ensure resiliency, but in Multi-AZ mode, the inter-AZ network limit constrains
 the throughput.
- Review the AWS quota limits to ensure that your existing Virtual Private Cloud (VPC) has enough free IP addresses to accommodate both ROSA and cloudkit. If you are planning to create a new VPC, you should plan the network to accommodate the IP requirements for both services.
- Users have the flexibility to start with either ROSA in new VPC mode and cloudkit in existing VPC mode (or) cloudkit in new VPC mode and ROSA in existing VPC mode, depending on the requirements.
- For optimal performance, choose a storage cluster deployment within the same subnet that is in use by the ROSA, providing low latency and higher throughput.

 $The following \ tasks \ assume \ that \ the \ installation \ of \ IBM \ Storage \ Scale \ container \ native \ on \ AWS \ ROSA \ is \ complete.$

Deploy storage cluster

Use the cloudkit command to deploy the storage cluster.

cloudkit create cluster

cloudkit provides various deployment profiles, including Throughput-Performance-Persistent-Storage, Throughput-Performance-Scratch-Storage, and Balanced.

If you are deploying to a Single AZ, it is advisable to use the **Throughput-Performance-Persistent-Storage** profile. For multi-AZ, use the **Balanced** profile.

Do not use the **Throughput-Performance-Scratch-Storage** profile for IBM Storage Scale container native workloads. This profile uses instance storage and results in data loss when storage nodes are shut down.

Details of the cluster can be viewed by using the describe option:

cloudkit describe cluster

Perform grant filesystem operation

cloudkit performs setting up security rules for data access and exchange between the ROSA worker security group and storage cluster. It performs the prerequisite configurations such as creating users in the ContainerOperator and CsiAdmin groups on the storage cluster.

Use the cloudkit command to simplify the data management across multiple IBM Storage Scale container native clusters.

cloudkit grant filesystem

Details of the file system access granted by cloudkit can be viewed by using the describe option:

cloudkit describe grant

Perform revoke filesystem operation

If the IBM Storage Scale container native is uninstalled, revoke the access to the file system by using the following command:

cloudkit revoke filesystem

Delete storage cluster

The following action cannot be undone and will destroy all scale instances and wipe the disks that are used for the file system. Take the appropriate data backups before proceeding, failure to do so will result in permanent loss of data.

Use the following cloudkit command to delete the storage cluster:

cloudkit delete cluster

Red Hat OpenShift Container Platform

Refer to the following sections to help prepare your Red Hat OpenShift environments.

- IBM Cloud Container Registry (ICR) pull secrets
- On-premise
 - Worker node configuration
 - Master node configuration (compact cluster)
 - Infrastructure node configuration
- Red Hat OpenShift service on AWS
 - o Support matrix for IBM Storage Scale container native and ROSA
 - o OpenShift Configuration on AWS
- Validating Red Hat OpenShift configuration

IBM Cloud Container Registry (ICR) pull secrets

IBM Storage Scale container native images are hosted in the IBM Cloud Container Registry. Obtain an entitlement key from <u>IBM container software library</u>.

Entitlement keys determine whether the IBM Storage Scale operator can automatically pull the IBM Storage Scale container native images. Image pull failures may occur due to an invalid entitlement key or a key belonging to an account that does not have valid entitlement.

Adding IBM Cloud Container Registry credentials

For images to be properly pulled at the pod level, the Red Hat OpenShift global pull secrets must be modified to contain credentials to access the IBM Cloud Container Registry.

The following steps apply to clusters that can directly access IBM Cloud Container Registry. For air gap installs, see Disconnected installs

- 1. Create a base64 encoded string of the credentials used to access the image registry.
 - For using IBM Cloud Container Registry, the credentials must use the op user along with the entitlement key.

```
echo -n "cp:REPLACE_WITH_GENERATED_ENTITLEMENT_KEY" | base64 -w0
```

2. Create an authority.json to include the base64 encoded string of your credentials, the fixed username cp (used to access the cp.icr.io repository), and the entitlement key for the IBM Cloud Container Registry.

```
"auth": "REPLACE_WITH_BASE64_ENCODED_KEY_FROM_PREVIOUS_STEP",
"username":"cp",
"password":"REPLACE_WITH_GENERATED_ENTITLEMENT_KEY"
}
```

3. Enter the following command to include the authority.json as a new authority in your .dockerconfigjson and store it as temp_config.json:

Using the IBM Cloud Container Registry as the authority, use cp.icr.io as the input key for the contents of authority.json.

```
oc get secret/pull-secret -n openshift-config -ojson | \
jq -r '.data[".dockerconfigjson"]' | \
base64 --decode | \
jq '.[]."cp.icr.io" += input' - authority.json > temp_config.json
```

This command is supported by jq 1.5.

• Verify that your authority credentials are appended at the end of the file:

4. Use the contents of the temp_config.json file, and apply the updated config to the Red Hat OpenShift cluster.

```
oc set data secret/pull-secret -n openshift-config --from-file=.dockerconfigjson=temp_config.json
```

To verify that your pull-secret is updated with your new authority, issue the following command and confirm that your authority is present:

```
oc get secret/pull-secret -n openshift-config -ojson | \
jq -r '.data[".dockerconfigjson"]' | \
base64 -d -
```

- 5. This update is rolled out to all nodes. Use oc get mcp to track the progress of the roll out.
- 6. Enter the following command to remove the temporary files that were created:

```
rm authority.json temp_config.json
```

On-premise

Extra configurations need to be made to the Red Hat OpenShift cluster installation for IBM Storage Scale container native cluster to operate correctly. For more information on, see Installing in Red Hat OpenShift documentation.

These configuration tasks can also be handled during the Red Hat OpenShift Container Platform installation by adding day-1 kernel arguments. For more information, see <u>Installation configuration</u> in Red Hat OpenShift documentation.

Validate the following tasks are complete ahead of installing the IBM Storage Scale container native code on an on-premises Red Hat OpenShift.

- Worker node configuration
- Master node configuration (compact cluster)
- Infrastructure node configuration

Worker node configuration

Applying Machine Config Operator (MCO) settings

The following MachineConfiguration is provided as a convenience to easily change the following configuration:

- Kernel development and kernel header packages
 - Install the kernel-related packages for IBM Storage Scale to successfully build its portability layer.
- Increase vmalloc kernel parameter

Modify the kernel parameters that are needed to operate properly with Red Hat CoreOS. This applies only to the IBM Storage Scale running on Linux™ on Z.

Apply the correct sample file based on your OpenShift Container Platform version and machine architecture.

• If you are running x86_64, enter the following command:

```
For 4.12:
   oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.12/mco x86 64.yaml
  oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.13/mco_x86_64.yaml
  For 4.14:
  oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.14/mco_x86_64.yaml
• If you are running ppc64le, enter the following command:
  For 4.12:
   oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.12/mco_ppc64le.yaml
  For 4.13:
   oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.13/mco ppc64le.yaml
  For 4.14:
   oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.14/mco_ppc64le.yaml
• If you are running s390x, enter the following command:
  For 4.12:
   oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.12/mco_s390x.yaml
  For 4.13:
  oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.13/mco_s390x.yaml
  For 4.14:
  oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.14/mco_s390x.yaml
```

Infrastructure node configuration

Similar to the configuration tasks on the workers nodes, Machine Configuration Operator (MCO) settings must be applied to the infrastructure nodes if you want to run IBM Storage Scale core pods.

 $If your infrastructure nodes share roles with the worker pool, indicated by {\tt ROLES: infra, worker}, you can ignore the following instructions.$

Apply the correct sample file based on your OpenShift Container Platform version and machine architecture.

• If you are running x86_64, enter the following command:

```
For 4.12:

curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
native/v5.1.9.x/generated/scale/mco/ocp4.12/mco_x86_64.yaml | sed 's/worker/infra/g' | oc apply -f -
For 4.13:

curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
native/v5.1.9.x/generated/scale/mco/ocp4.13/mco_x86_64.yaml | sed 's/worker/infra/g' | oc apply -f -
For 4.14:

curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
native/v5.1.9.x/generated/scale/mco/ocp4.14/mco_x86_64.yaml | sed 's/worker/infra/g' | oc apply -f -
```

• If you are running ppc64le, enter the following command:

```
For 4.12:
   curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.12/mco_ppc64le.yaml | sed 's/worker/infra/g' | oc apply -f -
  For 4.13:
   curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.13/mco_ppc64le.yaml | sed 's/worker/infra/g' | oc apply -f -
  For 4.14:
  curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.14/mco_ppc64le.yaml | sed 's/worker/infra/g' | oc apply -f -
• If you are running s390x, enter the following command:
  For 4.12:
   curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.12/mco_s390x.yaml | sed 's/worker/infra/g' | oc apply -f -
  For 4.13:
   curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.13/mco s390x.yaml | sed 's/worker/infra/g' | oc apply -f -
  For 4.14:
   curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.14/mco_s390x.yaml | sed 's/worker/infra/g' | oc apply -f -
```

Master node configuration (compact cluster)

You can deploy compact-3-node clusters with Red Hat OpenShift Container Platform 4.5 and later. For more information, see <u>Delivering a Three-node Architecture for Edge Deployments</u> in Red Hat Hybrid Cloud documentation.

In this configuration, verify that the system is sized correctly to operate smoothly. In compact clusters, the Kubernetes control plane, IBM Storage Scale container native pods, and user applications, all compete for the same resources in the cluster. High application loads can impact the control plane resources, causing the Red Hat OpenShift cluster to become unusable or unstable. etcd is sensitive to latency and might present as frequent leader elections, and other instabilities. IBM Storage Scale container native might also take down the file system if resources are constrained.

For more information, see <u>Recommended etcd practices</u> in Red Hat OpenShift documentation.

Schedulable control plane nodes

To allow pod placement for master nodes, also known as control plane nodes, make sure that they are configured as **schedulable**. By default, control plane nodes are not schedulable.

Verify mastersSchedulable is set to true by entering the following command:

```
oc get schedulers.config.openshift.io cluster -ojson | jq -r ".spec.mastersSchedulable"

If this value is not true, patch the cluster by entering the following command:

oc patch schedulers.config.openshift.io cluster --type='json' \
```

```
-p='[{"op": "replace", "path": "/spec/mastersSchedulable", "value":true}]'
```

For more information, see <u>Configuring control plane nodes as schedulable</u> in the Red Hat OpenShift documentation.

Applying Machine Config Operator (MCO) settings

Similar to the configuration tasks required on the workers nodes, these Machine Config Operator (MCO) settings must be applied to the master nodes in a compact-cluster environment.

Apply the correct sample file based on your OpenShift Container Platform version and machine architecture.

• If you are running x86_64, enter the following commands for the relevant versions:

```
For 4.12:

curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
native/v5.1.9.x/generated/scale/mco/ocp4.12/mco_x86_64.yaml | sed 's/worker/master/g' | oc apply -f -
```

```
For 4.13:
    curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.13/mco_x86_64.yaml | sed 's/worker/master/g' | oc apply -f -
  For 4.14:
   curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.14/mco_x86_64.yaml | sed 's/worker/master/g' | oc apply -f -
• If you are running ppc64le, enter the following commands for the relevant versions:
  For 4.12.
    curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.12/mco_ppc64le.yaml | sed 's/worker/master/g' | oc apply -f -
   curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.13/mco_ppc64le.yaml | sed 's/worker/master/g' | oc apply -f -
  For 4.14:
   curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.14/mco ppc64le.yaml | sed 's/worker/master/g' | oc apply -f -
• If you are running s390x, enter the following commands for the relevant versions:
  For 4.12:
    curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.12/mco s390x.yaml | sed 's/worker/master/g' | oc apply -f -
  For 4.13:
   curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.13/mco_s390x.yaml | sed 's/worker/master/g' | oc apply -f -
  For 4.14:
   curl https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
  native/v5.1.9.x/generated/scale/mco/ocp4.14/mco_s390x.yaml | sed 's/worker/master/g' | oc apply -f -
```

Red Hat OpenShift Service on AWS

Red Hat OpenShift Service on AWS (ROSA) is a fully managed service that provides an enterprise-ready OpenShift cluster to run applications on AWS. It offers an easy and quick deploy of an operational OpenShift cluster without the concerns to administer the underlying infrastructure. The service also provides a range of features to help improve the security and reliability of OpenShift clusters, including automated backups and recovery, fine-grained access control, and integration with AWS security services.

For more information on ROSA, see Red Hat OpenShift Service on AWS Documentation.

Refer to the following sections to know about the configuration requirements for OpenShift on AWS.

- Support matrix for IBM Storage Scale container native and ROSA
- OpenShift configuration on AWS

Support matrix for IBM Storage Scale container native and ROSA

The following table lists the support matrix for IBM Storage Scale container native and Red Hat Open Shift Service on AWS (ROSA).

Table 1. AWS support matrix

ROSA CLI version	OCP version	Autoscaling workers	Spot instances
1.2.14	4.12.12 (and later), 4.13, 4.14	No	No

In case of issues related to IBM Storage Scale container native, contact IBM Support. For problems related to Red Hat OpenShift and AWS infrastructure (ROSA), contact AWS support.

OpenShift configuration on AWS

You must modify the Red Hat OpenShift Service on AWS (ROSA) platform for IBM Storage Scale container native to operate correctly.

Add Scale labels to the machine pool

· Modify the default machine pool

ROSA provides a Command Line Interface (CLI) which can be obtained from <u>GitHub</u> for editing node labels, which can be used to customize the machine pool used for running IBM Storage Scale container native. When you install ROSA, it creates a machine pool named "Default" that includes nodes with roles "worker" and "worker, infra".

To use these nodes for running IBM Storage Scale container native, you can modify the "Default" machine pool as follows:

```
rosa edit machinepool -c <rosa-cluster-name> Default --labels node-role.kubernetes.io/scale=,scale.spectrum.ibm.com/daemon-selector= --replicas 3
```

It is recommended to configure a minimum of 3 replicas.

 If you prefer to isolate your workload to a custom machine pool, you can create one and assign labels to the nodes using the following command:

```
rosa create machinepool -c <rosa-cluster-name> --name=<custom-pool-name> --labels node-role.kubernetes.io/scale=,scale.spectrum.ibm.com/daemon-selector= --replicas 3
```

It is recommended to configure a minimum of 3 replicas.

Create a service account for applying Machine Config Operator (MCO)

As a regular user, you are prevented to modify Red Hat managed resources. Therefore, it is advised to create a service account for Machine Config Operator (MCO) by following the provided steps:

1. Create a service account for Machine Config Operator (MCO):

```
oc create serviceaccount scale-mco-sa
```

2. Add a role to service account. To add a "cluster-admin" role to a service account "scale-mco-sa", execute the following command:

```
oc adm policy add-cluster-role-to-user cluster-admin -z scale-mco-sa
```

3. To create a new token for the service account (scale-mco-sa) and store it in the MCO_SA_TOKEN environment variable, execute the following command:

```
export MCO_SA_TOKEN=$(oc create token scale-mco-sa)
```

4. Log in to OpenShift using the new token.

```
oc login --token=$MCO SA TOKEN
```

For information on how to use service account in applications, see <u>Using service accounts in applications</u> in the Red Hat OpenShift documentation.

Create a new Machine Config Pool

To separate out nodes with labels "scale" and "worker" into a new machine pool, execute the following command:

```
echo '
apiVersion: machineconfiguration.openshift.io/v1
kind: MachineConfigPool
metadata:
    name: scale-mcp
spec:
    machineConfigSelector:
    matchExpressions:
        - {key: machineconfiguration.openshift.io/role, operator: In, values: [worker,scale]}
nodeSelector:
    matchLabels:
        node-role.kubernetes.io/scale: ""
' | oc apply -f -
```

Applying Machine Config Operator (MCO) settings

Apply the following MCO setting to install the kernel related packages for IBM Storage Scale to successfully build its portability layer.

```
echo '
apiVersion: machineconfiguration.openshift.io/v1
kind: MachineConfig
metadata:
labels:
    machineconfiguration.openshift.io/role: "scale"
    name: 00-worker-ibm-spectrum-scale-kernel-devel
spec:
    selector:
    matchLabels:
        machineconfiguration.openshift.io/role: "scale"
config:
    ignition:
        version: 3.2.0
extensions:
        - kernel-devel
' | oc apply -f -
```

To validate the kernel-devel packages have been installed onto the machines, see Validate kernel packages.

Cleanup the service account

Once the Machine Config Operator task has been successfully completed, complete the following steps to clean up the service account:

1. Log out of the OpenShift cluster:

```
oc logout
```

1. Log in to the OpenShift cluster as a regular user:

```
oc login <OpenShift_URL> -u <regular_user> -p <regular_user_password>
```

2. Delete the service account that was created for performing MCO task:

```
oc delete sa scale-mco-sa
```

Authorize ROSA worker security group to allow IBM Storage Scale container native ports

Complete the following steps to authorize ROSA worker security group:

1. In your AWS Management Console, navigate to the "EC2 Dashboard" in the region where ROSA is installed and select the "Security Groups" option from the navigation pane. Locate the Security Group for ROSA worker security group id and export the following variable.

```
export AWS ROSA WORKER SECURITY GROUP=<security group id>
```

2. Use the following commands to Authorize Ingress Traffic to allow ports needed by IBM Storage Scale container native.

```
aws ec2 authorize-security-group-ingress --group-id ${AWS_ROSA_WORKER_SECURITY_GROUP} --protocol tcp --port 12345 --source-group ${AWS_ROSA_WORKER_SECURITY_GROUP} aws ec2 authorize-security-group-ingress --group-id ${AWS_ROSA_WORKER_SECURITY_GROUP} --protocol tcp --port 1191 --source-group ${AWS_ROSA_WORKER_SECURITY_GROUP} aws ec2 authorize-security-group-ingress --group-id ${AWS_ROSA_WORKER_SECURITY_GROUP} --protocol tcp --port 60000-61000 --source-group ${AWS_ROSA_WORKER_SECURITY_GROUP}
```

Validating Red Hat OpenShift configuration

Red Hat OpenShift machine configuration changes are handled by the Machine Config Operator (MCO). To see the status of any machine configuration ongoing, run the following command:

```
oc get MachineConfingPool
```

Validate kernel packages

Validate that the kernel-devel package is installed on the nodes that deploy core pods.

In the following example, the label scale.spectrum.ibm.com/daemon-selector= is used to select the nodes that run core pods. Replace this selector to match what is configured in your cluster.

```
oc get nodes -lscale.spectrum.ibm.com/daemon-selector= \
-ojsonpath="{range .items[*]}{.metadata.name}{'\n'}" |\
xargs -I{} oc debug node/{} -T -- chroot /host sh -c "rpm -q kernel-devel"
```

This command creates a debug pod for all nodes that match the label selector. Use it with discretion if you have a large system.

s390x specific validation

Perform the extra validation steps if deployed on the s390x architecture.

Validate that the **vmalloc** kernel parameter is applied on the Red Hat OpenShift Container Platform worker nodes by entering the following command:

```
oc get nodes -lscale.spectrum.ibm.com/daemon-selector= \ -ojsonpath="\{range .items[*]\}\{.metadata.name\}\{'\n'\}" \mid \ xargs -I\{\} oc debug node/{} -T -- cat /proc/cmdline
```

In the following example, the value **vmalloc=4096G** is seen in the output at the end:

```
# oc debug node/worker1.example.com -- cat /proc/cmdline
Starting pod/worker1examplecom-debug ...
To use host binaries, run `chroot /host`
rhcos.root=crypt_rootfs random.trust_cpu=on ignition.platform.id=metal rd.luks.options=discard
$ignition_firstboot
ostree=/ostree/boot.1/rhcos/51e4c768b7c3dcec3bb63b01b9de9e8741486bf00dd4ae4df2d1ff1f872efe2e/0 vmalloc=4096G
```

This command creates a debug pod for all nodes that match the label selector. Use it with discretion if you have a large system.

Installing the IBM Storage Scale container native operator and cluster

The installation of the IBM Storage Scale container native operator and cluster includes several procedures.

- Labels and annotations
- Install
- Image pull secrets
- Kubernetes resources
 - o <u>Cluster</u>
 - o <u>Callhome</u>
 - o RemoteCluster
 - Creating secrets for storage cluster GUI users
 - Configuring Certificate Authority (CA) certificates
 - <u>Filesystems</u>
 - Encryption

Labels and annotations

IBM Storage Scale container native assigns labels to worker nodes and allows to set memory and CPU limits on a per node basis using node annotation.

Designation labels

IBM Storage Scale container native automatically assigns designations to some worker nodes. You do not need to explicitly designate the worker nodes but if it is required then it can be done using node labels.

The following mechanisms are supported to designate IBM Storage Scale container native nodes:

- Automatic (Recommended) Allows the Operator to designate the nodes automatically.
- Manual (Optional) Allows administrators to have more control of the placement of IBM Storage Scale node designations (like the quorum designation) to pods on specific worker nodes.

Manual labeling requires insight about IBM Storage Scale and should only be used by experienced administrators.

Automatic

If the user does not label any nodes as quorum nodes, the Operator automatically applies quorum annotations to a subset of the nodes in the cluster. The number of nodes to be annotated depends on the number of nodes in the cluster:

- If the number of nodes in the cluster definition is less than 4, all nodes are designated as quorum nodes.
- If the number of nodes in the cluster definition is between 4 and 9 inclusive, 3 nodes are designated as quorum nodes.
- If the number of nodes in the cluster definition is between 10 and 18 inclusive, 5 nodes are designated as quorum nodes.
- If the number of nodes in the cluster definition is greater than 18, 7 nodes are designated as quorum nodes.

Kubernetes zones are considered if they are configured in the OpenShift cluster. The operator selects quorum nodes across all zones. For example, if there are 3 zones and 3 quorum nodes are to be designated as quorum nodes, then one node of each zone is designated as quorum node. For more information, see <u>Kubernetes zones</u>.

The automatic node designation only works at initial cluster creation time. Once the cluster has been created, the operator does not change node designations automatically (for example if nodes are added to the cluster). If node designations should be changed on an existing cluster, the Manual steps can be performed, even if Automatic mode has been used at cluster creation time.

Manual

Supported designation label values are quorum and manager. The nodes designated as quorum nodes also automatically assume the role of manager. If there are sufficient quorum nodes designated, unlabled nodes become client nodes within the cluster.

IBM Storage Scale quorum designation

For more information about IBM Storage Scale quorum designation, see <u>Quorum</u> in IBM Storage Scale documentation. It is recommended to configure an odd number of nodes, with 3, 5, or 7 nodes being the typical numbers used.

IBM Storage Scale manager designation

For more information about IBM Storage Scale manager designation, see Special management functions in IBM Storage Scale documentation.

Node labeling

To see the list of nodes in your cluster, enter the oc get nodes command:

```
# oc get nodes
NAME
                            STATUS ROLES AGE
                                                  VERSION
master0.example.com
                   Ready
                            master
                                    50d v1.16.2
worker0.example.com
                   Readv
                            worker
                                    50d
                                        v1.16.2
                                    50d
                                         v1.16.2
worker1.example.com
                   Ready
                            worker
                            worker 50d v1.16.2
worker2.example.com
                   Ready
```

The following labels can be applied to nodes in the Red Hat OpenShift cluster to dictate how the pods deployed on those nodes are designated:

```
scale.spectrum.ibm.com/designation=quorum
scale.spectrum.ibm.com/designation=manager
```

To apply a label to a node, enter the oc label node <node name> scale.spectrum.ibm.com/designation=<designation> command as follows:

```
oc label node worker0.example.com scale.spectrum.ibm.com/designation=quorum
```

To verify that the label was applied to the node, enter the oc describe node <node name> command as follows:

```
# oc describe node worker0.example.com
Name: worker0.example.com
...
Labels: ...
...
scale.spectrum.ibm.com/designation=quorum
```

To remove a label from a node, enter the following command:

```
oc label node <node name> scale.spectrum.ibm.com/designation-
```

Quorum node designations can be changed on the IBM Storage Scale container native cluster by manually applying or removing node labels. Manual labeling requires insight about IBM Storage Scale and should only be performed by experienced administrators.

Install

If you are looking to upgrade an existing IBM Storage Scale container native cluster, see <u>Upgrading</u>.

The installation process for IBM Storage Scale container native begins with applying the install.yaml to create and define Kubernetes configuration across the following namespaces:

• ibm-spectrum-scale-operator

- ibm-spectrum-scale-dns
- ibm-spectrum-scale-csi
- ibm-spectrum-scale

Run the following command to configure the environment:

oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-native/v5.1.9.x/generated/scale/install.yaml

Verification

Validate that the following namespaces have been created by running the command:

```
oc get namespaces | grep ibm-spectrum-scale

$ oc get namespaces | grep ibm-spectrum-scale
ibm-spectrum-scale
ibm-spectrum-scale-csi
ibm-spectrum-scale-dns
ibm-spectrum-scale-operator
Active 26s
```

Validate that operator pods are running in the following two namespaces:

1. ibm-spectrum-scale-operator

```
oc get pods -n ibm-spectrum-scale-operator
  $ oc get pods -n ibm-spectrum-scale-operator
  NAME
                                                        READY
                                                               STATUS
                                                                         RESTARTS
                                                                                   AGE
  ibm-spectrum-scale-controller-manager-78df9cf866-jd89q 1/1
                                                                                   78s
                                                               Running 0
ibm-spectrum-scale-csi
  oc get pods -n ibm-spectrum-scale-csi
  $ oc get pods -n ibm-spectrum-scale-csi
  NAME
                                                  READY STATUS
                                                                   RESTARTS
                                                                              AGE
  ibm-spectrum-scale-csi-operator-7f94bfd897-w88fr 1/1 Running 0
```

Image pull secrets

If you have already created the OpenShift global pull secret from <u>Adding IBM Cloud Container Registry credentials</u>, skip this section and go onto the next section.

IBM Storage Scale container native images are hosted in IBM Cloud Container Registry.

Create the ${\tt ibm-entitlement-key}$ pull secret for each of the following namespaces:

- ibm-spectrum-scale
- ibm-spectrum-scale-dns
- ibm-spectrum-scale-csi
- Obtain an entitlement key from IBM container software library and export it:

```
export ENTITLEMENT KEY=<REPLACE WITH ICR ENTITLEMENT KEY>
```

• Create the docker-registry secret for each namespace:

```
for namespace in ibm-spectrum-scale ibm-spectrum-scale-dns ibm-spectrum-scale-csi; do
  oc create secret docker-registry ibm-entitlement-key -n ${namespace} \
    --docker-server=cp.icr.io \
    --docker-username cp \
    --docker-password ${ENTITLEMENT_KEY}
done
```

• Unset the export:

unset ENTITLEMENT KEY

Kubernetes resources

The following sections describe Kubernetes resources that need to be defined to the OpenShift cluster to drive features of IBM Storage Scale container native cluster.

The following table lists the Custom Resource Definitions (CRDs) managed by the operator:

Table 1. IBM Storage Scale container native cluster custom resources

Resource	Short name	Description	
cluster	gpfs	Set attributes for the IBM Storage Scale container native cluster.	
callhome	none	Configures IBM Storage Scale callhome functionality.	
remoteclusters	remotegpfs	Provide configuration details to the IBM Storage Scale remote cluster. For more information, see <u>Filesystem</u> section.	
filesystem	fs	Configure the filesystems for the container native cluster.	
encryptionconf ig	ec	Allows users to configure encryption functionality.	

Use the following sections to guide you when creating custom resources:

- <u>Cluster</u>
- Callhome
- RemoteCluster
 - o Creating secrets for storage cluster GUI users
 - o Configuring Certificate Authority (CA) certificates
- <u>Filesystems</u>
- Encryption

Cluster

A cluster definition is needed to declare the properties of the IBM Storage Scale container native cluster. The following steps describe creating a cluster CR.

1. Download a copy of the sample cluster.yaml from the GitHub repository.

curl -fs https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-containernative/v5.1.9.x/generated/scale/v1beta1/cluster/cluster.yaml > cluster.yaml || echo "Failed to download Cluster Sample CR"

- 2. Make changes specific to your installation. For more information on the Cluster specification, see <u>Cluster spec.</u>
- 3. Set the labels for the nodeSelector in the cluster spec.daemon.nodeSelector field. The nodeSelector in the sample Cluster CR is defined as scale.spectrum.ibm.com/daemon-selector: "". For example, if you want scale core pods to run on the Red Hat OpenShift worker nodes, node-role.kubernetes.io/worker, then apply the following command to set the nodeSelector label on the worker nodes:

oc label nodes -lnode-role.kubernetes.io/worker= scale.spectrum.ibm.com/daemon-selector=

4. Apple the cluster yaml by entering the following command:

oc apply -f cluster.yaml

If you apply the cluster CR and do not see any core pods being created, check that you labeled your nodes with the configured daemon.nodeSelector.

Once the cluster resource is defined to Kubernetes, use oc edit cluster ibm-spectrum-scale modify properties of the resource.

Cluster spec

The following table describes the properties for Cluster.

Table 1. Cluster property and description

Property	Required	Default	Description
license	Yes	Not accepted	The license section allows the user to accept the license and specify the edition of IBM Storage Scale. See <u>License</u> section for more details.
license.acce pt	Yes	false	The license must be accepted. Read the license and change to "true" to accept. See <u>License</u> section for more details.
license.lice	Yes	data-access	Specifies the IBM Storage Scale edition, "data-access" or "data-management". See <u>License</u> section for more details.
daemon	Yes	N/A	daemon specifies the configuration of the gpfs daemons. See <u>Daemon</u> section for more details.

Property	Required	Default	Description
daemon.nodeS elector	No	scale.spectrum.ibm.c om/daemon-selector	Allows user to set a nodeSelector to indicate which Red Hat OpenShift nodes to run scale core pods. See Daemon section for more details.
grafanaBridg e	No	Disabled	Specifies the configuration of Grafana bridge. See <u>Grafana bridge</u> section for more details.
gui	No	N/A	Specifies extra configuration of the GUI.
pmcollector	No	N/A	Specifies extra configuration of the pmcollector.
networkPolic Y	Yes	Enabled	The operator creates network policy rules in the IBM Storage Scale container native namespaces.

License

The license section allows accepting and choosing the IBM Storage Scale edition to be deployed in the IBM Storage Scale container native cluster. Complete the following activities:

- Review the appropriate license documentation through the URL in the CR.
- Accept the license by specifying true in the license.accept field.
- Supply the edition used in the license.license field.

The sample CR defaults to data-access under the license.license field, indicating IBM Storage Scale Data Access Edition. If you need the IBM Storage Scale Data Management Edition, then change the value in license.license to data-management.

Specifying an edition without proper entitlement results in image pull failures during deployment.

```
apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Cluster
spec:
    ...
license:
    accept: true
    license: data-access
```

Enter the oc explain cluster.spec.license command to view more details.

Daemon

The daemon section in the cluster specification specifies configuration for the IBM Storage Scale core pods.

Cluster name override

If you have multiple container native clusters that are attempting to remote mount from a single IBM Storage Scale storage cluster, each client GPFS cluster must have a unique GPFS Cluster name. Depending on the configuration of your Red Hat OpenShift cluster, the default cluster might not be unique and cause failures to mount the file system.

The cluster name is created by taking ibm-spectrum-scale and adding it to the base domain of the Red Hat OpenShift cluster (oc get dns cluster -ojson | jq -r '.spec.baseDomain'). If this cluster name is not unique, use the daemon.clusterNameOverride field to override the generated name.

The clusterNameOverride field must be configured before cluster creation. This field cannot be changed after a cluster is created. Setting after a cluster is created will require a full cleanup and redeployment of the cluster.

If using the following value in the clusterNameOverride field:

```
apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Cluster
...
spec:
   daemon:
    clusterNameOverride: ocp.c2.example.com
```

The container native cluster that is created will have the following GPFS cluster name:

```
mmlssh-4.4# mmlscluster

GPFS cluster information

GPFS cluster name: ocp.c2.example.com
...
```

Tolerations

The **spec.daemon.tolerations** section allows the user to configure more tolerations to determine where IBM Storage Scale core pods can be scheduled. For more information on tolerations, see <u>Taints and Tolerations</u> in Kubernetes documentation.

The operator rolls out the configured tolerations to the IBM Storage Scale core pods.

Enter the oc explain cluster.spec.daemon.tolerations command to view more details.

Node selectors

The daemon.nodeSelector section allows you to configure a nodeSelector to determine where IBM Storage Scale pods can be deployed.

The Operator checks that a node has all defined labels present in order to deem a node eligible to deploy IBM Storage Scale pods. In the cluster CR sample, the operator deploys IBM Storage Scale pods on nodes with the following label: scale.spectrum.ibm.com/daemon-selector:

```
apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Cluster
spec:
...
daemon:
    nodeSelector:
    scale.spectrum.ibm.com/daemon-selector: ""
```

Enter the oc explain cluster.spec.daemon.nodeSelector command to view more details. For more information, see Compact clusters support.

Host aliases

It is recommended that proper DNS is configured in your environment.

The daemon.hostAliases section allows for user-defined entries to be added into IBM Storage Scale CoreDNS service handling name resolution for the core pods.

If the core pods are unable to resolve the hostname of the servers in the storage cluster by DNS, their hostname and their IP addresses can be specified in the hostaliases as follows:

```
apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Cluster
spec:
...
daemon:
   hostAliases:
        hostname: node1.example.com
        ip: 10.0.0.1
        hostname: node2.example.com
        ip: 10.0.0.2
```

The IBM Storage Scale CoreDNS service handles name resolution for the core pods. For RemoteCluster CR, the hostname that is provided in the remotecluster.spec.gui.host field must be DNS resolvable and using host aliases is not a valid workaround.

Enter the oc explain cluster.spec.daemon.hostAliases command to view more details.

Cluster profile

The daemon.clusterProfile allows the user to set default IBM Storage Scale configuration parameters for the cluster at cluster creation time.

```
apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Cluster
spec:
    daemon:
        ...
    clusterProfile:
        controlSetxattrImmutableSELinux: "yes"
        enforceFilesetQuotaOnRoot: "yes"
        ignorePrefetchLUNCount: "yes"
        initPrefetchBuffers: "128"
        maxblocksize: 16M
        prefetchPtt: "25"
        prefetchTimeout: "30"
```

Changing the values in the clusterProfile is not supported and must be avoided unless advised by IBM Support. For the two exceptions where changing values in the clusterProfile is supported, see Ephemeral port range and Ephemeral port ranges.

Enter the oc explain cluster.spec.daemon.clusterProfile command to view more details.

Ephemeral port range

If the storage cluster configures ephemeral port ranges, you need to set tscCmdPortRange on the container native cluster to match the range.

For example, if the storage cluster is configured to use port range of 60000-61000, set this value under the clusterProfile section in the Cluster CR.

```
apiVersion: scale.spectrum.ibm.com/vlbeta1
kind: Cluster
spec:
    ...
    daemon:
    clusterProfile:
    ...
    tscCmdPortRange: "60000-61000"
```

Roles

The daemon.roles section under the Cluster spec allows the user to fine-tune memory and CPU requests by using the resources object on the nodes that are part of specific IBM Storage Scale roles. For more information on Request and Limits, see Resource Management for Pods and Containers in Kubernetes documentation.

client role

For the client role, the configuration recommendation is 2 CPU and 4 GiB. On systems with many CPU cores, large memory, and/or high-speed network, the storage performance might increase with higher values. Therefore, encryption and compression of PVs result in higher CPU load higher resource values can be beneficial. On smaller systems and/or applications with low I/O workloads, 1 CPU and 2 GiB can be set.

Low resource configurations might yield poor performance.

The resource properties of the core pods are as follows:

- Requests, if not specified in the cluster spec for the roles is set to 25% of the capacity of the nodes.
- Limits, if not specified in the cluster spec for the roles is set to 50% of the capacity of the nodes.

For example, to set memory and CPU requests and limits for the client role, specify the request values under spec.daemon.roles.resources and the limit values under spec.daemon.roles.limits. Limits, if specified, must have at least the double value as the requests:

These values must be set at cluster creation time. Changes made after the cluster is created does not take effect until the pods restart.

```
apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Cluster
spec:
...
daemon:
    roles:
        - name: client
        resources:
            cpu: "2"
            memory: 4Gi
limits:
            cpu: "4"
            memory: 8Gi
```

For s390x, the sample cluster CR ships with "4Gi" memory request and you might need to reduce the memory request to "2Gi" if your hardware does not have enough physical memory.

Enter the oc explain cluster.spec.daemon.roles command to view more details.

Grafana bridge

The **grafanaBridge** section allows the user to enable the deployment of the IBM Storage Scale bridge for Grafana application. For more information, see <u>IBM Storage Scale bridge for Grafana</u>.

Specify grafanaBridge: {} to enable Grafana Bridge:

```
apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Cluster
spec:
    ...
    grafanaBridge: {}
```

Enter the oc explain grafanabridge.spec command to view more details.

Grafana bridge is optional

Infrastructure nodes

The GUI pods, pmcollector pods, and <u>Grafana bridge</u> pods can be placed onto Red Hat OpenShift infrastructure nodes. At least two infrastructure nodes are needed because two replicas of GUI and pmcollector pods have to run on different infrastructure nodes.

GUI, pmcollector and Grafana bridge pods

The qui, pmcollector and grafanaBridge sections allow to specify a Kubernetes Node Selector and Kubernetes Taints and Tolerations.

If the Red Hat OpenShift infrastructure nodes are labeled with node-role.kubernetes.io/infra="" and have the node-role.kubernetes.io/infra:NoExecute taints, add the following lines to run the qui, pmcollector and grafanaBridge sections:

```
apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Cluster
spec:
  gui:
   nodeSelector:
     node-role.kubernetes.io/infra: ""
    tolerations:
    - effect: NoSchedule
     key: node-role.kubernetes.io/infra
     operator: Exists

    effect: NoExecute

     key: node-role.kubernetes.io/infra
      operator: Exists
  pmcollector:
   nodeSelector:
     node-role.kubernetes.io/infra: ""
    tolerations:
    - effect: NoSchedule
     key: node-role.kubernetes.io/infra
     operator: Exists
    - effect: NoExecute
     key: node-role.kubernetes.io/infra
      operator: Exists
  grafanaBridge:
   nodeSelector:
     node-role.kubernetes.io/infra: ""
    tolerations:
     effect: NoSchedule
     key: node-role.kubernetes.io/infra
      operator: Exists
    - effect: NoExecute
     key: node-role.kubernetes.io/infra
      operator: Exists
```

IBM Storage Scale core pods

To use infrastructure nodes, it is required that IBM Storage Scale core pods also run on the infrastructure nodes.

• Label all worker nodes and infrastructure nodes with a common label. The sample cluster CR defines the node selector: scale.spectrum.ibm.com/daemon-selector: "". To use this selector, apply the following labels to worker and infrastructure nodes:

```
oc label nodes --selector node-role.kubernetes.io/worker scale.spectrum.ibm.com/daemon-selector=""
oc label nodes --selector node-role.kubernetes.io/infra scale.spectrum.ibm.com/daemon-selector=""
```

The IBM Storage Scale core pods tolerate the **NoExecute** and **NoSchedule** taint. Therefore, the core pods run on infrastructure nodes even if these taints are present.

Network policies

The cluster.spec.networkPolicy object indicates whether the container native operator creates and manages the network policy rules within the IBM Storage Scale container native namespaces. The default sample cluster CR enables this option: networkPolicy: {}.

Modifying the network policies that are owned by the Cluster controller gets overwritten by the operator.

Enabling and disabling network policy management

With IBM Storage Scale container native v5.1.9 or later, the sample custom resource enables network policies by default.

If network policies are not created by the operator, use the following command to patch the cluster spec:

```
oc patch cluster.scale.spectrum.ibm.com ibm-spectrum-scale --type='json' \
-p='[{"op": "add", "path": "/spec/networkPolicy", "value":{}}]'
```

If you find that the network policy rules are interfering with functions of the container native cluster, disable the option in the Cluster spec with the following command:

```
oc patch cluster.scale.spectrum.ibm.com ibm-spectrum-scale --type='json' \
-p='[{"op": "remove", "path": "/spec/networkPolicy"}]'
```

Delete the network policies with the following commands:

```
oc delete networkpolicy -n ibm-spectrum-scale-operator --all oc delete networkpolicy -n ibm-spectrum-scale --all oc delete networkpolicy -n ibm-spectrum-scale-dns --all
```

Allowing communication between trusted namespaces

To allow ingress and egress communication to and from a trusted namespace within your Red Hat OpenShift cluster, label the namespace with the label: scale.spectrum.ibm.com/networkpolicy=allow.

To enable communication, add the label to the namespace:

```
oc label namespace <TARGET NAMESPACE> scale.spectrum.ibm.com/networkpolicy=allow
```

To disable communication, remove the label on the namespace:

oc label namespace <TARGET_NAMESPACE> scale.spectrum.ibm.com/networkpolicy-

Cluster status

Status Conditions can be viewed as a snapshot of the current and most up-to-date status of a Cluster.

• The Success condition is set to True if the Cluster is successfully configured.

Callhome

To enable call home functionality, create a CallHome custom resource to the kubernetes cluster. The following steps describe creating a Callhome CR.

1. Download a copy of the sample callhome.yaml from the GitHub repository.

```
curl -fs https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
native/v5.1.9.x/generated/scale/v1beta1/callhome/callhome.yaml > callhome.yaml || echo "Failed to
download Callhome Sample CR"
```

- 2. Edit the callhome.yaml file and make changes specific to your installation. For details on how to fill out the sections of the Callhome specification, see <u>Callhome spec</u>.
- 3. After you have made your changes, apply the callhome yaml using the following command:

```
oc apply -f callhome.yaml
```

4. View the Callhome resources using the following command:

```
oc get callhome -n ibm-spectrum-scale
```

Once deployed, use the command oc edit callhome -n ibm-spectrum-scale to modify properties of the resource.

Call home can be enabled, modified, or disabled at any time.

For more information, see <u>Understanding call home</u> in IBM Storage Scale documentation.

Callhome spec

The following table describe the properties for Callhome:

Table 1. Callhome property and description

Property	Required	Default	Description
companyEmail	Yes	None	The address of the system administrator who can be contacted by the IBM Support. Usually this e-mail address is directed towards a group or task e-mail address. For example, itsupport@mycompanyname.com.
companyName	Yes	None	The company to which the contact person belongs. This name can consist of any alphanumeric characters and these non-alphanumeric characters are '-', ', '', ''.
countryCode	Yes	None	The two-letter capital letter country codes as defined in ISO 3166-1 alpha-2.
customerID	Yes	None	The customer ID of the system administrator who can be contacted by the IBM Support. This can consist of any alphanumeric characters and these non-alphanumeric characters are '-', '_', '.'.
license.acce pt	Yes	None	License must be accepted by the end user to enable Callhome.

Property	Required	Default	Description	
proxy	No	None	If specified, defines a proxy server configuration.	
proxy.host	Yes, if proxy is specified	None	The host of proxy server as hostname or IP address.	
proxy.port	Yes, if proxy is specified	None	The port of proxy server.	
proxy.secret Name	Yes, if proxy is specified	None	The secret name of a basic authentication secret, which contains username and password for proxy server.	

You should only define one Callhome resource to the namespace.

License agreement

To agree and accept the license, set license. accept property to true. If you do not accept the license, call home is not enabled.

```
apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Callhome
...
spec:
...
license:
accept: true
```

Personal information

Under the spec for Callhome, enter your companyName, the customerID that IBM provided to you, the companyEmail and the countryCode.

The countryCode is a two-letter capital letter country codes as defined in ISO 3166-1 alpha-2. For example, **US** for the United States or **DE** for Germany.

Type

Set the spec. type to reflect the type of cluster, test or production.

Proxy (optional)

If you are using a proxy for communication, enter information about the proxy service in the spec.proxy field. Enter the oc explain callhome.spec.proxy command to view more details.

If your proxy requires authentication, you must create a kubernetes secret containing the credentials. For example, to create a secret proxyServerSecret, you can enter the following command:

```
oc create secret generic proxyServerSecret --from-literal=username='<proxy_username>' \
--from-literal=password='<proxy_password>' -n ibm-spectrum-scale

Then add your configuration into the CR:

apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Callhome
...

spec:
...
proxy:
host: proxyserver.example.com
port: 443
secretName: proxyServerSecret
```

Enter the oc explain callhome command to view more details.

Callhome status

Status Conditions can be viewed as a snapshot of the current and most up-to-date status of Callhome.

- The Enabled condition is set to True if Callhome functionality is enabled by accepting the license.
- The Success condition is set to True if Callhome configured successfully and is able to communicate with the IBM Callhome server.

RemoteClusters

To allow the IBM Storage Scale container native cluster to access remote IBM Storage Scale storage clusters, a RemoteCluster custom resources (CR) must be defined for each storage cluster. For more information to prepare the storage cluster, see Storage cluster.

To help with fields in the **RemoteCluster** custom resource specification, see:

- Creating secrets for storage cluster GUI users
- Configuring Certificate Authority (CA) certificates

The following steps help guide you in creating a **RemoteCluster** resource.

1. Download a copy of the sample remotecluster.yaml from the GitHub repository.

```
curl -fs https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
native/v5.1.9.x/generated/scale/v1beta1/remotecluster/remotecluster.yaml > remotecluster.yaml || echo
"Failed to download RemoteCluster Sample CR"
```

The sample remotecluster.yaml uses remotecluster-sample as the resource name. You can change this name. If creating multiple remote cluster resources, each resource must have a unique metadata.name.

- 2. Edit the remotecluster.yaml file and make changes to the fields that are specific to your installation. For details on the Remote Cluster specification, see RemoteCluster spec.
- 3. Apply the resource by using the following command:

```
oc apply -f remotecluster.yaml
```

4. View the remote cluster resources by using the following command:

```
oc get remotecluster -n ibm-spectrum-scale
```

Once the resource is defined to Kubernetes, use oc edit remotecluster <remotecluster-name> -n ibm-spectrum-scale modify properties of the resource.

RemoteCluster spec

The following table describes the properties for RemoteCluster:

Table 1. Remotecluster property and description

Property	Required	Default	Description	
metadata.nam e	Yes	None	The name of the CR. This is used to identify the remote storage cluster in the <pre>Filesystem</pre> CR.	
contactNodes	No	None	This property is optional and provides a list of nodes from the storage cluster to be used as the remote cluster contact nodes. The names should be the daemon node names. If not specified, the operator uses any 3 nodes that are detected from the storage cluster.	
gui	Yes	None	It specifies the details for the IBM Storage Scale Remote Cluster GUI.	
gui.cacert	No	None	It specifies the name of the RootCA configmap.	
gui.csiSecre tName	Yes	csi-remote- mount-storage- cluster-1	It references the secret that contains the username and password of the CSI admin use in the ibm-spectrum-scale-csi namespace.	
gui.host	Yes	None	The hostname for the GUI endpoint on the storage cluster.	
gui.insecure SkipVerify	No	None	The parameter controls whether a client verifies the storage cluster's GUI certificate chain and hostname. If set to true, TLS is susceptible to machine-in-the-middle attacks. The default value is false.	
gui.port	No	443	It specifies the port of the Remote Cluster.	
gui.scheme	No	https	The default value is 'https'. No other value is supported.	
gui.secretNa me	Yes	None	The name of the Kubernetes secret created during the storage cluster configuration.	

You can define 1 or more RemoteClusters to the cluster, one for each Storage Cluster you want to mount file systems from.

Contact nodes

The spec.contactNodes field allows the administrator to specify the exact list of contact nodes from the storage cluster to be used in the remote cluster configuration. If none is provided, the operator picks any 3 nodes from querying the remote cluster REST API. The hostnames for the contact nodes need to be DNS resolvable within the core pods in the Red Hat OpenShift cluster. If DNS resolution does not work, you can specify the hostname and IP address mapping by using the hostalias field in the Cluster Spec. For more information, see hostalias.

GUI

The spec.qui contains the properties that are needed to communicate with the IBM Storage Scale remote storage cluster.

- cacert provide the name of the ConfigMap storing the CA Certificate for the Storage Cluster GUI. For more information, see <u>Configuring Certificate Authority (CA) certificates</u>.
- insecuritySkipVerify controls whether a client verifies the server's certificate chain and hostname. Default to false.
- host provide the Remote Cluster GUI host endpoint.

- secretName Kubernetes secret name containing the credentials for the ContainerOperator user on the storage cluster
- csiSecretName Kubernetes secret name containing the credentials for the CsiAdmin user on the storage cluster

Deleting a RemoteCluster custom resource definition does not delete the access permission of the IBM Storage Scale container native cluster to the file systems on the remote storage cluster.

Enter the oc explain remotecluster.spec command to view more details.

RemoteCluster status

Status Conditions can be viewed as a snapshot of the current and most up-to-date status of a Remotecluster instance.

• The Ready condition is set to True if the Remotecluster credentials are established.

Examples

Additional remote clusters

It is possible to mount other file systems that are served by multiple remote clusters. Each remote cluster would need to have a resource defined into the Kubernetes cluster.

If applying the sample remotecluster.yaml CR from the examples, you would have a single resource defined:

```
$ oc get remotecluster -n ibm-spectrum-scale
NAME HOST READY AGE
remotecluster-sample guihost.example.com True 25h
```

Duplicate the sample remotecluster CR and make changes to reflect your second remote storage cluster. The metadata.name must be changed to be unique, in this example, we use xyz-storagecluster. Create the new resource and verify that it is defined:

<pre>\$ oc get remotecluster</pre>	-n ibm-spectrum-scale		
NAME	HOST	READY	AGE
remotecluster-sample	guihost.example.com	True	25h
xyz-storagecluster	xyz.example.com	True	10m

Creating secrets for storage cluster GUI users

Create a secret on the Red Hat OpenShift cluster that holds the credentials for GUI users defined on the IBM Storage Scale Storage cluster. The secret is used by the operator to communicate with the storage cluster to configure the remote mount.

The username and password specified for the secrets must match the GUI user that was created on the storage cluster <u>Creating container operator user and group</u>.

Two new secrets must be added for each storage cluster being configured.

 ${\bf 1.} \ {\bf Create} \ {\bf a} \ {\bf secret} \ {\bf for} \ {\bf the} \ {\bf ContainerOperator} \ {\bf GUI} \ {\bf user} \ {\bf defined} \ {\bf on} \ {\bf the} \ {\bf storage} \ {\bf cluster}.$

To create a secret named cnsa-remote-mount-storage-cluster-1 in the ibm-spectrum-scale namespace, enter the following command:

```
oc create secret generic cnsa-remote-mount-storage-cluster-1 --from-literal=username='cnsa_storage_gui_user' \
--from-literal=password='cnsa_storage_gui_password' -n ibm-spectrum-scale
```

2. Create a secret for the CsiAdmin GUI user defined on the storage cluster.

To create the secret named csi-remote-mount-storage-cluster-1 in the ibm-spectrum-scale-csi namespace, enter the following command:

```
oc create secret generic csi-remote-mount-storage-cluster-1 --from-literal=username='csi_storage_gui_user' \
--from-literal=password='csi storage gui password' -n ibm-spectrum-scale-csi
```

3. Label the secret, enter the following command:

oc label secret csi-remote-mount-storage-cluster-1 -n ibm-spectrum-scale-csi product=ibm-spectrum-scale-csi

When the passwords on the storage cluster for these users change, the credentials in the secrets must be updated. For instructions updating the secrets, see <u>Updating user secrets</u> for the storage cluster on Red Hat OpenShift.

Configuring Certificate Authority (CA) certificates

IBM Storage Scale container native uses Transport Layer Security (TLS) verification to guarantee secure HTTPS communication with the storage cluster GUI. It verifies the server's certificate chain and host name.

Configure a security protocol

A security protocol must be configured for use with IBM Storage Scale container native in one of three different ways.

Option 1 - CA certificate ConfigMap

A ConfigMap containing the CA certificate of the storage cluster GUI must be created to allow the IBM Storage Scale container native operator to perform TLS verification. CA certificate data can exist in base64 encoded or decoded forms.

In the following example, we create a ConfigMap from storage-cluster-1.crt file. This file contains the storage cluster CA certificate data in decoded form. The decoded form must appear as shown:

```
# cat storage-cluster-1.crt
----BEGIN CERTIFICATE----
MIIDZDC
.....n/J90JFdoXs=
----END CERTIFICATE----
```

Create the ConfigMap with one of the following two commands. The second command is provided to assist the users who wish to trust the self-signed certificate of the storage cluster GUI.

 $\hbox{\it oc create configmap cacert-storage-cluster-1 --from-file=storage-cluster-1.crt=storage-cluster-1.crt-n ibm-spectrum-scale}\\$

By default, the storage cluster GUI self-signs a certificate that can be used in lieu of a CA certificate. This certificate can be obtained and used to create the cacert ConfigMap by entering the following command. Replace the gui host with the hostname of the storage cluster GUI.

oc create configmap cacert-storage-cluster-1 --from-literal=storage-cluster-1.crt="\$(openssl s_client - showcerts -connect <gui host>:443 </dev/null | 2>/dev/null | openssl x509 -outform PEM) " -n ibm-spectrum-scale

Option 2 - Storage cluster uses the OpenShift Container Platform CA or a Red Hat default CA

IBM Storage Scale container native automatically includes the OpenShift Container Platform CA and the default Red Hat CA bundle for storage cluster GUI communication. If the storage cluster uses the OpenShift Container Platform CA or a Red Hat trusted CA, a ConfigMap, as described in Option 1, does **not** need to be created for the CA certificate and the **cacert** field should be deleted from the RemoteCluster Custom Resource. For more information, see RemoteClusters.

Option 3 - Skip verification

Storage cluster verification may be skipped if desired, however, TLS is susceptible to machine-in-the-middle attacks. To skip verification, the insecureSkipVerify option must be set to true, when configuring the RemoteCluster Custom Resource. For more information, see
RemoteClusters.

Storage cluster verification

Events are posted onto the RemoteCluster resource if configuration is missing. For example, if secrets and ConfigMaps are missing, you may see events similar to the following sample:

Filesystems

To configure a file system in the IBM Storage Scale container native cluster, a Filesystem custom resource (CR) must be defined for each filesystem you want mounted.

The filesystem is served by an IBM Storage Scale remote storage cluster. Ensure that you have already created a **RemoteCluster** custom resource for that storage cluster before proceeding. For more information, see <u>RemoteCluster</u>.

The following steps will help guide you in creating a Filesystem resource.

1. Download a copy of the sample <u>filesystem.remote.yaml</u> from the GitHub repository.

```
curl -fs https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-
native/v5.1.9.x/generated/scale/v1beta1/filesystem/filesystem.remote.yaml > filesystem.remote.yaml ||
echo "Failed to download Filesystem Sample CR"
```

- 2. Edit the filesystem.remote.yaml file and make change to the fields that are specific to your installation. For details on how to fill out the sections of the Filesystem specification, see Filesystem spec.
- 3. After you have made your changes, apply the filesystem yaml using the following command:

```
oc apply -f filesystem.remote.yaml
```

4. View the filesystem resources using the following command:

```
oc get filesystem -n ibm-spectrum-scale
```

Once deployed, use the command oc edit filesystem <filesystem-name> -n ibm-spectrum-scale to modify properties of the resource.

If you choose to configure an encrypted remote mounted filesystem for the IBM Storage Scale container native cluster you must also create an <u>EncryptionConfig</u> custom resource. For more information, see <u>EncryptionConfig</u>.

Filesystem spec

The following table describe the properties for Filesystem:

Table 1. Filesystem property and description

Property	Required	Default	Description
metadata.name	Yes	None	The name of the CR.
remote	No	None	If specified, describes the file system to be remote mounted filesystem.
remote.fs	Yes, if remote is specified	None	It is the name of the filesystem to mount, served by the remote cluster.
remote.cluster	Yes, if remote is specified	None	It is the name of the RemoteCluster resource.

You can define 1 or more Filesystems, one for each filesystem that you want to mount from the storage cluster.

All filesystems will be mounted under /mnt. This cannot be changed.

remote

The **spec.remote** section defines the remote filesystem properties and consists of two fields:

- remote.cluster: This specifies the name of the RemoteCluster CR that is defined that is serving the filesystem.
- remote .fs: This specifies the filesystem name on the remote storage cluster that we want to mount into the container native cluster.

In the follwing example:

```
apiVersion: scale.spectrum.ibm.com/vlbeta1
kind: Filesystem
...
spec:
   remote:
    cluster: remotecluster-sample
    fs: fs1
```

The filesystem fs1 provided by the remote cluster defined in remotecluster-sample will be made available in the container.

Deleting a Filesystem custom resource does not un-mount or delete the file system configuration from the IBM Storage Scale Cluster.

Enter the oc explain filesystem.spec.remote command to view more details.

Filesystem status

Status Conditions can be viewed as a snapshot of the current and most up-to-date status of a Filesystem instance.

• The Success condition is set to True if the Filesystem is created and mounted.

Examples

Additional filesystems

To have more filesystems created into the container native cluster, you would define a custom resource for each filesystem and apply it to the kubernetes cluster.

If following the prio examples, you would have a single filesystem resource defined in the cluster:

```
$ oc get filesystem -n ibm-spectrum-scale
NAME ESTABLISHED AGE
remote-sample True 25h
```

1. To create another filesystem served by the **same** remote cluster, **remotecluster-sample**, define a yaml as follows:

```
apiVersion: scale.spectrum.ibm.com/vlbeta1
kind: Filesystem
metadata:
labels:
    app.kubernetes.io/instance: ibm-spectrum-scale
    app.kubernetes.io/name: cluster
    name: c1-fs2
    namespace: ibm-spectrum-scale
spec:
    remote:
    cluster: remotecluster-sample
    fs: fs2
```

When applied, filesystem fs2 hosted by the remote cluster remotecluster-sample will be made available to the container native cluster

At this point, displaying the filesystems will show the following output:

```
$ oc get filesystem -n ibm-spectrum-scale -o wide

NAME ESTABLISHED REMOTE CLUSTER MAINTENANCE MODE AGE

remote-sample True remotecluster-sample not supported 25h

c1-fs2 True remotecluster-sample not supported 10m
```

2. To create another filesystem served by a different remote cluster, remotecluster-sample-2, define a yaml as follows:

This assumes that you have already created a RemoteCluster resource called **remotecluster-sample-2** per the instructions in RemoteClusters section.

```
apiVersion: scale.spectrum.ibm.com/v1beta1
kind: Filesystem
metadata:
   labels:
    app.kubernetes.io/instance: ibm-spectrum-scale
    app.kubernetes.io/name: cluster
   name: xyz-fs2
   namespace: ibm-spectrum-scale
spec:
   remote:
   cluster: remotecluster-sample-2
   fs: fs2
```

When applied, filesystem £s2 hosted by the remote cluster remotecluster-sample-2 will be made available to the container native cluster.

At this point, displaying the filesystems will show the following output:

Encryption

IBM Storage Scale container native supports remote mount of an encrypted filesystem. Encryption is managed through use of encryption keys stored on key server.

The following key servers are supported:

• IBM Security Guardium Key Lifecycle Manager (SKLM)

EncryptionConfig spec

The following table describe the properties for **EncryptionConfig**:

Table 1. EncryptionConfig property and description

Property	Required	Default	Description
metadata.nam e	Yes	None	The name of the CR.
server	Yes	None	The key server host name or IP in which encryption keys are stored.
backupServer s	No	None	The backup key servers configured for high availability. This field is optional.
port	No	None	It can be used to override the default port for the key server.
cacert	No	None	The ConfigMap storing CA and endpoint certificates used while adding/renewing key server certificate chain.
secret	Yes	None	The name of the basic-auth secret containing the username and password to the key server.
tenant	Yes	None	The tenant name on the key server that contains encryption keys. This has to be the same tenant name that is used to store the encryption keys of the remote storage file system.
client	Yes	None	The key client to communicate with the key Server.
remoteRKM	Yes	None	The RKM ID from the storage cluster corresponding to given key server and tenant.

Deleting a EncryptionConfig custom resource does **not delete** the encryption configuration from the IBM Storage Scale container native cluster.

Updating client and tenant is not recommended as it causes loss of master encryption keys for that tenant.

For more information, enter the oc explain encryptionconfig.spec command.

EncryptionConfig status

Status Conditions can be viewed as a snapshot of the current and most up-to-date status of a EncryptionConfig instance.

• The Success condition is set to True if the EncryptionConfig is successfully configured.

Examples

To give IBM Storage Scale container native access to the encryption keyserver, an **EncryptionConfig** custom resource must be created. The configuration must add the same key server and tenant as configured on storage cluster hosting the filesystem. You can define more than one **EncryptionConfig** custom resource.

For more information, see Encryption in IBM Storage Scale documentation.

Pre-requisites

· Create a secret containing the administrator username and password credentials to the key server.

```
oc create secret generic keyserver-credentials -n ibm-spectrum-scale \
--from-literal=username=<keyserver_admin_name> \
--from-literal=password=<keyserver_admin_password>
```

- If using CA certificates, create the **ConfigMap** holding the CA certificate chain.
 - Obtain CA certificates and endpoint/server certificates. Separate the root certificate and the intermediate certificates into the following .crt files:
 - Root certificate: root.crt
 - Server or Endpoint certificate: endpoint.crt
 - Intermediate certificates: intermediate<numeric index>.crt
 - 2. Create the ConfigMap with the following command:

```
oc create ConfigMap sample-ca-cert \
--from-file=/path/to/root.crt \
--from-file=/path/to/intermediate1.crt \
--from-file=/path/to/intermediate2.crt \
--from-file=/path/to/intermediate3.crt \
--from-file=/path/to/endpoint.crt \
-n ibm-spectrum-scale
```

• Encryption details from storage cluster, specifically, tenant and RKMID.

If the core pods are unable to resolve the IP address of the IBM SKLM server, you can add hostAliases entries in the Cluster custom resource. For more information, see <u>Cluster</u>.

Configure EncryptionConfig custom resource

The following steps describe creating a **EncryptionConfig** CR.

1. Download a copy of the sample encryptionconfig.remote.yaml from the GitHub repository.

```
curl -fs https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-native/v5.1.9.x/generated/scale/v1beta1/encryptionconfig/encryptionconfig.remote.yaml > encryptionconfig.remote.yaml || echo "Failed to download EncryptionConfig Sample CR"
```

- 2. Make changes specific to your installation. For more information about the EncryptionConfig specification, see EncryptionConfig spec.
 - Replace keyserver.example.com with your keyserver hostname
 - Replace keyserver1.example.com, keyserver2.example.com, etc with your backup keyserver hostnames
 - Replace **sampleTenant** with your tenant name
 - Replace sampleClient with your client name
 - Replace sampleRKM with your RKMID
 - If using self-signed certificates, comment out the cacert field in the spec
- 3. Apply the cluster yaml using the following command:

```
oc apply -f encryptionconfig.remote.yaml
```

Once deployed, use the command oc edit encryptionconfig <encryptionconfig-name> -n ibm-spectrum-scale to modify properties of the resource.

Validating installation

The following sections will help validate the installation.

- Verifying the IBM Storage Scale container native cluster
- Status and events

Verifying the IBM Storage Scale container native cluster

Verify whether the deployment of the IBM Storage Scale container native cluster is done correctly.

Complete the following steps:

For more information, see <u>Debugging IBM Storage Scale deployment</u>.

1. Verify that the Operator has created the cluster by checking the pods.

```
oc get pods -n ibm-spectrum-scale
```

A sample output is shown:

# oc get pods -n ibm-spectrum-scal	Le			
NAME	READY	STATUS	RESTARTS	AGE
ibm-spectrum-scale-gui-0	4/4	Running	0	5m45s
ibm-spectrum-scale-gui-1	4/4	Running	0	2m9s
ibm-spectrum-scale-pmcollector-0	2/2	Running	0	5m15s
ibm-spectrum-scale-pmcollector-1	2/2	Running	0	4m11s
worker0	2/2	Running	0	5m43s
worker1	2/2	Running	0	5m43s
worker3	2/2	Running	0	5m45s

The following list includes considerations about the IBM Storage Scale cluster creation and its pods:

- The cluster takes some time to create.
- One core pod per node gets created on nodes matching the nodeSelector.
- Core pods can take several minutes to move to Running status.
- GUI pods do not achieve the Running status until all the core pods are in a Running status.
- Two GUI pods are created, where the second is created after the first is moved to Running status.
- Two pmcollector pods are created, where the second is created after the first is moved to Running status.
- Resulting cluster should have one core pod per node as specified by the nodeSelector, two GUI pods, and two pmcollector pods.
- 2. Verify that the IBM Storage Scale cluster is created correctly:
 - a) Enter the mmlscluster command:

```
oc exec $(oc get pods -lapp.kubernetes.io/name=core \
-ojsonpath="{.items[0].metadata.name}" -n ibm-spectrum-scale) \
-c gpfs -n ibm-spectrum-scale -- mmlscluster
```

The output from the command should show that an IBM Storage Scale cluster has been created, and all nodes as specified by the nodeSelector are present.

```
Node Daemon node name

Designation

1 worker2.daemon.ibm-spectrum-scale.stg.mycluster.example.com. 172.29.0.145

worker2.admin.ibm-spectrum-scale.stg.mycluster.example.com. 172.29.0.146

worker1.admin.ibm-spectrum-scale.stg.mycluster.example.com. quorum-manager-perfmon
3 worker3.daemon.ibm-spectrum-scale.stg.mycluster.example.com. 172.29.0.148

worker3.admin.ibm-spectrum-scale.stg.mycluster.example.com. 172.29.0.148

worker3.admin.ibm-spectrum-scale.stg.mycluster.example.com. quorum-manager-perfmon
```

b) Enter the mmgetstate command:

```
oc exec $(oc get pods -lapp.kubernetes.io/name=core \
-ojsonpath="{.items[0].metadata.name}" -n ibm-spectrum-scale) \
-c gpfs -n ibm-spectrum-scale -- mmgetstate -a
```

The output from the command should show that the GPFS state for all nodes are listed as active.

Node number	Node name	GPFS state
1	worker0	active
2	worker1	active
3	worker3	active

- 3. Verify that the Remote Cluster authentication is successfully created.
 - a. Get a list of the remote clusters.

```
oc get remotecluster.scale -n ibm-spectrum-scale
```

b. Inspect the remote clusters and ensure that the value for **READY** is **True**.

Example:

```
# oc get remotecluster.scale -n ibm-spectrum-scale

NAME HOST READY AGE
remotecluster-sample cnsa-storage.example.ibm.com True 30h
```

- 4. Verify that the storage cluster file system is configured:
 - a. Get a list of the file systems:

```
oc get filesystem.scale -n ibm-spectrum-scale
```

b. Inspect the file systems and ensure that the value for **ESTABLISHED** is **True**.

5. Manually verify that the file system is mounted using the mmlsmount command.

```
oc exec $(oc get pods -lapp.kubernetes.io/name=core \
-ojsonpath="{.items[0].metadata.name}" -n ibm-spectrum-scale) \
-c gpfs -n ibm-spectrum-scale -- mmlsmount remote-sample -L
```

Example output:

```
File system remote-sample (gpfs1.local:fs1) is mounted on ...

172.29.0.148 worker3.daemon.ibm-spectrum-scale.stg.mycluster.example.com. ibm-spectrum-scale.mycluster.example.com

172.29.0.146 worker1.daemon.ibm-spectrum-scale.stg.mycluster.example.com. ibm-spectrum-scale.mycluster.example.com
```

```
172.29.0.145 worker2.daemon.ibm-spectrum-scale.stg.mycluster.example.com. ibm-spectrum-scale.mycluster.example.com
```

- 6. Verify that there are no problems reported in the operator status and events. For more information, see Status and events.
- 7. Verify that the CSI pods are up and running.

```
oc get pods -n ibm-spectrum-scale-csi
```

8. Verify that the Core DNS pods are up and running. There will be at least one Core DNS pod per core pod.

```
oc get pods -n ibm-spectrum-scale-dns
```

Status and events

The custom resource (CR) objects contain helpful information which can be retrieved by entering the oc describe command. For each object, a Status attribute provides the last observed state of the resource. In the retrieved information, a log of recent Events pertaining to the resource is also shown. This information can be helpful to check the desired state of the resource or when debugging with the IBM Storage Scale container native cluster. For more information, see Application Introspection and Debugging in Kubernetes documentation.

The oc describe <CR> -n ibm-spectrum-scale command is used to view the *status* and *events* of the custom resources, such as cluster, daemon, filesystem, remotecluster, callhome and others.

The Status can be seen in the Conditions section:

```
$ oc describe callhome.scale -n ibm-spectrum-scale
Status:
 Conditions:
   Last Transition Time: 2021-08-31T12:54:05Z
   Message:
                           Callhome is enabled.
    Reason:
                           Enabled
   Status:
                           True
   Type:
                           Enabled
   Last Transition Time: 2021-08-31T12:54:07Z
   Message:
                           Successfully tested connection to the IBM Callhome Server.
   Reason:
                           TestPassed
   Status:
                           True
    Type:
                           Success
  Mode:
                           test
```

A Condition has the following fields:

- Type: Type of condition.
- Status: Status of the condition, one of True, False or Unknown.
- Reason: The reason contains a programmatic identifier indicating the reason for the condition's last transition.
- Message: Message is a human readable message indicating details about the transition.
- Last Transition Time: This is the last time the condition transitioned from one status to another (For example, from False to True).

The **Events** section of **oc describe** output lists the *Events*:

Enter the oc get crd | grep ibm command to see a full list of CRs that can be checked for status and events with the oc describe command.

- The Events disappear after they are created.
- The Status and Events shown in the documentation are examples and may look slightly different on your system.

Using IBM Storage Scale GUI

The following section describes how to use functionality in the IBM Storage Scale container native cluster.

IBM Storage Scale container native GUI

You can manage and monitor cluster and node information through the IBM Storage Scale container native GUI.

Red Hat OpenShift users

Red Hat OpenShift roles are mapped to two IBM Storage Scale GUI user groups. Details are provided in the following table:

Table 1. Roles and privileges

	Roles			Privileges	
OpenShift Container Platform role	GUI role	View	Download snap ¹	Manage events ²	Test connection for call home
cluster-admin	Maintenance	Yes	Yes	Yes	Yes
ibm-spectrum-scale-maintenance	Maintenance	Yes	Yes	Yes	Yes
ibm-spectrum-scale-monitor	Monitor	Yes	No	No	No

Add a role to a user or a group

Users who are created on the Red Hat OpenShift Container Platform having a role of ibm-spectrum-scale-maintenance or ibm-spectrum-scale-monitor can log in to the IBM Storage Scale container native GUI through Single Sign On using the OAuth implementation.

```
oc adm policy add-cluster-role-to-user <role> <user>
```

oc adm policy add-cluster-role-to-group <role> <group>

Accessing the IBM Storage Scale GUI

To access the IBM Storage Scale GUI, complete the following steps:

1. In a browser, go to https://ibm-spectrum-scale-gui-ibm-spectrum-scale.apps.<ocp-domain>/, where <ocp-domain> is the domain of your Red Hat OpenShift cluster. There, you should see the login page for IBM Storage Scale GUI.

If your Red Hat OpenShift domain is: ocp4.example.com, the URL would be https://ibm-spectrum-scale-gui-ibm-spectrum-scale.com.

- 2. Click Sign in and you are redirected to the Red Hat OpenShift login page.
- 3. Authenticate by using your OpenShift Container Platform user credentials. On success, you are redirected to the IBM Storage Scale GUI.
- 1. Ability to download master and non-master snaps. €
- 2. Ability to mark events as resolved, hiding resolved tips and notifications.

Upgrading

If upgrading from IBM Storage Scale container native less than 5.1.5.0, STOP. It is **required** to first upgrade to v5.1.5.0 before continuing on to higher levels. For more information, see <u>Supported upgrade paths</u>.

IBM Storage Scale container native upgrade consists of these topics:

- <u>Supported upgrade paths</u>
- Upgrading IBM Storage Scale container native
- Post upgrade tasks

Supported upgrade paths

Use the following table to understand the supported upgrade paths for IBM Storage Scale container native.

Table 1. Supported upgrade paths

Upgrade from	To: 5.1.5.x	To: 5.1.6.x	To: 5.1.7.x	To: 5.1.9.x
5.1.5.x	Yes	Yes	Yes	No
5.1.6.x		Yes	Yes	No
5.1.7.x			Yes	Yes
5.1.9.x				Yes

If upgrading from IBM Storage Scale container native less than 5.1.5.0, it is **required** to first upgrade to v5.1.5.0 before continuing on to higher levels.

Upgrading IBM Storage Scale container native

The following section describes how to upgrade the IBM Storage Scale container native cluster.

While an upgrade is in progress, do not perform the following:

- Do not make changes to the Cluster custom resource.
- Do not attempt to add a node to the cluster.

During an upgrade, the IBM Storage Scale operator orchestrates the upgrade procedure in a rolling node-by-node fashion. Each node will be:

- Cordoned (tainted unschedulable)
- Drained (its pods safely evicted and rescheduled to other available nodes)
- · Rebooted, if necessary
- Uncordoned (returning it to normal service)

After the node is schedulable, IBM Storage Scale and IBM Storage Scale Container Storage Interface (CSI) pods will start. Applications may fail to attach storage until the system is started.

Prerequisites

• All the core pods need to be in running status.

Use the following command to check the status of the core pods:

```
oc get daemons ibm-spectrum-scale -n ibm-spectrum-scale -ojson | jq -r '.status.podsStatus'
```

Ensure that there are no pods in any of the following states:

- starting
- o terminating
- o unknown
- waitingForDelete

In the following example, the output shows 1 pod in "waitingForDelete", so the upgrade should **not** be done at this time.

```
$ oc get daemons ibm-spectrum-scale -n ibm-spectrum-scale -ojson | jq -r '.status.podsStatus'
{
"running": "4",
"starting": "0",
"terminating": "0",
"unknown": "0",
"waitingForDelete": "1"
}
```

Upgrade steps

Complete the following steps to upgrade:

Before beginning the upgrade to IBM Storage Scale container native from v5.1.7.0, the level of Red Hat OpenShift installed must not exceed 4.12.

1. Stop the running operator pod by setting the ${\tt replicas}$ in the deployment to 0.

```
\verb| oc scale deployment ibm-spectrum-scale-controller-manager -n ibm-spectrum-scale-operator --replicas=0| \\
```

2. Delete the old security context constraint.

```
oc delete scc ibm-spectrum-scale-privileged
```

3. Delete the old role binding for privilege.

```
oc delete rolebinding -n ibm-spectrum-scale ibm-spectrum-scale-privileged --ignore-not-found
```

- 4. Delete the MutatingWebhookConfiguration and ValidatingWebhookConfiguration. These will be created in later steps.
 - oc delete MutatingWebhookConfiguration ibm-spectrum-scale-mutating-webhook-configuration oc delete ValidatingWebhookConfiguration ibm-spectrum-scale-validating-webhook-configuration
- 5. Apply the new manifests.

oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-native/v5.1.9.x/generated/scale/install.yaml

Verification

When the new IBM Storage Scale container native operator is deployed, the upgrade process begins. It takes some time to complete as the new code is rolled out into the cluster.

You can check the progress of pod restarts and node reboots by looking at information provided in the Daemon CR under .status.statusDetails.Query the Daemon CR using the following command: oc describe daemon -n ibm-spectrum-scale.

Code version updated

The version details will be listed under .status.versions in the Daemon CR and will be updated as the pods roll. The following command will show the versions that core pods currently have on them. Wait until all the pods are reporting the same new version.

oc get daemon -n ibm-spectrum-scale -ojson | jq -r .items[].status.versions

Post upgrade tasks

The following section describes actions that should be performed on the cluster to complete the upgrade of IBM Storage Scale container native to the new code levels.

Apply the patch to the cluster CR to enable network policies

Issue the following command to enable network policies to your IBM Storage Scale deployment:

```
oc patch cluster.scale.spectrum.ibm.com ibm-spectrum-scale --type='json' \
-p='[{"op": "add", "path": "/spec/networkPolicy", "value":{}}]'
```

For more information, see Network policies.

Approve the new release level

It is recommended to first use the cluster with the new code of IBM Storage Scale installed, until you are sure to permanently upgrade the cluster to the new level. When you are ready to enable the new functionality of the installed release and lock in the new level, you need to approve an <code>UpgradeApproval</code> resource. An <code>UpgradeApproval</code> resource is automatically created by the operator if a release level change is detected after the upgrade.

For more information, see File system format changes between versions of IBM Storage Scale in the IBM Storage Scale documentation.

Complete the following steps:

1. Check to see if any cluster upgrade approvals are present that require action.

An upgrade approval that shows nothing under the COMPLETED field are ones that require some action.

```
oc get upgradeapproval -n ibm-spectrum-scale
```

If an upgrade approval does not appear, check the Daemon CR status to ensure that all pods are on the new version using: oc get daemon -n ibm-spectrum-scale -ojson | jq -r .items[].status.versions

2. Check the minReleaseLevel of the cluster:

```
oc exec $(oc get pods -lapp.kubernetes.io/name=core -ojsonpath="{.items[0].metadata.name}" \
-n ibm-spectrum-scale) -c gpfs -n ibm-spectrum-scale -- mmlsconfig release
```

3. To approve the upgrade approval job, execute the following command:

```
oc patch upgradeapproval <upgradeapproval-name> -n ibm-spectrum-scale --type='json' \
-p='[{"op": "replace", "path": "/spec/approved", "value":true}]'
```

Full Example:

```
# Check for any upgrade approvals for TYPE=cluster
$ oc get upgradeapproval -n ibm-spectrum-scale
               TYPE
                         FILESYSTEM LAST SCHEDULE TIME LAST SUCCESSFUL TIME RUNNING
                                                                                            COMPLETED
NAME
upgrade-rmlp4 cluster
# check the daemon status for the versions deployed on each core pod
$ oc get daemon -n ibm-spectrum-scale -ojson | jq .items[].status.versions
    "count": "3",
    "version": "5.1.9.1"
 }
# check the current cluster release version
$ oc exec $(oc get pods -lapp.kubernetes.io/name=core -ojsonpath="{.items[0].metadata.name}" -n ibm-
spectrum-scale) -c gpfs -n ibm-spectrum-scale -- mmlsconfig release
minReleaseLevel 5.1.5.0
# patch the upgrade approval
$ oc patch upgradeapproval upgrade-rmlp4 -n ibm-spectrum-scale \
> --type='json' -p='[{"op": "replace", "path": "/spec/approved", "value":true}]'
upgradeapproval.scale.spectrum.ibm.com/upgrade-rmlp4 patched
# query the upgrade approval to see it running
$ oc get upgradeapproval -n ibm-spectrum-scale
NAME
               TYPE
                       FILESYSTEM LAST SCHEDULE TIME LAST SUCCESSFUL TIME
COMPLETED
upgrade-rmlp4 cluster
                                      23s
                                                                                   ibm-spectrum-
scale/worker2/gpfs/upgradeCluster_p6Jhz9
# upgrade approval job completed
$ oc get upgradeapproval -n ibm-spectrum-scale
NAME
               TYPE
                         FILESYSTEM
                                      LAST SCHEDULE TIME
                                                           LAST SUCCESSFUL TIME
                                                                                  RUNNING
                                                                                            COMPLETED
upgrade-rmlp4 cluster
                                      38s
                                                           6s
                                                                                            Successful
# verify that the cluster release level has been updated
$ oc exec $(oc get pods -lapp.kubernetes.io/name=core -ojsonpath="{.items[0].metadata.name}" -n ibm-
spectrum-scale) -c gpfs -n ibm-spectrum-scale -- mmlsconfig release
minReleaseLevel 5.1.9.1
```

For more information, see Completing the upgrade to a new level of IBM Storage Scale in IBM Storage Scale documentation.

Remote storage cluster considerations

The storage cluster is supported to be down-level from the IBM Storage Scale container native cluster, but it is strongly recommended that the versions match. CSI functionality is highly dependent upon the IBM Storage Scale release, filesystem level, and version, installed on the storage cluster. If the storage cluster is running an earlier version, some functionality may not be available. For more information about CSI features and required levels, see Hardware and software requirements in IBM Storage Scale CSI documentation. For more information about compatibility and software matrix, see Section 17.3 in IBM Storage Scale FAQ documentation.

• Run the following step for each filesystem to upgrade to the latest metadata format:

If the storage cluster is being mounted by other GPFS client clusters that are running a prior version of code, performing the followin step will make those client cluster unable to mount filesystems from this storage cluster.

```
mmchfs <Filesystem> -V full
```

This step is optional but recommended for enabling the functionality provided at the latest levels of code.

• Enable auto-inode-limit of the file system.

```
mmchfs <Filesystem> --auto-inode-limit
```

The --auto-inode-limit option is available only at filesystem format level of 28.00 or later. Enable this option as soon as the filesystem is updated to 28.00 or later.

Configuring IBM Storage Scale Container Storage Interface (CSI) driver

Use the following sections to help with deploying IBM Storage Scale CSI with IBM Storage Scale container native:

- · Configuring storage class to use CSI driver
- Managed CSI fields
- Setting primary file set

Configuring storage class to use CSI driver

Storage class is used for creating lightweight volumes and fileset based volumes.

Lightweight (directory) based volumes

A Storage class example for creating directory (lightweight) based volumes is provided.

Adjust the parameters as per your environment.

```
# cat storageClass_Lightweight.yaml
apiVersion: storage.k8s.io/v1
kind: StorageClass
metadata:
    name: ibm-spectrum-scale-csi-lt
provisioner: spectrumscale.csi.ibm.com
parameters:
    volBackendFs: "fs1"
    volDirBasePath: "pvfileset/lwdir" # relative path from filesystem mount point for creating lightweight
volume
reclaimPolicy: Delete
```

Enter the command to create the lightweight storage class:

oc create -f storageClass Lightweight.yaml

Fileset based volumes

A Storage class example for creating fileset based volumes is provided.

Adjust the parameters as per your environment.

```
# cat storageClass_fileset.yaml
apiVersion: storage.k8s.io/v1
kind: StorageClass
metadata:
    name: ibm-spectrum-scale-csi-fileset
provisioner: spectrumscale.csi.ibm.com
parameters:
    volBackendFs: fs1
    clusterId: "17797813605352210071" # cluster ID of storage cluster
reclaimPolicy: Delete
```

A sample fileset based Storage Class is created using the primary file system as the volBackendFs. It can be used to create other storage classes with the remote cluster ID that is provided. Enter the oc get storageclass -oyaml > storageClass_fileset.yaml command to create a copy of this storage class. Then configure parameters as desired and create the configured storage class using the following command:

```
oc create -f storageClass_fileset.yaml
```

For more information, see Storage class in IBM Storage Scale CSI documentation.

Managed CSI fields

In the CSI Custom Resource (CR) that is created by the CSI Controller, there are some fields that are managed by the controller. If these fields are changed, they are overridden by the controller. If required, you can change any field that is not managed by the controller.

Managed fields

The following fields are populated with default values by the CSI Controller. Any new values are honored, however, any values that are manually removed are repopulated upon the next controller reconcile cycle.

Table 1. Managed fields description

Field	Default Value(s)
clusters	Two entries are created by default (local and remote clusters).
clusters.id	Local Cluster ID / Cluster ID of Remote cluster.
clusters.secrets	ibm-spectrum-scale-gui-csiadmin

Field	Default Value(s)
clusters.secureSSL Mode	false
clusters.primary.pri maryFs	The name of the first file system created (only applicable in local. cluster entry)
clusters.restApi.gui Host	<pre>ibm-spectrum-scale.<container-native-namespace> for local cluster entry and the host specified in the remote cluster CR for the remote cluster entry.</container-native-namespace></pre>
tolerations	NoSchedule, NoExecute and CriticalAddonsOnly
attacherNodeSelec tor	scale=true
provisionerNodeSel ector	scale=true
pluginNodeSelector	scale=true
snapshotterNodeSe lector	scale=true

Editing the CSI CR

To edit the CSI CR, enter this command and fill the desired field:

oc edit csiscaleoperator -n ibm-spectrum-scale-csi

Setting primary file set

After the CSI CR is created by the CSI controller the primary file set needs to be set in order to avoid the naming conflict. Once this field is added the CSI driver pods are deleted and recreated one by one.

Enter the oc edit csiscaleoperator -n ibm-spectrum-scale-csi command and add the primaryFset field:

```
clusters:
    - id: "11171289193543683780"
    secrets: "secret-cnsa"
    secureSslMode: false
    primary:
        primaryFs: "fs5"
        primaryFset: "cluster1-fset" #<---- example
        remoteCluster: "2303539379337927879"
    restApi:
        - guiHost: "ibm-spectrum-scale-gui.ibm-spectrum-scale"

- id: "2303539379337927879"
    secrets: "secret-storage"
    restApi:
        - guiHost: "koopa-gui-1.fyre.ibm.com"</pre>
```

Maintenance for a deployed cluster

The maintenance of a deployed IBM Storage Scalecontainer native cluster includes certain procedures.

- Shutting down a cluster
- IBM Storage Scale container native cluster and node maintenance
- Red Hat OpenShift maintenance
- Starting the cluster after shutdown
- Adding a new node to an existing cluster
- IBM Storage Scale storage cluster

Shutting down a cluster

Before you begin the maintenance procedure, the IBM Storage Scale container native cluster must be shut down to avoid any issues.

For more information, see On the nodes running CSI sidecars in IBM Storage Scale CSI documentation.

Complete the following steps to shut down a cluster:

1. Stop the running operator pod by setting the replicas in the deployment to 0.

```
oc scale deployment ibm-spectrum-scale-controller-manager -n ibm-spectrum-scale-operator --replicas=0
```

2. Enter the following command to remove the CSI label:

```
oc label node --all scale-
```

3. Enter the following command to delete the running core pods:

```
oc delete pods -lapp.kubernetes.io/name=core -n ibm-spectrum-scale
```

IBM Storage Scale container native cluster and node maintenance

The following section provides information on changing the IBM Storage Scale cluster configuration.

Limitations

While a configuration change is in progress, do not perform the following:

- Do not upgrade IBM Storage Scale container native.
- Do not attempt to add a node to the cluster.
- · Do not upgrade Red Hat OpenShift.

Updating existing cluster configuration

IBM Storage Scale cluster configuration is controlled by the Cluster resource.

To edit configuration for an existing cluster:

```
oc edit cluster.scale
```

When a core pod configuration requires an update, the IBM Storage Scale operator will cordon, drain, reboot (if necessary), and uncordon the node. This is performed one node at a time. Once the drain is complete, the core pod will be updated with the new configuration.

If the node was previously cordoned before the update, the operator will not uncordon the node.

Updating cluster configuration via upgrade

An upgrade of IBM Storage Scale container native is also considered an update of the cluster configuration, as this will likely introduce changes to pod specification, e.g. update of container images.

For more information about how IBM Storage Scale Operator orchestrates an upgrade, see Upgrading.

Red Hat OpenShift maintenance

When a Red Hat OpenShift Administrator needs to perform maintenance on a node that involves a drain, the IBM Storage Scale operator will intercept and handle the updates safely. If the operator is not running, the interception and drain will fail.

Limitations

While Red Hat OpenShift configuration or maintenance is in progress, do not perform the following:

- Do not update IBM Storage Scale container native configuration.
- Do not upgrade IBM Storage Scale container native.
- Do not attempt to add a node to the cluster.

In addition, it is possible to deadlock waiting for applications to safely evict from node(s) undergoing maintenance. This can occur if too many nodes are undergoing maintenance concurrently, and application workload would be disrupted if further action is taken. In these cases, the OpenShift Administrator should safely evict and reschedule impacted applications.

For more information about troubleshooting cluster maintenance issues, see <u>Identifying applications preventing cluster maintenance</u>.

Red Hat OpenShift cluster configuration update

Red Hat OpenShift machine configuration is managed by the Machine Config Operator (MCO). When configuration changes impact node operation, MCO will cordon and drain nodes to perform the maintenance action. Existing pods on the node will be evicted and rescheduled to another available node. The IBM Storage Scale operator intercepts requests from the Kubernetes scheduler to ensure that the applications running IBM Storage Scale storage workloads are removed before the IBM Storage Scale core pod on the corresponding node. This allows the application to gracefully shutdown before storage access on the node is disrupted.

Once the core pod is safely removed, the MCO update will continue and reboot the node, if necessary. After the MCO update is complete, the node will be uncordoned and schedulable.

OpenShift node administrator maintenance

When an OpenShift Administrator needs to perform manual maintenance on a node, it should be cordoned and safely drained of pods. The cordon will taint the node as unschedulable and safely evicts applications. This will allow the application to reschedule to other available nodes, and notifies the IBM Storage Scale operator of the desired node maintenance.

1. Drain the node requiring maintenance. The drain command will also cordon the node.

```
oc adm drain <node name>
```

- 2. Once drain completes (without error), the node can then have maintenance performed. e.g., powering it down.
- 3. When maintenance is complete, uncordon the node to allow it to resume normal operation and scheduling.

```
oc adm uncordon <node name>
```

Starting the cluster after shutdown

If the IBM Storage Scale cluster was shut down, start the cluster using the following steps:

Ensure that the worker nodes are in Ready state before restarting the IBM Storage Scale cluster by entering the oc get nodes command. If any of the worker nodes are in a state other than Ready, the IBM Storage Scale cluster fails to restore.

1. Scale up the operator pods by setting the replicas in the deployment to 1.

```
oc scale deployment ibm-spectrum-scale-controller-manager -n ibm-spectrum-scale-operator --replicas=1

After the operator pod comes back up, the core pods are rescheduled and the default CSI label is re-applied.
```

Adding a new node to an existing cluster

To add a new node:

- Ensure the new node belongs to the existing Machine Config Pool configured to include the kernel-devel extensions. This was configured
 as a prerequisite to IBM Storage Scale container native installation, and defaults to Red Hat OpenShift worker nodes. For more
 information, see Red Hat OpenShift Container Platform.
- Ensure the new node has a node selector that matches the existing cluster's node selector. For more information, see Node selectors.

When the node selector is recognized by the IBM Storage Scale Operator, a pod will be created on the new node and will go to running state within a few minutes.

Check the progress of the creation of the new pod by entering the following command:

```
oc get pods -n ibm-spectrum-scale
```

Ensure the new pod is ready by entering the following command:

```
oc exec -n ibm-spectrum-scale \ $(oc get pods -lapp.kubernetes.io/name=core -n ibm-spectrum-scale -ojsonpath="{.items[0].metadata.name}") \ -- mmgetstate -a
```

The output appears as shown:

Node number	Node name	GPFS state
1	worker1	active
2	new node	arbitrating
3	worker0	active

Once the pod has finished arbitrating and enters the active state, CSI will automatically be configured for use by the pod by the IBM Storage Scale and CSI Operators. Once CSI has completed configuration, then the newly added node can now be used for running applications.

IBM Storage Scale storage cluster

The following sections describe maintenance tasks for the remote IBM Storage Scale storage cluster.

- · Updating remote mount access key on storage cluster
- Updating authentication to the storage cluster

Updating remote mount access key on storage cluster

An access key is used in the IBM Storage Scale storage cluster to grant file system access to the IBM Storage Scale container native cluster. The access key can be changed by following these steps:

1. Identify the RemoteCluster resource that you intend to change the access key.

```
oc get remotecluster -n ibm-spectrum-scale
```

The **HOST** column identifies the IBM Storage Scale storage cluster GUI endpoint. The **NAME** of the resource is used in the following steps as remote-cluster>.

1. On the IBM Storage Scale storage cluster, generate a new access key by entering the following command:

```
mmauth genkey new
```

Now, the storage cluster temporarily has two access keys.

2. Begin the update of the new generated key from the IBM Storage Scale container native cluster by labeling the RemoteCluster resource:

```
oc label remotecluster <remote-cluster> scale.spectrum.ibm.com/update= -n ibm-spectrum-scale
```

3. Check the success by watching status and events of the remote cluster resource:

```
oc describe remotecluster <remote-cluster> -n ibm-spectrum-scale
```

- 4. Verify that all your client clusters remote mounting file systems from this storage cluster is using the new key.
- 5. Commit the new access key by using the following command:

```
mmauth genkey commit
```

When the new key is committed, the old key is removed.

For more information, see mmauth command.

Updating authentication to the storage cluster

Use the following documentation as a guide for updating authorization on the remote storage cluster. This procedure involves two parts:

- 1. <u>Updating user passwords on the storage cluster</u>
- 2. Updating user secrets for the storage cluster on Red Hat OpenShift

Updating user passwords on the storage cluster

To change the user passwords on the storage cluster, run the following actions on the storage cluster. For more information about users, see <u>Creating Container Operator and CSI users</u>.

The administrator can change the password by using the following commands:

1. To change the container native operator GUI user, enter the following command on the storage cluster:

```
/usr/lpp/mmfs/gui/cli/chuser cnsa storage gui user -p new cnsa storage gui password
```

2. To change the CSI GUI user, enter the following commands on the storage cluster:

```
/usr/lpp/mmfs/gui/cli/chuser csi_storage_gui_user -p new_csi_storage_gui_password
```

The chuser command needs to be run on a node where the GUI is installed in the storage cluster.

Updating user secrets for the storage cluster on Red Hat OpenShift

When user passwords on the remote IBM Storage Scale storage cluster changes, the corresponding Kubernetes secrets with the credentials must be updated for the operator to maintain communication. For more information about these secrets, see Creating secrets for storage cluster GUI users.

 To update the secret named cnsa-remote-mount-storage-cluster-1 in the ibm-spectrum-scale namespace, enter the following command:

```
oc patch secret cnsa-remote-mount-storage-cluster-1 -n ibm-spectrum-scale \
-p="{\"data\":{\"password\": \"`echo -n 'new_cnsa_storage_gui_password' | base64`\"}}"

Verify that the secret is updated:

echo -n `oc get secret cnsa-remote-mount-storage-cluster-1 -n ibm-spectrum-scale \
-ojson | jq -r .data.password` | base64 -d && echo

2. To update the secret named csi-remote-mount-storage-cluster-1 in the ibm-spectrum-scale-csi namespace, enter the following command:

oc patch secret csi-remote-mount-storage-cluster-1 -n ibm-spectrum-scale-csi \
-p="{\"data\":{\"password\": \"`echo -n 'new_csi_storage_gui_password' | base64`\"}}"

Verify that the secret is updated:

echo -n `oc get secret csi-remote-mount-storage-cluster-1 -n ibm-spectrum-scale-csi \
-ojson | jq -r .data.password` | base64 -d && echo
```

Cleanup

The following procedures outline the steps that are required to cleanup various pieces of the IBM Storage Scale container native solution. To delete the cluster and uninstall the product, run through each of the following sections.

- Removing applications
- Cleanup Kubernetes resources
 - o <u>Filesystems</u>
 - Remote clusters
 - o <u>Cluster</u>
- Cleanup IBM Storage Scale CSI
- <u>Cleanup IBM Storage Scale container native</u>
- Cleanup Red Hat OpenShift nodes
- <u>Cleanup storage cluster</u>
- Cleanup on AWS ROSA

Removing applications

If there are applications that are accessing the storage filesystem through IBM Storage Scale CSI, they must be stopped before continuing.

- 1. Stop all the applications that are accessing storage via the IBM Storage Scale CSI driver.
- 2. Delete all the Persistent Volume Claims (PVCs) and Persistent Volumes (PVs) provisioned by IBM Storage Scale CSI Driver.

Cleanup Kubernetes resources

The following sections will help describe how to clean up kubernetes custom resources that may be defined in your IBM Storage Scale container native cluster.

- Filesystems
- RemoteCluster
- Cluster

Filesystems

Deleting a Filesystem custom resource does not result in the operator un-mounting or deleting the remote mount file system configuration on the IBM Storage Scale container native cluster.

Before removing the configuration of the remote mounted file system, ensure that there are no applications actively writing to the file system.

In this example, the sample Filesystem is used:

```
kind: Filesystem
metadata:
    ...
    name: remote-sample
spec:
    remote:
    cluster: remotecluster-sample
    fs: fs1
```

Complete the following steps:

1. Enter the following command to delete the file system from OpenShift.

```
oc delete filesystem remote-sample -n ibm-spectrum-scale
```

2. Log in to a core pod, using the following command, to remove the file system from IBM Storage Scale.

```
oc rsh -n ibm-spectrum-scale worker0
```

· Unmount the file system on all the container native pods.

```
mmunmount remote-sample -a
```

• Delete the remote file system.

```
mmremotefs delete remote-sample
```

- 3. If the remote storage cluster is only configured to mount and serve the single remote-sample file system, you can delete the remote cluster definition. Otherwise, the other file system(s) must be deleted by using the same process mentioned in the prio step.
 - Find the remote clusters.

```
mmremotecluster show all
```

• Delete the remote cluster serving the remote file system. For example, to delete a remote cluster named gpfs.storage.

```
mmremotecluster delete gpfs.storage
```

Remote clusters

Deleting a RemoteCluster custom resource does not result in the operator deleting the access permission of the IBM Storage Scale container native cluster to the file systems on the remote storage cluster. The RemoteCluster controller only handles creating the access permissions.

Before removing the remote cluster credentials, ensure that no file systems are using this credential. For information on removing file system resources, see <u>Filesystem</u>.

For this example, the sample RemoteCluster is used:

```
kind: RemoteCluster
metadata:
   name: remotecluster-sample
spec:
   ...
```

Perform the following steps:

1. Delete the RemoteCluster definition from OpenShift by entering the following command:

```
oc delete remotecluster remotecluster-sample -n ibm-spectrum-scale
```

2. Delete the secure credentials on the storage cluster. For more information, see <u>Cleaning up on the storage cluster</u> page.

Cluster

Complete the following steps to delete a cluster:

1. Record the GPFS cluster name before deleting the cluster.

```
oc get daemon -n ibm-spectrum-scale -o json | jq -r '.items[].status.clusterName'
```

This GPFS cluster name is required in subsequent steps when removing the authorization on the storage cluster.

2. Enter the following command to delete the IBM Storage Scale cluster.

```
oc delete cluster.scale ibm-spectrum-scale
```

Cleanup IBM Storage Scale CSI

For steps to remove CSI from your cluster, see <u>Cleaning up IBM Storage Scale Container Storage Interface driver and Operator by using CLIs.</u>

Cleanup IBM Storage Scale container native

Complete the following steps:

1. Change to a default namespace:

```
oc project default
```

2. Enter the following command to uninstall the operator, kubernetes objects, namespaces, and more.

```
oc delete -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-native/v5.1.9.x/generated/scale/install.yaml --ignore-not-found=true
```

- 3. Enter the following command to clean up the performance monitoring and IBM Storage Scale CSI artifacts.
 - a. Enter the following command to list the PVs with claim of datadir-ibm-spectrum-scale-scale-pmcollector. Two PVs are returned.

```
oc get pv -lapp.kubernetes.io/instance=ibm-spectrum-scale,app.kubernetes.io/name=pmcollector oc delete pv -lapp.kubernetes.io/instance=ibm-spectrum-scale,app.kubernetes.io/name=pmcollector
```

b. Enter the following command to delete the Storage Classes created by performance monitoring and IBM Storage Scale CSI artifacts:

```
oc delete sc -lapp.kubernetes.io/instance=ibm-spectrum-scale,app.kubernetes.io/name=pmcollector oc delete sc ibm-spectrum-scale-sample
```

Cleanup Red Hat OpenShift nodes

IBM Storage Scale container native requires host path volume mounts and creates persistent directories and files on each of the Red Hat OpenShift nodes where core pods are deployed. Removal of these persistent files are needed during clean up and before reinstallation of the cluster.

Complete the following steps to remove the persistent files on the Red Hat OpenShift nodes.

1. Switch to the default project.

```
oc project default
```

2. Enter the following command to list the nodes.

```
oc get nodes -o jsonpath="{range .items[*]}{.metadata.name}{'\n'}"
```

Use the nodeSelector to reduce the set of nodes to cleanup, or run cleanup against all the nodes.

3. From the list of nodes, use the oc debug node command to create a debug pod accessing the host and allowing for the ability to remove the kernel modules and the host path volume-mounted directories that are used by IBM Storage Scale container native:

```
oc debug node/<openshift node> -T -- chroot /host sh -c "rm -rf /var/mmfs; rm -rf /var/adm/ras; rmmod
  tracedev mmfs26 mmfslinux;"
  Example:
  oc debug node/worker0.example.com -T -- chroot /host sh -c "rm -rf /var/mmfs; rm -rf /var/adm/ras;
  rmmod tracedev mmfs26 mmfslinux;"
  Starting pod/worker0examplecom-debug ...
  To use host binaries, run `chroot /host`
  Removing debug pod ...
4. Check that none of the artifacts remain by entering the following validation command:
  oc debug node/<openshift node> -T -- chroot /host sh -c "ls /var/mmfs; ls /var/adm/ras; rmmod tracedev
  mmfs26 mmfslinux;"
  Example:
  oc debug node/worker0.example.com -T -- chroot /host sh -c "ls /var/mmfs; ls /var/adm/ras; rmmod
  tracedev mmfs26 mmfslinux;"
  Starting pod/worker0examplecom-debug ...
  To use host binaries, run `chroot /host`
  ls: cannot access '/var/mmfs': No such file or directory
  ls: cannot access '/var/adm/ras': No such file or directory
  rmmod: ERROR: Module tracedev is not currently loaded
  rmmod: ERROR: Module mmfs26 is not currently loaded
  rmmod: ERROR: Module mmfslinux is not currently loaded
  Removing debug pod ...
  error: non-zero exit code from debug container
5. Remove any node labels that are created by the IBM Storage Scale container native operator:
  oc label node --all scale.spectrum.ibm.com/role-
  oc label node --all scale.spectrum.ibm.com/designation-
```

Cleanup storage cluster

oc label node --all scale-

If your storage cluster is on AWS ROSA, skip this section and see Revoke filesystem access from the storage cluster.

Delete the access permission that is granted to the IBM Storage Scale client cluster for mounting the remote file system by running the following steps on the storage cluster.

1. Enter the following command to query the name of the GPFS clusters that have established authorization to this storage cluster.

```
mmauth show all
```

2. If the name of your GPFS cluster is ibm-spectrum-scale.clustername.example.com, run the following command to remove the client cluster authorization.

mmauth delete ibm-spectrum-scale.clustername.example.com

Cleanup on AWS ROSA

This section provides cleanup procedures that needs to be done on an IBM Storage Scale container native deployment on Red Hat OpenShift Service on AWS (ROSA).

Cleaning up the ROSA worker security group

Complete the following steps to clean up ROSA worker security group:

1. In your AWS Management Console, navigate to the "EC2 Dashboard" in the region where ROSA is installed and select the "Security Groups" option from the navigation pane. Locate the Security Group for ROSA worker security group id and export the following variable.

```
export AWS_ROSA_WORKER_SECURITY_GROUP=<security_group_id>
```

2. Use the following commands to revoke the IBM Storage Scale container native ingress traffic rules.

```
aws ec2 revoke-security-group-ingress --group-id ${AWS_ROSA_WORKER_SECURITY_GROUP} --protocol tcp --port 12345 --source-group ${AWS_ROSA_WORKER_SECURITY_GROUP} aws ec2 revoke-security-group-ingress --group-id ${AWS_ROSA_WORKER_SECURITY_GROUP} --protocol tcp --port 1191 --source-group ${AWS_ROSA_WORKER_SECURITY_GROUP}
```

aws ec2 revoke-security-group-ingress --group-id \${AWS_ROSA_WORKER_SECURITY_GROUP} --protocol tcp --port 60000-61000 --source-group \${AWS_ROSA_WORKER_SECURITY_GROUP}

Revoke filesystem access from the storage cluster

Before revoking access from the storage cluster, ensure that you have fully cleaned up the IBM Storage Scale container native cluster and no longer have any applications utilizing the filesystems.

After IBM Storage Scale container native has been uninstalled, use the following command to revoke the filesystem access:

cloudkit revoke filesystem

The following block shows an example of what you can expect to see when revoking the filesystem:

```
# ./cloudkit revoke filesystem
I: Logging at /root/scale-cloudkit/logs/cloudkit-16-2-2023_0-16-37.log
? Cloud platform name: AWS
                               ! Note !
  Revoke cluster involves unmount of filesystem. Make sure the I/O is
  stopped and data is flushed before proceeding further.
? Select remotemount name: scale-strg-cls-rosa-scale
? IBM Storage Scale Container Native cluster name: ibm-spectrum-scale.stg.rosa-scale.example.com
? Storage cluster management GUI username: administrator
? Storage cluster management GUI password: *******
? Connectivity method to cloud: JumpHost
? Bastion/JumpHost instance login username: ec2-user
? Bastion/JumpHost instance public ip address: xxx.xxx.xxx.195
? Bastion/JumpHost SSH private key file path (will be used only for configuration): /root/bastion_pvt_key
I: Obtaining IBM Storage Scale storage cluster definition.
I: Initiating remote mount revoke configuration.
100% |
(10/10, 1 it/min)
I: IBM Storage Scale cluster configuration completed.
I: Updating storage security group '<sg-storage-hash>' to revoke traffic from OCP security group '<sg-ocp-
group-hash>'
I: Access to IBM Storage Scale cluster 'scale-strg-cls' has been revoked.
```

Monitoring

The IBM Storage Scale container native cluster is monitored by sending the health status and events between its pods.

- System monitor and Kubernetes readiness probe
- <u>Viewing and analyzing the performance data with the IBM Storage Scale bridge for Grafana</u>

System monitor and Kubernetes readiness probe

The scale-monitor sidecar container has the following objectives:

- Runs the containermon service which is monitoring the service (GUI, pmcollector) in the same pod.
- Provides a readiness probe API (HTTPS).
- Sends the health status and events back to the core pod on the same worker node.
- Core pod is forwarding the events to GUI or mmhealth.
- Provides an API for call home data collection.
- Has several debug tools installed and can be used for problem determination.

For more information, see **Container probes** in Kubernetes documentation.

If the monitoring status is HEALTHY, the probe returns success 200. When the "unreadyOnFailed" option is enabled in containermon.conf (default=true), any FAILED state causes the probe to return 500. When a critical event occurred which has the "container_unready=True" flag, the probe returns 501. When the service faces an issue, for example, no service found, it returns 502.

Viewing and analyzing the performance data with the IBM Storage Scale bridge for Grafana

IBM Storage Scale has built-in performance monitoring tool that collects metrics from various GPFS components. These metrics can provide you with a status overview and trends of the key performance indicators. You can view and analyze the collected performance data with Grafana, a third-party visualization software.

For using Grafana, you need a running Grafana instance and the IBM Storage Scale performance monitoring bridge for Grafana deployed on your IBM Storage Scale container native cluster. For more information, see IBM Storage Scale bridge for grafana repository in GitHub.

The IBM Storage Scale bridge for Grafana is an open source tool, available for free usage on IBM Storage Scale devices. It translates the IBM Storage Scale metadata and performance data collected by the IBM Storage Scale performance monitoring tool to query requests acceptable by the Grafana-integrated openTSDB plugin.

The IBM Storage Scale performance monitoring bridge for Grafana can be deployed automatically through the operator. For more information, see Grafana bridge.

For more information about setting up a Grafana instance for monitoring the IBM Storage Scale container native cluster, see <u>Setup Grafana for monitoring a IBM Storage Scale container native cluster in a k8s OCP environment</u> in GitHub documentation.

Support

There may be occasions where you need to troubleshoot or open a support case to IBM for further assistance.

- Common issues
- Known issues
- Troubleshooting
- Gathering data about your cluster

Common issues

Error: daemon and kernel extension do not match

This error occurs when there is an unintentional upgrade of GPFS code and the issue presents itself as the GPFS state is "Down" and the following error is found in the GPFS logs:

Error: daemon and kernel extension do not match

To resolve the issue, follow proper upgrade procedures. The issue occurs because the kernel module cannot be unloaded when a file system is in use. Rebooting the node resolves the problem, or follow procedures to remove application workloads and then enter the following command on the node issue:

rmmod tracedev mmfs26 mmfslinux

For more information, see Removing applications.

RestError: failed to get storage cluster information. errmsg: 401 Unauthorized GET

When describing the RemoteCluster CR using oc describe remotecluster.scale you may see Events that show errors indicating "401 Unauthorized". The IBM Storage Scale GUI REST credentials for storage clusters are stored in kubernetes secrets. The 401/Unauthorized error indicates that the credentials provided by the kubernetes secrets do not match the GUI user credentials in the storage cluster. For more information, see Storage cluster.

There are different possible root causes:

- The GUI user was never created as described in the procedure for creating operator user and group. For more information, see <u>Creating Container Operator and CSI users</u>.
- The GUI user password has expired in the storage cluster and must be changed.
- The GUI user password is changed in the storage cluster.
- The GUI user is deleted in the storage cluster.

Complete the following steps to solve this problem:

 Get the name of the secret by entering oc describe remotecluster.scale -n ibm-spectrum-scale command and looking for Secret Name:

```
Spec:
  Contact Nodes:
    storagecluster1node1
    storagecluster1node2
  Gui:
    Cacert:
                           cacert-storage-cluster-1
                           csi-remote-mount-storage-cluster-1
    Csi Secret Name:
    Host.
                            guihost.example.com
    Insecure Skip Verify:
                          false
    Port:
                           443
    Secret Name:
                           cnsa-remote-mount-storage-cluster-1
```

2. Read the credentials from the kubernetes secret for accessing the storage cluster IBM Storage Scale GUI REST API.

```
oc get secret cnsa-remote-mount-storage-cluster-1 -n ibm-spectrum-scale -ojsonpath='{.data.username}' | base64 --decode && echo oc get secret cnsa-remote-mount-storage-cluster-1 -n ibm-spectrum-scale -ojsonpath='{.data.password}' | base64 --decode && echo
```

In some shells, the end of the line has a highlighted %. This denotes there is no new line and should not be included when updating the password.

- 3. If the password differs from the one that is set for the GUI user in storage cluster, then delete and re-create the secret as configured during installation.
- 4. If GUI user does not exist in storage cluster, create the IBM Storage Scale GUI user in the **ContainerOperator** group by either using the GUI or by issuing the following command in the shell of the GUI node of the storage cluster:

/usr/lpp/mmfs/gui/cli/mkuser cnss_storage_gui_user -p cnss_storage_gui_password -g ContainerOperator

MountVolume.SetUp failed for volume "ssh-keys"

```
Warning FailedMount 83m (x5 over 83m) kubelet, worker-0.example.ibm.com MountVolume.SetUp failed for volume "ssh-keys" : secret "ibm-spectrum-scale-ssh-key-secret" not found
```

The pod create times show that the ssh key secret was created after the deployment. This means that the deployment rightfully could not find the secret to mount, as it did not yet exist.

This message can be misleading as the pods should resolve themselves once the secret is created. If core pods are not in a **Running** state, and the secret is already created, deleting the ibm-spectrum-scale-core pods should resolve the issue. This restarts the pods and allow the mount to complete successfully for the already created SSH key.

pmcollector pod is in pending state during OpenShift Container Platform upgrade or reboot

This issue is caused by a problem during OpenShift Container Platform Upgrade or when a worker node has not been reset to schedulable after reboot. The pmcollector remains in a **Pending** state until the pod itself and its respective Persistent Volume can be bound to a worker node.

```
# oc get nodes
                                                           AGE
NAME
                      STATUS
                                                  ROLES
                                                                   VERSION
master0.example.com
                                                           5d18h
                                                                   v1.18.3+2fbd7c7
                      Ready
                                                  master
master1.example.com
                      Ready
                                                  master
                                                           5d18h
                                                                   v1.18.3+2fbd7c7
master2.example.com
                                                           5d18h
                                                                   v1.18.3+2fbd7c7
                      Ready
                                                  master
worker0.example.com
                      Ready
                                                  worker
                                                           5d18h
                                                                   v1.17.1+45f8ddb
worker1.example.com
                      Ready, SchedulingDisabled
                                                  worker
                                                           5d18h
                                                                   v1.17.1+45f8ddb
worker2.example.com
                                                           5d18h v1.17.1+45f8ddb
                      Ready
                                                  worker
```

If the Persistent Volume has Node Affinity to the host that has SchedulingDisabled, the pmcollector pod remains in Pending state until the node associated with the PV becomes schedulable.

```
# oc describe pv worker1.example.com-pv
Name: worker1.example.com-pv
Labels: app=scale-pmcollector
Annotations: pv.kubernetes.io/bound-by-controller: yes
Finalizers: [kubernetes.io/pv-protection]
StorageClass: ibm-spectrum-scale-internal
Status: Bound
```

Claim: example/datadir-ibm-spectrum-scale-pmcollector-1

Reclaim Policy: Delete
Access Modes: RWO
VolumeMode: Filesystem
Capacity: 25Gi

Node Affinity: Required Terms:

Term 0: kubernetes.io/hostname in [worker1.example.com]

Message: Source:

Type: LocalVolume (a persistent volume backed by local storage on a node)

Path: /var/mmfs/pmcollector

If the issue was with OpenShift Container Platform upgrade, fixing the upgrade issue should resolve the pending pod.

If the issue is due to worker node in **SchedulingDisabled** state and not due to a failed OpenShift Container Platform upgrade, re-enable scheduling for the worker with the oc adm uncordon command.

Failed to establish remote cluster connection when cacert ConfigMap does not exist

When describing the remote cluster objects, you may see an error: Error: ConfigMap "cacert-storage-cluster-1" not found.

This issue is caused by not configuring TLS verification of CA certificates for the remote storage GUI.

For more information and resolution options, see Configuring Certificate Authority (CA) certificates.

Known issues

http: TLS handshake error... remote error: tls: bad certificate errors found in the operator log

After upgrading IBM Storage Scale container native, you may see many messages in the operator log similar to the following:

http: TLS handshake error from <IP>:<PORT> remote error: tls: bad certificate

Verify that the Webhooks have a caBundle injected for each defined path: You can use these commands to check this:

• To check the MutatingWebhookConfiguration:

oc get MutatingWebhookConfiguration ibm-spectrum-scale-mutating-webhook-configuration -oyaml | egrep "caBundle:|path:"

• To check the ValidatingWebhookConfiguration:

oc get ValidatingWebhookConfiguration ibm-spectrum-scale-validating-webhook-configuration -oyaml | egrep "caBundle:|path:"

For example, if running the command against the ibm-spectrum-scale-mutating-webhook-configuration, you may see an output similar to the following:

\$ oc get MutatingWebhookConfiguration ibm-spectrum-scale-mutating-webhook-configuration -oyaml | egrep
"caBundle:|path:"
caBundle: <SOME CA BUNDLE DEFINED, LONG KEY>
 path: /mutate-scale-spectrum-ibm-com-v1beta1-cluster
 path: /mutate-scale-spectrum-ibm-com-v1beta1-filesystem

The output shows one caBundle: entry and two path: entries, meaning for the second path: /mutate-scale-spectrum-ibm-com-v1beta1-filesystem, a valid caBundle was NOT injected. This is caused by a bug in the OpenShift service CA operator, OCPBUGS-8512.

If this has occurred in your cluster, you should perform the following actions:

1. Delete the MutatingWebhookConfiguration and ValidatingWebhookConfiguration.

oc delete MutatingWebhookConfiguration ibm-spectrum-scale-mutating-webhook-configuration oc delete ValidatingWebhookConfiguration ibm-spectrum-scale-validating-webhook-configuration

2. Re-apply the manifest for IBM Storage Scale container native. For example, if you are upgrading to v5.1.9, then run:

oc apply -f https://raw.githubusercontent.com/IBM/ibm-spectrum-scale-container-native/v5.1.9.x/generated/scale/install.yaml

3. After applying the manifests, querying the webhook again should result in having a caBundle injected to each endpoint path:

```
caBundle: <SOME CA BUNDLE DEFINED, LONG KEY>
  path: /mutate-scale-spectrum-ibm-com-v1beta1-cluster
caBundle: <SOME CA BUNDLE DEFINED, LONG KEY>
  path: /mutate-scale-spectrum-ibm-com-v1beta1-filesystem
```

For more information on specific upgrade procedures, see <u>Upgrading IBM Storage Scale container native</u>.

Adding a Remote Cluster to an existing IBM Storage Scale container native cluster taking a long time to appear

When adding a RemoteCluster CR after initial installation of IBM Storage Scale container native, it can take some time for the operator to propagate this information to the CSI CR.

To resolve this, manually trigger a reconcile of the operator by deleting the operator pod and allowing it be recreated.

```
oc delete pod -nibm-spectrum-scale-operator -lapp.kubernetes.io/name=operator
```

Once the operator reconciles, it will update the CSI CR with the new RemoteCluster CR.

pmsensors showing null after failure of pmcollector node

If a node that is running the pmcollector pod is drained, when the node is uncordoned, the pmcollector pods get new IPs assigned. This leads to the pmsensors process issue. It displays the following message:

Connection to scale-pmcollector-0.scale-pmcollector successfully established.

But an error is reported:

```
Error on socket to scale-pmcollector-0.scale-pmcollector: No route to host (113)
```

See /var/log/zimon/ZIMonSensors.log. This issue can also be seen on the pmcollector pod:

```
# echo "get metrics cpu user bucket size 5 last 10" | /opt/IBM/zimon/zc 0
1:
        worker1
2:
        worker2
Row Timestamp
                            cpu user
   2020-11-16 05:27:25
                            null
  2020-11-16 05:27:30
                            null
  2020-11-16 05:27:35
                            null
   2020-11-16 05:27:40
                            null
   2020-11-16 05:27:45
                            null
   2020-11-16 05:27:50
                            null
    2020-11-16 05:27:55
                            null
   2020-11-16 05:28:00
                            null
   2020-11-16 05:28:05
                            null
10 2020-11-16 05:28:10
                            null
```

If the scale-pmcollector pods get their IP addresses changed, the pmsensors process needs to be killed and restarted manually on all scale-core pods, to get the performance metrics collection resumed.

To kill the pmsensor process, run these commands on all the ibm-spectrum-scale-core pods. The **PMSENSORPID** variable holds the results of the **oc exec** command. If this variable is empty, there is no process running, and you do not need to enter the following command to kill the process.

```
PMSENSORPID=`oc exec <ibm-spectrum-scale-core> -n ibm-spectrum-scale -- pgrep -fx
'/opt/IBM/zimon/sbin/pmsensors -C /etc/scale-pmsensors-configuration/ZIMonSensors.cfg -R /var/run/perfmon'
echo $PMSENSORPID
oc exec <scale-pod> -n ibm-spectrum-scale -- kill $PMSENSORPID
```

To start the service again, enter this command on all the scale pods.

oc exec <scale-pod> -n ibm-spectrum-scale -- /opt/IBM/zimon/sbin/pmsensors -C /etc/scale-pmsensors-configuration/ZIMonSensors.cfg -R /var/run/perfmon

Remote file systems are defined but not mounted on all nodes

If the RemoteMount controller shows that the target storage cluster file system is established, but the remote file system is not mounted on all the nodes in the ibm-spectrum-scale-core pods, execute the following command to mount the file system manually from one of the scale-core pods:

```
# Replace FILESYSTEM with the name of your filesystem FILESYSTEM="fs1"
```

Remote file systems unable to mount successfully

On the Filesystem CR, if you see events indicating that the filesystem is unable to mount, check in the pod to see if running mmlsfs <filesystem> results in Operation not permitted error message.

Starting with version IBM Storage Scale and IBM Storage Scale container native 5.1.3, the tscCmdAllowRemoteConnections configuration is recommended to be set to no. If the storage cluster and all client clusters (including IBM Storage Scale container native) are at versions >= 5.1.3, it is recommended to set this value to no. However, if any version is < 5.1.3, tscCmdAllowRemoteConnections needs to be set to yes on the storage cluster and client clusters to successfully communicate between the clusters.

Use the following table as a reference.

Table 1. tscCmdAllowRemoteConnections configuration

Storage cluster version	IBM Storage Scale container native version	${\tt tscCmdAllowRemoteConnections}$
< 5.1.3	< 5.1.3.0	yes
>= 5.1.3	< 5.1.3.0	yes
>= 5.1.3	>= 5.1.3.0	no

- To change this value on the storage cluster, run: mmchconfig tscCmdAllowRemoteConnections='yes|no'.
- To change this value on the IBM Storage Scale container native cluster, set tscCmdAllowRemoteConnections: yes|no|in the clusterProfile section of the cluster spec:

```
kind: Cluster
metadata:
name: ibm-spectrum-scale
spec:
...
daemon:
...
clusterProfile:
tscCmdAllowRemoteConnections: "yes"
```

For more information to configure the clusterProfile section of the cluster spec, see Cluster profile.

pid_limits set higher than podPidLimits, but not being honored

With OpenShift Container Platform 4.11, some CRI-O fields introduced before kubelet supported those values are being deprecated in favor of using the fields defined in kubelet. One of those deprecated fields is pids_limit set by the ContainerRuntimeConfig CR. For more information, see CRI-O should deprecate log size max and pids limit options.

If you had applied a custom MCO configuration with a pids_limit value higher than 4096, the container limits is restricted by the default podPidsLimit value in kubelet.conf. This default is set to 4096 on OCP 4.11. To incresase this value, perform the following:

It is highly recommended that you are at IBM Storage Scale container native 5.1.5 or higher before making changes to MachineConfig as the IBM Storage Scale container native operator will orchestrate the updates to MachineConfig as an attempt to keep the IBM Storage Scale cluster operational.

1. Define the ${\tt podPidsLimit}$ in the ${\tt KubeletConfig}$ custom resource.

```
apiVersion: machineconfiguration.openshift.io/v1
kind: KubeletConfig
metadata:
    name: 01-worker-ibm-spectrum-scale-increase-pid-limit
spec:
    machineConfigPoolSelector:
    matchLabels:
        pools.operator.machineconfiguration.openshift.io/worker: ''
kubeletConfig:
    podPidsLimit: 8192
```

2. Delete the IBM Storage Scale container native ContainerRuntimeConfig CR to set the default back to 0 (unlimited):

 $\verb| oc delete Container Runtime Config 01-worker-ibm-spectrum-scale-increase-pid-limit| \\$

Adding a node fails - the node appears to already belong to a GPFS cluster

When adding a worker node into OpenShift, and using the nodeSelector of node-role.kubernetes.io/worker in the Cluster CR, the IBM Storage Scale Container native operator will deploy a core pod to the newly added node and attempt to add this node into the GPFS cluster.

There may be a situation where the core pod will be in "Init:1/2" state with no sign of recovery.

The operator log will contain entries matching ERROR Failed to add node and mmaddnode failing with the reason:

```
The node appears to already belong to a GPFS cluster.
```

To recover from this scenario, perform the following steps:

1. Create a debug pod to the node where the pod is failing to start and delete the GPFS metadata.

```
oc debug node/<openshift_worker_node> -T -- chroot /host sh -c "rm -rf /var/mmfs; rm -rf /var/adm/ras"

Example:

oc debug node/worker0.example.com -T -- chroot /host sh -c "rm -rf /var/mmfs; rm -rf /var/adm/ras"

Starting pod/worker0examplecom-debug ...

To use host binaries, run `chroot /host`

Removing debug pod ...
```

- 2. Delete the core pod. If the core pod is called worker3, run: oc delete pod worker3 -n ibm-spectrum-scale.
- 3. The operator should reconcile and attempt to create the pod again and succeed.

GUI or Grafana bridge pods fails to start, no data returned from pmcollector to frontend applications

There exists an issue where no data is returned to frontend applications that are actively consuming performance metrics from IBM Storage Scale pmcollector. This also has a signature of Grafana Bridge pod failing to start. If this is experienced, apply the following workaround.

- 1. Check NodeNetworkConfigurationPolicy's to determine which network interfaces are configured for a node network.
 - List the NodeNetworkConfigurationPolicies

```
# oc get nnce
NAME

compute-0.mycluster.example.com.bond1-ru5-policy
compute-1.mycluster.example.com.bond1-ru6-policy
compute-2.mycluster.example.com.bond1-ru7-policy
control-0.mycluster.example.com.bond1-ru2-policy
control-1.mycluster.example.com.bond1-ru3-policy
control-2.mycluster.example.com.bond1-ru3-policy
control-2.mycluster.example.com.bond1-ru4-policy

STATUS
SuccessfullyConfigured
SuccessfullyConfigured
SuccessfullyConfigured
SuccessfullyConfigured
SuccessfullyConfigured
```

• Describe the NodeNetworkConfigurationPolicy to identify the network interface being used.

Example:

oc get nnce

```
# oc describe nnce compute-0.mycluster.example.com.bond1-ru5-policy | grep Name
Name: compute-0.mycluster.example.com.bond1-ru5-policy
Namespace:
Name: bond1-ru5-policy
Name: bond1
Name: bond1.3201
```

In this particular example, the bond interfaces are configured for the node network traffic.

- 2. Change the Performance Data Collection rules to limit the discovery of the Network adapters to only the configured interfaces.
 - Stop the sensors activities on all Core nodes

```
oc get pods -lapp.kubernetes.io/name=core -n ibm-spectrum-scale \
-ojsonpath="{range .items[*]}{.metadata.name}{'\n'}" | \
xargs -I{} oc exec {} -n ibm-spectrum-scale -c gpfs -- \
kill $(pgrep -fx '/opt/IBM/zimon/sbin/pmsensors -C /etc/scale-pmsensors-
configuration/ZIMonSensors.cfg -R /var/run/perfmon')
```

Review the current filter settings for the Network sensor in the Performance Data Collection rules. These are stored in the ibm-spectrum-scale-pmsensors-config ConfigMap.

```
oc describe cm ibm-spectrum-scale-pmsensors-config -n ibm-spectrum-scale | grep filter | grep netdev
```

Example output:

```
# oc describe cm ibm-spectrum-scale-pmsensors-config -n ibm-spectrum-scale | grep filter | grep
netdev
filter = "netdev_name=veth.*|docker.*|flannel.*|cali.*|cbr.*"
```

The filter = output is used for exclusion logic.

• Edit the ibm-spectrum-scale-pmsensors-config ConfigMap with the following command:

```
oc edit ibm-spectrum-scale-pmsensors-config -n ibm-spectrum-scale
```

Replace the substring netdev name=veth.*|docker.*|flannel.*|cali.*|cbr.*with netdev name=^((?!bond).)*

Bond interface is being used in this example, replace *bond* with the respective adapter name used by the customer's network interface

• Verify that the ibm-spectrum-scale-pmsensors-config ConfigMap now reflects the desired adapter.

```
oc describe cm ibm-spectrum-scale-pmsensors-config -n ibm-spectrum-scale|grep filter | grep netdev
```

3. Cleanup the metadata keys in the pmcollector database not related to the configured node network interfaces. Remote shell into each pmcollector pod and issue the following commands.

```
oc rsh -cpmcollector ibm-spectrum-scale-pmcollector-0
  echo "delete key .*|Network|[a-f0-9]{15}|.*" | /opt/IBM/zimon/zc 0
  echo "topo -c -d 6" | /opt/IBM/zimon/zc 0| grep Network | cut -d'|' -f2-3 | sort | uniq -c | sort -n |
 tail -50
 Then exit the container.
 Example:
  # oc rsh -cpmcollector ibm-spectrum-scale-pmcollector-0
  sh-4.4$ echo "delete key .*|Network|[a-f0-9]{15}|.*" | /opt/IBM/zimon/zc 0
  sh-4.4$ echo "topo -c -d 6" | /opt/IBM/zimon/zc 0| grep Network | cut -d'|' -f2-3 | sort | uniq -c |
 sort -n | tail -50
      96 Network|bond0
      96 Network|bond1
      96 Network | bond1.3201
      96 Network|lo
  sh-4.4$ exit
  # oc rsh -cpmcollector ibm-spectrum-scale-pmcollector-1
  sh-4.4$ echo "delete key .*|Network|[a-f0-9]{15}|.*" | /opt/IBM/zimon/zc 0
  sh-4.4$ echo "topo -c -d 6" | /opt/IBM/zimon/zc 0| grep Network | cut -d'|' -f2-3 | sort | uniq -c |
 sort -n | tail -50
      96 Network|bond0
      96 Network|bond1
      96 Network|bond1.3201
      96 Network|lo
  sh-4.4$ exit
4. Start the sensors jobs on all Core nodes
  oc get pods -lapp.kubernetes.io/name=core -n ibm-spectrum-scale \
  -ojsonpath="{range .items[*]}{.metadata.name}{'n'}" | \
  xargs -I{} oc exec {} -n ibm-spectrum-scale -c gpfs -- \
  /opt/IBM/zimon/sbin/pmsensors -C /etc/scale-pmsensors-configuration/ZIMonSensors.cfg -R
  /var/run/perfmon
```

5. Delete the pmcollector and grafana bridge pods to update the configuration changes.

```
oc delete pod -lapp.kubernetes.io/instance=ibm-spectrum-scale,app.kubernetes.io/name=pmcollector oc delete pod -lapp.kubernetes.io/instance=ibm-spectrum-scale,app.kubernetes.io/name=grafanabridge
```

After some time, the pmcollector and grafana bridge pods are redeployed by the ibm-spectrum-scale-operator.

Gather data about your cluster

When opening issue to IBM Support, you may be asked to provide information that will help assist in performing root cause analysis. The follow sections describe the process for gathering data on your cluster.

- must-gather
- Generating GPFS trace reports
- Kernel crash dumps

must-gather

The oc adm must-gather CLI command can be used to collect information about your cluster that is most likely needed to debug issues.

Prerequisites

- Access to the cluster as a user with the cluster-admin role
- The OpenShift Container Platform CLI (oc) command installed

Gather data about the Red Hat OpenShift Container Platform cluster

For issues with the Red Hat OpenShift Container Platform cluster where a ticket must be opened with Red Hat Support, provide the debugging information about the cluster for problem determination. For more information, see <u>Gathering data about your cluster</u> in Red Hat OpenShift documentation.

Executing a default must-gather for OpenShift Container Platform debug does not collect information for IBM Storage Scale container native.

Gather data about the IBM Storage Scale container native cluster

To gather data specifically for the IBM Storage Scale container native cluster to provide to IBM Support, point the must-gather tool to the ibm-spectrum-scale-must-gather image. This will collect Kubernetes resources associated with the IBM Storage Scale container native cluster as well as retrieving a GPFS snap.

oc adm must-gather --image requires the image stored in a repository where it can be anonymously pulled (no credentials required). In an airgapped environment, the ibm-spectrum-scale-must-gather image must be pulled from the IBM Cloud Container Registry and then uploaded to an internal image registry allowing anonymous pull. For more information about air gap instructions, see Air-gapped installs.

1. In the directory where your must-gather contents are to be stored, enter the must-gather command using the ibm-spectrum-scale-must-gather image:

```
oc adm must-gather --image=icr.io/cpopen/ibm-spectrum-scale-must-gather:v5.1.9.6
```

2. Once completed, a new directory with must-gather prefix is created in your working directory. For example:

```
# 1s -1tr
drwxr-xr-x 3 root root 229 Jun 14 09:11 must-gather.local.681612165636007567
```

3. Create a compressed file from the must-gather directory that was just created in your working directory.

```
tar cvaf must-gather.tar.gz must-gather.local.681612165636007567/
```

Replace the directory name used in this example with your respective must-gather directory.

Generating GPFS trace reports

Some issues might require low-level system detail accessible only through the IBM Storage Scale daemon and the IBM Storage Scale Linux kernel trace facilities.

In such instances the IBM Support Center might request such GPFS trace reports to facilitate rapid problem determination of failures.

The level of detail that is gathered by the trace facility is controlled by setting the trace levels using the mmtracectl command. For more information, see mmtracectlcommand in IBM Storage Scale documentation.

The following steps must be performed under the direction of the IBM Support Center.

1. Enter the following command to access a running ibm-spectrum-scale-core pod:

```
oc rsh -n ibm-spectrum-scale <ibm-spectrum-scale-core-pod>
```

The pod must be in Running status to connect. It is best to pick a pod running on a node that is not exhibiting issues.

The remaining steps should be completed while connected to this shell running inside the gpfs container of this running core pod.

2. Enter the mmchconfig command to change the dataStructureDump field to point to /var/adm/ras. This changes the default location where trace data is stored to a directory that persists on the host machine:

mmchconfig dataStructureDump=/var/adm/ras/

3. Set desired trace classes and levels.

This part of the process is identical to classic IBM Storage Scale installs. For more information, see Generating GPFS trace reports in IBM Storage Scale documentation.

```
mmtracectl --set --trace={io | all | def | "Class Level [Class Level ...]"}
```

4. Start the trace facility on all nodes by entering the following command:

```
mmtracectl --start
```

- 5. Re-create the problem.
- 6. Stop the trace generation as soon as the problem to be captured occurs, by entering the following command:

```
mmtracectl --stop
```

7. Turn off trace generation by entering the following command:

```
mmtracectl --off
```

Kernel crash dumps

Red Hat Enterprise Linux CoreOS (RHCOS) based machines do not support configuring kdump or generating kernel crash dumps for Red Hat OpenShift Container Platform 4.6 and earlier. For more information, see How to configure kdump in Red Hat CoreOS in Red Hat OpenShift documentation.

In some virtual machine installations, it may be possible to generate a vmcore crash dump from the hypervisor.

In lieu of kernel dumps, CoreOS currently recommends using pstore, even if only small snippets of diagnostic data can be collected. For more information, see **Using pstore** in CoreOS documentation on GitHub.

Troubleshooting

Use the following sections to help troubleshoot and debug specific issues with IBM Storage Scale container native deployment.

- Debugging the IBM Storage Scale operator
- Debugging IBM Storage Scale deployment
- Troubleshooting custom resources
 - o <u>Troubleshooting remote cluster</u>
- Debugging IBM Storage Scale Container Storage Interface (CSI) deployment
- <u>Debugging PVC creation issue: PVC binding in pending state</u>
- <u>Debugging OCP upgrade</u>
- Identifying applications preventing cluster maintenance
- Recovery of IBM Storage Scale container native cluster after OpenShift node failure

Debugging the IBM Storage Scale operator

Problem: the operator pod is not successfully deployed

No operator pod appears when running oc get pods -n ibm-spectrum-scale-operator.

• Verify that all worker nodes in the Red Hat OpenShift Container Platform cluster are in a Ready state. If not, the operator pod may not have an eligible node to be deployed to.

STATUS	ROLES	AGE	VERSION
Ready	master	65d	v1.18.3+6c42de8
Ready	master	65d	v1.18.3+6c42de8
Ready	master	65d	v1.18.3+6c42de8
NotReady	worker	65d	v1.18.3+6c42de8
NotReady	worker	65d	v1.18.3+6c42de8
NotReady	worker	65d	v1.18.3+6c42de8
	Ready Ready Ready NotReady NotReady	Ready master Ready master Ready master Ready master NotReady worker NotReady worker	Ready master 65d Ready master 65d Ready master 65d NotReady worker 65d NotReady worker 65d

Inspect the operator namespace and look for details that may point to any problems.

```
oc get deployment -n ibm-spectrum-scale-operator
oc describe deployment ibm-spectrum-scale-controller-manager -n ibm-spectrum-scale-operator
oc get replicasets -n ibm-spectrum-scale-operator
oc describe replicaset <replicaset name> -n ibm-spectrum-scale-operator
```

Problem: the operator pod shows container restarts

Kubernetes keeps the logs of the current container and the previous container. Take a look at the previous container's logs for any clues using the following command:

oc logs -p <operator pod> -n ibm-spectrum-scale-operator

Debugging IBM Storage Scale deployment

Problem: no endpoints available for service "ibm-spectrum-scale-webhook-service"

When applying the various CRs or making changes to defined IBM Storage Scale container native Custom Resources, it is possible that validating or mutating webhooks can fail if the operator pod is unavailable. If you receive an error regarding no endpoints for service "ibm-spectrum-scale-webhook-service", check the status of the operator pod.

Example error:

```
# oc apply -f remotecluster.yaml
remotecluster.scale.spectrum.ibm.com/remotecluster-sample unchanged
Error from server (InternalError): error when creating "remotecluster.yaml": Internal error occurred: failed
calling webhook "mcluster.scale.spectrum.ibm.com": failed to call webhook: Post "https://ibm-spectrum-scale-
webhook-service.ibm-spectrum-scale-operator.svc:443/mutate-scale-spectrum-ibm-com-v1beta1-cluster?
timeout=10s": no endpoints available for service "ibm-spectrum-scale-webhook-service"
```

Checking status of the operator pod:

```
# oc get pods -n ibm-spectrum-scale-operator
NAME READY STATUS RESTARTS AGE
pod/ibm-spectrum-scale-controller-manager-64bb4798df-rrj4j 0/1 ImagePullBackOff 10 (4m14s ago) 34m
```

In the example, it appears that there might be some issue with image pull credentials. As a remedy to the no endpoints available issue, the operator issue must be resolved first. Once it is resolved, perform the steps again that failed with no endpoints available.

Problem: core, GUI, or collector pods are in ErrImgPull or ImagePullBackOff state

When viewing oc get pods -n ibm-spectrum-scale, if any of the pods are in ErrImgPull or ImagePullBackOff state, use oc describe pod <podname> to get more details on the pod and look for any errors that may be happening.

oc describe pod <pod-name> -n ibm-spectrum-scale

Problem: core, GUI, or collector pods are not up

• If the pods are not deployed in the ibm-spectrum-scale namespace, or the cluster is not created, examine operator pod logs:

```
oc logs $(oc get pods -n ibm-spectrum-scale-operator -ojson | jq -r ".items[0].metadata.name") -n ibm-spectrum-scale-operator
```

Problem: core, GUI, or collector pods show container restarts

• Kubernetes keeps the logs of the current container and the previous container. Take a look at the previous container's logs for any clues using the following command:

```
oc logs -p <scale pod> -n ibm-spectrum-scale
```

Problem: core pods are stuck in Init:1/2

If for some reason, the IBM Storage Scale container native cluster fails to create, the core pods on the worker nodes get stuck in Init container.

# oc get pods				
NAME	READY	STATUS	RESTARTS	AGE
worker0	2/2	Init:1/2	0	2h
worker1	2/2	Init:1/2	0	2h
worker2	2/2	Init:1/2	0	2h
worker3	2/2	Init:1/2	0	2h

There is no recovery from this. For more information about clean up, see <u>Cleanup IBM Storage Scale container native</u> and <u>Cleanup OpenShift nodes</u>. For more information on redeploying, see <u>Installing the IBM Storage Scale container native operator and cluster</u>.

Problem: all pods have been deployed but GPFS cluster is stuck in the "arbitrating" state

If the cluster is stuck in arbitrating state:

• Check the output of mmlscluster.

```
oc exec $(oc get pods -lapp.kubernetes.io/name=core -n ibm-spectrum-scale -o json | jq -r ".items[0].metadata.name") -- mmlscluster
```

· Check the GPFS logs.

```
oc logs $(oc get pods -lapp.kubernetes.io/name=core -n ibm-spectrum-scale -o json | jq -r ".items[0].metadata.name") -c logs | grep mmfs.log.latest
```

Problem: remote mount file system not getting configured or mounted

- Check the RemoteCluster objects and the Filesystem objects. The Filesystem controller waits until the RemoteCluster object is Ready before attempting to configure the remote mount file system. Describe the objects and check Status or Events for any reasons for failures.
 - o Remote Clusters

```
oc get remotecluster.scale -n ibm-spectrum-scale oc describe remotecluster.scale <name> -n ibm-spectrum-scale
```

* Filesystems

```
```bash
oc get filesystem.scale -n ibm-spectrum-scale
oc describe filesystem.scale <name> -n ibm-spectrum-scale
```

```
Check the `Status` and `Events` for any reason of failures.
```

If nothing, check the operator logs for any errors:

```
```bash
oc logs $(oc get pods -n ibm-spectrum-scale-operator -ojson | jq -r ".items[0].metadata.name") -n ibm-
spectrum-scale-operator
```

• Enter the mmnetverify command to verify the network between the clusters. For more information, see <u>mmnetverify command</u> in IBM Storage Scale documentation.

Troubleshooting custom resources

• Troubleshooting remote cluster

Troubleshooting remote cluster

• Failed to register remote storage cluster on local GUI REST-API.

Failed to register remote storage cluster on local GUI REST-API.

The remote cluster resource is not READY and describing the resource shows the status: Failed to register remote storage cluster on local GUI REST-API. Check the operator logs for more details.

This error might be caused from the inability to resolve the hostname of the contact nodes on the storage cluster from the core pods. Check the operator logs and look for a failure on mmremotecluster add command.

```
mmremotecluster: Incorrect node nodel.example.com specified for command. mmremotecluster: Command failed. Examine previous error messages to determine cause.
```

To resolve, double check that you are able to resolve the hostnames of the contact nodes by using nslookup. If you are unable to fix the site DNS, you can also resolve this using hostAliases field in the Cluster spec to add entries into the IBM Storage Scale CoreDNS host file. For more information, see Host aliases.

Debugging IBM Storage Scale Container Storage Interface (CSI) deployment

Problem: CSI pods stuck in CrashLoopBackOff (Unauthorized GET request)

The following output shows an example of the CSI pods in CrashLoopBackOff.

# oc get pods				
NAME	READY	STATUS	RESTARTS	AGE
ibm-spectrum-scale-csi-95661	1/2	CrashLoopBackOff	9	26m
ibm-spectrum-scale-csi-attacher-0	1/1	Running	0	85m
ibm-spectrum-scale-csi-klr7x	1/2	CrashLoopBackOff	9	26m
ibm-spectrum-scale-csi-operator-56955949c4-mzn7g	1/1	Running	0	90m
ibm-spectrum-scale-csi-provisioner-0	1/1	Running	0	85m
ibm-spectrum-scale-csi-xlxkl	1/2	CrashLoopBackOff	9	26m

Checking the logs for csi may indicate potential issues:

```
# oc logs ibm-spectrum-scale-csi-95661 -c ibm-spectrum-scale-csi
```

. . .

• Check that the csi-cnsa-gui-user role was created.

```
# oc exec ibm-spectrum-scale-gui-0 -n ibm-spectrum-scale -- /usr/lpp/mmfs/gui/cli/lsuser
Defaulting container name to liberty.
Use 'oc describe pod/ibm-spectrum-scale-gui-0 -n ibm-spectrum-scale' to see all of the containers in this pod.
Name Long name Password status Group names Failed login attempts Target Feedback
Date
ContainerOperator active ContainerOperator 0
EFSSG1000I The command completed successfully.
```

In this case, the ${\tt csi-cnsa-gui-user}$ role was not created. To resolve the issue, enter the following command to create the GUI user:

```
# oc exec -c liberty ibm-spectrum-scale-gui-0 -n ibm-spectrum-scale -- /usr/lpp/mmfs/gui/cli/mkuser csi-cnsa-gui-user -p csi-cnsa-gui-password -g CsiAdmin

EFSSG0019I The user csi-cnsa-gui-user has been successfully created.

EFSSG1000I The command completed successfully.
```

• Check that the csi-remote-mount-storage-cluster-1 secret was created with correct credentials.

```
# oc get secrets csi-remote-mount-storage-cluster-1 -n ibm-spectrum-scale-csi -
ojsonpath='{.data.username}' | base64 --decode
    csi-cnsa-gui-user

# oc get secrets csi-remote-mount-storage-cluster-1 -n ibm-spectrum-scale-csi -
ojsonpath='{.data.password}' | base64 --decode
    this-is-a-bad-password
```

In this case, the csi-remote-mount-storage-cluster-1 secret was created without the correct password. To resolve the issue, enter the following command to delete the secret and recreate it with correct values:

```
# oc delete secrets csi-remote-mount-storage-cluster-1 -n ibm-spectrum-scale-csi
secret "csi-remote-mount-storage-cluster-1" deleted

# oc create secret generic csi-remote-mount-storage-cluster-1 --from-literal=username=csi-cnsa-gui-
user --from-literal=password=csi-cnsa-gui-password -n ibm-spectrum-scale-csi
secret/csi-remote-mount-storage-cluster-1 created

# oc label secret csi-remote-mount-storage-cluster-1 product=ibm-spectrum-scale-csi -n ibm-spectrum-
scale-csi
secret/csi-remote-mount-storage-cluster-1 labeled
```

Problem: CSI CR is never created

If all the core pods are running and the IBM Storage Scale container native cluster appears to be in a good state the CSI CR should be created automatically. In some error paths this does not happen and causes the driver pods to not be scheduled:

Only the operator pod is listed and no results are found for csiscaleoperators

i	<pre># oc get po,csiscaleoperator -n ibm-spectrum-scale-csi</pre>				
1	NAME	READY	STATUS	RESTARTS	AGE
1	pod/ibm-spectrum-scale-csi-operator-79bd756d58-ht6hf	1/1	Running	0	47h

• Check that the GUI pod(s) are up and running.

<pre># oc get pods -n ibm-spectrum-scale</pre>				
NAME	READY	STATUS	RESTARTS	AGE
ibm-spectrum-scale-gui-0	4/4	Running	0	3m58s
ibm-spectrum-scale-gui-1	4/4	Running	0	95s
ibm-spectrum-scale-pmcollector-0	2/2	Running	0	3m59s
worker0	2/2	Running	0	3m59s
worker1	2/2	Running	0	3m58s
worker2	2/2	Running	0	3m58s

All GUI pods must be up and running before the CSI CR is created. Each pod can take a few minutes for all containers in the pod to enter the Running state.

• Check that the daemon status has a non-empty cluster ID.

```
oc describe daemon -n ibm-spectrum-scale
```

Find the status section and ensure that the Cluster ID field exists and is not empty.

Status:		
Cluster	ID:	3004252500454687654
Cluster	Name:	example.cluster.com

If those fields are missing then the IBM Storage Scale container native cluster is experiencing an issue. Check the operator logs for more information.

Debugging PVC creation issue: PVC binding in pending state

If there are PVC creation issues:

- Check if multiple GUI's are installed at the remote storage cluster.
- SSH to one of the GUI node and run the following command:

```
mmlsfileset <filesystem name>
```

• Check if fileset is unlinked.

If multiple GUI's are installed then contact IBM support for further guidance.

Debugging OCP upgrade

Problem: GUI mount not getting refreshed as multiple OCP cluster are remote mounted on same FS

To resolve the issue, unmount the FS from another OCP cluster.

```
# /usr/lpp/mmfs/gui/cli/runtask FILESYSTEM_MOUNT
err: Batch entry 3 INSERT INTO FSCC.FILESYSTEM_MOUNTS (CLUSTER_ID, DEVICENAME, HOST_NAME, MOUNT_MODE,
LAST_UPDATE) VALUES ('5228226002706731921','fs1','worker1.example.com','RW','2021-07-28
19:06:15.111000+00'::timestamp) was aborted: ERROR: duplicate key value violates unique constraint
"filesystem_mounts_pk"
Detail: Key (host_name, cluster_id, devicename)=(worker1.example.com, 5228226002706731921 , fs1) already
exists. Call getNextException to see other errors in the batch.
EFSSG1150C Running specified task was unsuccessful.
# /usr/lpp/mmfs/gui/cli/runtask FILESYSTEM_MOUNT
EFSSG1000I The command completed successfully.
# exit
exit
```

Identifying applications preventing cluster maintenance

Debug steps to determine when a cluster maintenance action is not being completed.

When would we see this?

A drain occurs when a core pod is selected for deletion. There are a number of actions that prompt a core pod deletion:

- · Pod evictions
 - Red Hat OpenShift Machine Config Operator
 - User-initiated drains
- · Pod spec updates
 - o Resource requests, i.e. changing core pod requests for CPU and/or memory
 - o Image updates prompted by a new release

What does this look like?

An update driven by pod spec updates will present as core pods awaiting deletion. An update driven by Red Hat OpenShift Machine Config Operator (MCO) ceases to update nodes. The signature will look similar between the two scenarios. Use the following steps to determine where to direct the support case.

When to open a support case?

To determine if the MCO is stuck due to IBM Storage Scale container native, run the following command on the node that is failing to update:

```
oc adm drain <node> --force --ignore-daemonsets --delete-emptydir-data --pod-selector='app.kubernetes.io/instance notin(ibm-spectrum-scale)'
```

If this command completes without errors, then IBM Storage Scale container native is blocking the ongoing drain. To resolve it, raise a support ticket to IBM. For more information, see <u>Gather data about the IBM Storage Scale container native cluster</u>.

If errors are presented from the oc adm drain command, raise a support ticket to Red Hat. For more information, see <u>Gather data about the</u> Red Hat OpenShift Container Platform cluster.

Identifying signatures of an ongoing update

Complete the following steps:

1. Check the Daemon status to verify if any pods are awaiting deletion.

oc describe daemon -n ibm-spectrum-scale

```
Example output:

Status Details:

Nodes Rebooting:
Nodes Unreachable:
Nodes Waiting For Reboot:
Pods Starting:
Pods Terminating:
Pods Unknown:
Pods Waiting For Delete: worker0, worker1, worker2
Quorum Pods: worker0, worker1, worker2
```

2. Check if any nodes are cordoned.

```
oc get nodes

Example:
```

NAME	STATUS	ROLES	AGE	VERSION
master0.example.ibm.com	Ready	master	23d	v1.24.0+3882f8f
master1.example.ibm.com	Ready	master	23d	v1.24.0+3882f8f
master2.example.ibm.com	Ready	master	23d	v1.24.0+3882f8f
worker0.example.ibm.com	Ready,SchedulingDisabled	worker	23d	v1.24.0+3882f8f
worker1.example.ibm.com	Ready	worker	23d	v1.24.0+3882f8f
worker2.example.ibm.com	Ready	worker	23d	v1.24.0+3882f8f

3. Check events on the core pod of the failing node.

```
oc describe <pod> -n ibm-spectrum-scale
```

Example event:

error when evicting pods/"mypod-0" -n "myworkload" (will retry after 5s): Cannot evict pod as it would violate the pod's disruption budget.

Recovery of IBM Storage Scale container native cluster after OpenShift node failure

IBM Storage Scale container native operator does not have managed support for the removal of a node. There have been cases where a node fails to recover after the node suffers an outage, for example, after a Red Hat OpenShift update.

- · Before you begin
- Collect configuration prior to servicing the OCP cluster
- Delete one Scale node from IBM Storage Scale container native cluster
- Add new OpenShift node for use in existing IBM Storage Scale container native cluster
- Validate the IBM Storage Scale container native cluster after removal and replacement of OpenShift node

Before you begin

Before the maintenance of the failed node, you will need to ensure that the node selectors, quorum and manager designations, and network configuration annotations are understood. These configurations will be applied in subsequent steps following the removal of the node to ensure parity of the cluster.

- Log the node selector labels (required for the Scale core pods) that are currently being used by the Cluster CR.
- Understand if the node to be removed is a quorum node for the IBM Storage Scale container native cluster.
- Identify if a CNI network configuration is currently in use for the IBM Storage Scale container native cluster.

Collect configuration prior to servicing the OCP cluster

Running an IBM Storage Scale container native must-gather will collect the state of the cluster, allowing a reference point of the cluster prior to servicing the Red Hat OpenShift cluster.

1. Collect an IBM Storage Scale container native must-gather to ensure that the current configuration is captured prior to attempting service of Red Hat OpenShift cluster.

oc adm must-gather --image=icr.io/cpopen/ibm-spectrum-scale-must-gather:v5.1.9.6

Delete one Scale node from IBM Storage Scale container native cluster

To delete the Scale node from IBM Storage Scale container native cluster, complete the following steps:

1. Stop the running operator pod by setting the replicas in the deployment to 0.

```
oc scale deployment ibm-spectrum-scale-controller-manager -n ibm-spectrum-scale-operator --replicas=0
```

2. If the failed Red Hat OpenShift node exists, delete the corresponding Scale core pod.

```
oc delete pod REPLACE WITH CORE POD OF FAILED OCP NODE -n ibm-spectrum-scale
```

3. Enter a currently running Scale core pod to execute the remaining commands.

```
oc -n ibm-spectrum-scale rsh REPLACE WITH RUNNING CORE POD
```

4. Note the quorum and manager designations as denoted in mmlscluster. This information will be needed when we attempt to add back a new node.

mmlscluster

5. Map the effected OpenShift node to the GPFS admin interface. It should report a status of Unknown.

The GPFS admin interface would have the shortname of the effected OpenShift node.

```
mmgetstate -a
```

6. Ensure that the majority of Scale nodes are in the Active state. Then, force delete the desired GPFS admin interface from the Scale cluster.

Exercise caution when shutting down GPFS on quorum nodes or deleting quorum nodes from the GPFS cluster. If the number of remaining quorum nodes falls under the requirement for a quorum, then you are unable to perform file system operations.

```
mmdelnode -N REPLACE WITH FAILED GPFS ADMIN NODE --force
```

7. Validate that the bad GPFS admin node is deleted from the Scale cluster.

```
mmgetstate -a
```

8. Exit from the Scale core pod.

exit

Add new OpenShift node for use in existing IBM Storage Scale container native cluster

The previous node configurations of the failed node needs to be applied to the new OpenShift node. So that the IBM Storage Scale container native operator can successfully add it to the existing IBM Storage Scale container native cluster.

1. Ensure the quorum and manager designations are matching what the previous node had in place. Ensure that the GPFS cluster is not in minority of quorum. If the number of remaining quorum nodes falls under the requirement for a quorum, then you are unable to perform file system operations.

Alternatively, if a node is removed but no replacement node is added, ensure that the appropriate number of nodes are assigned to satisfy quorum.

- 2. If using CNI, ensure that the network configuration is valid according to CNI documentation. Ensure that the scale.spectrum.ibm.com/daemon-network annotation is present on the new OpenShift node. For more information, see Container network interface (CNI) configuration.
- 3. Ensure the node selector labels (required for the Scale core pods) from the Cluster CR are present on newly added OpenShift node.
- 4. Scale up the operator pods by setting the **replicas** in the deployment to 1.

```
oc scale deployment ibm-spectrum-scale-controller-manager -n ibm-spectrum-scale-operator --replicas=1
```

5. The new Scale core pod should be created and go to running in a short amount of time.

Validate IBM Storage Scale container native cluster after removal and replacement of OpenShift node

After the removal and replacement of the failed OpenShift node has completed, perform the validation steps. For more information, see <u>Validating installation</u>. Ensure the following:

- All pods are in running state. Make sure the CSI pod on the replaced node is running. This validates that filesystems are active and running.
- Validate that the IBM Storage Scale cluster has successfully added the node with the desired node designations.
- Validate that the nodes are active in the IBM Storage Scale cluster.

References

- IBM Storage Scale
- Red Hat OpenShift or Kubernetes

IBM Storage Scale

- Administration Guide
- For Linux on Z: Changing the kernel settings
- mmchconfig command
- mmnetverify command
- Accessing a remote GPFS file system
- Defining the cluster topology for the installation toolkit
- Node quorum
- <u>Installing IBM Storage Scale Container Storage Interface driver by using CLIs</u>

Red Hat OpenShift or Kubernetes

- <u>Display which Pods have the PVC in use</u>
- Red Hat OpenShift Container Platform 4 now defaults to CRI-O as underlying container engine
- How to configure kdump in Red Hat CoreOS?
- Installing and configuring OpenShift Container Platform clusters
- Installation configuration
- Configuring an HTPasswd identity provider